2.0 DEVICE PINOUTS

The pin diagrams for the PIC16(L)F72X family are shown in Figure 2-1 through Figure 2-6. The pins that are required for programming are listed in Table 1-1 and shown in bold lettering in the pin diagrams.

FIGURE 2-1: PDIP/SOIC/SSOP DIAGRAM FOR PIC16F722/722A/723/723A/726 AND PIC16LF722/722A/723/723A/726

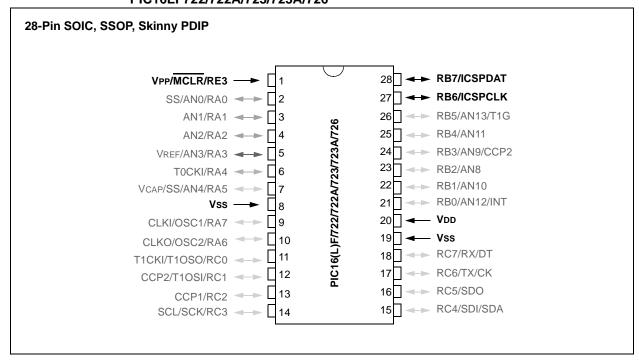


FIGURE 2-2: QFN PACKAGE DIAGRAM FOR PIC16F722/722A/723/723A/726 AND PIC16LF722/722A/723/723A/726

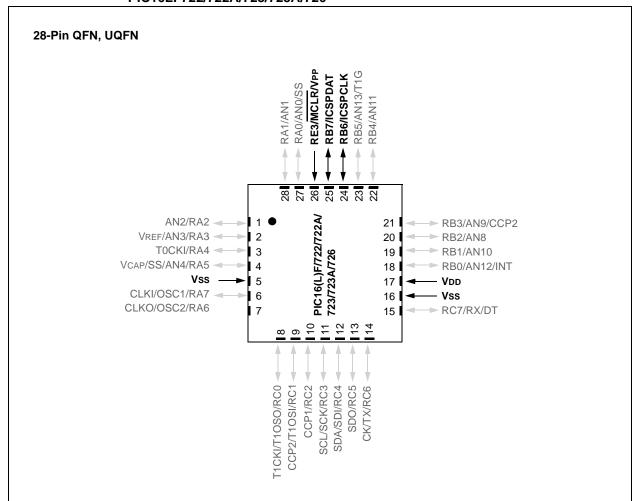


FIGURE 2-3: PDIP PACKAGE DIAGRAM FOR PIC16F724/727 AND PIC16LF724/727

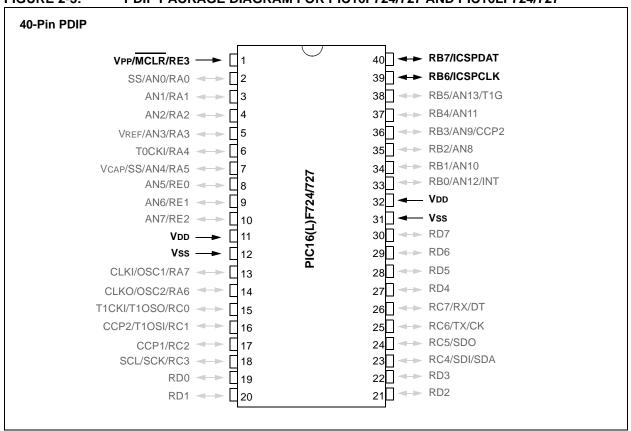
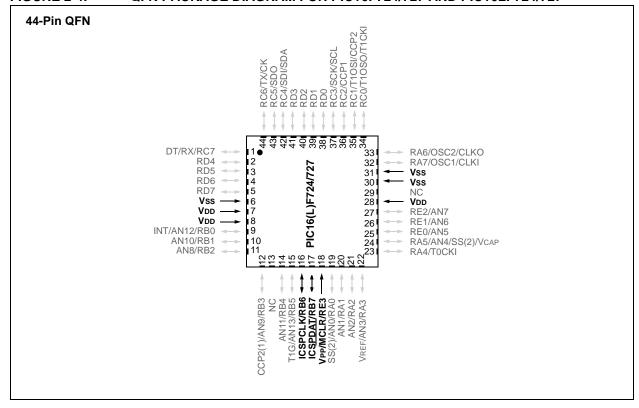


FIGURE 2-4: QFN PACKAGE DIAGRAM FOR PIC16F724/727 AND PIC16LF724/727




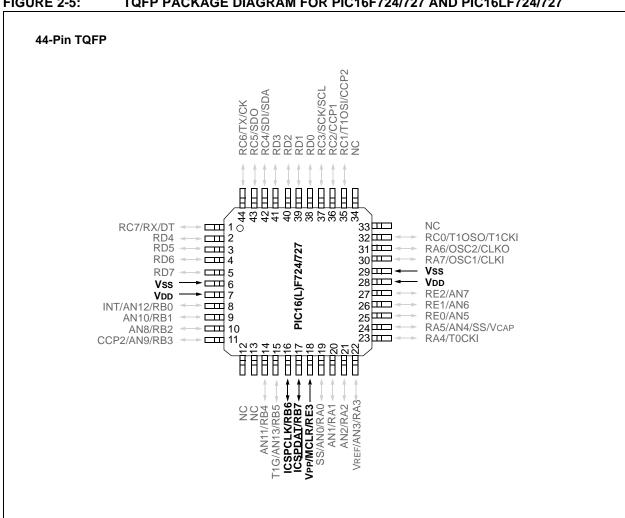


FIGURE 2-5: TQFP PACKAGE DIAGRAM FOR PIC16F724/727 AND PIC16LF724/727


FIGURE 2-6: 40-PIN UQFN PACKAGE DIAGRAM FOR PIC16F724/727

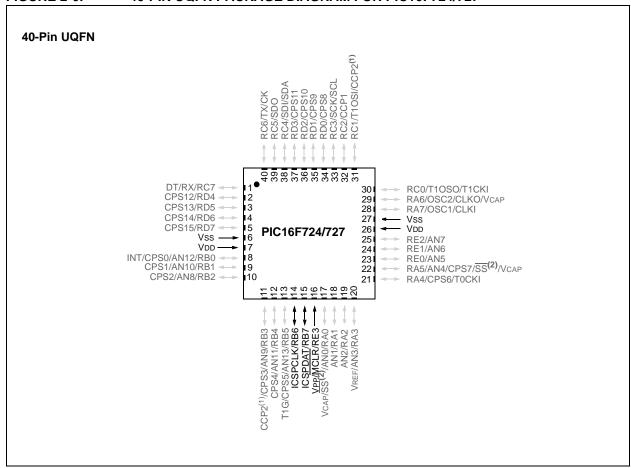



3.0 MEMORY MAP

The memory for the PIC16(L)F72X devices is broken into two sections: program memory and configuration memory. Only the size of the program memory changes between devices; the configuration memory remains the same.

FIGURE 3-1: PIC16(L)F722/722A PROGRAM MEMORY MAPPING

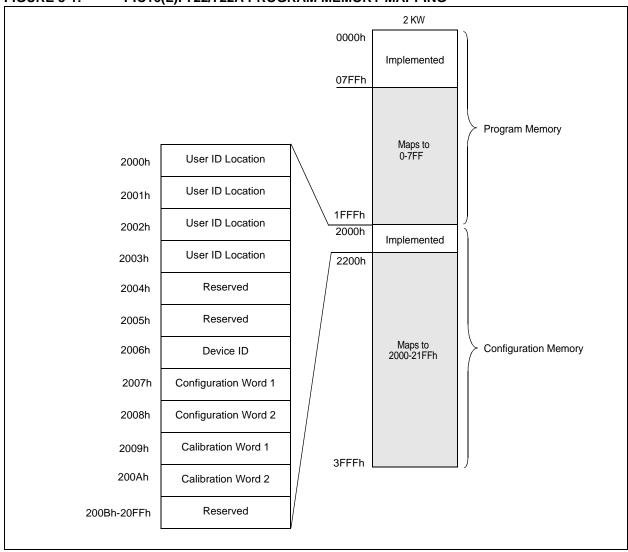

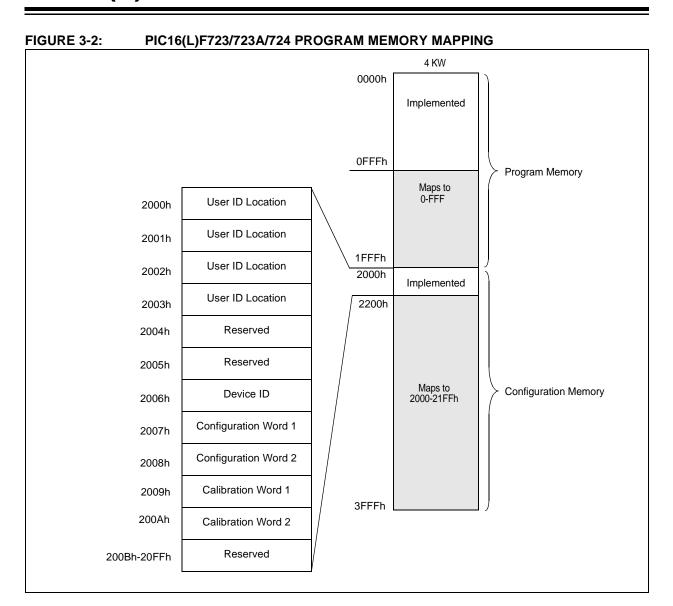

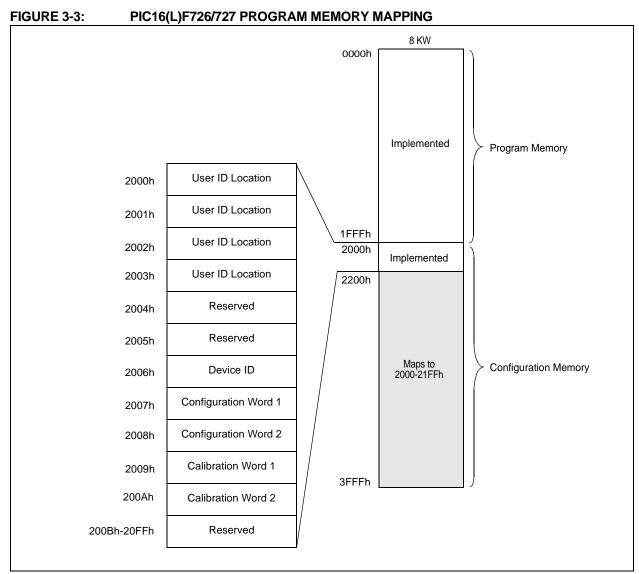

User ID Location

A user may store identification information (user ID) in four designated locations. The user ID locations are mapped to 2000h-2003h. Each location is 14 bits in length. Code protection has no effect on these memory locations. Each location may be read with code protection enabled or disabled.

Note:

3.1

MPLAB[®] IDE only displays the 7 Least Significant bits (LSb) of each user ID location, the upper bits are not read. It is recommended that only the 7 LSbs be used if MPLAB IDE is the primary tool used to read these addresses.

3.2 Device ID

The device ID word for the PIC16F72X and the PIC16LF72X devices is located at 2006h. This location cannot be erased or modified.

TABLE 3-1: DEVICE ID VALUES

DEVICE	DEVICE ID	VALUES
DEVICE	DEV	REV
PIC16F722	01 1000 100	x xxxx
PIC16F722A	01 1011 001	x xxxx
PIC16F723	01 1000 011	x xxxx
PIC16F723A	01 1011 000	x xxxx
PIC16F724	01 1000 010	x xxxx
PIC16F726	01 1000 001	x xxxx
PIC16F727	01 1000 000	x xxxx
PIC16LF722	01 1001 100	x xxxx
PIC16LF722A	01 1011 011	x xxxx
PIC16LF723	01 1001 011	x xxxx
PIC16LF723A	01 1011 010	x xxxx
PIC16LF724	01 1001 010	x xxxx
PIC16LF726	01 1001 001	x xxxx
PIC16LF727	01 1001 000	x xxxx

3.3 Configuration Words

The PIC16(L)F72X devices have two Configuration Words, Configuration Word 1 (2007h) and Configuration Word 2 (2008h). The individual bits within these Configuration Words are used to enable or disable device functions such as the Brown-out Reset, code protection and Power-up Timer.

3.4 Calibration Words

For the PIC16(L)F72X devices, the 16 MHz internal oscillator (INTOSC), and the Brown-out Reset (BOR), are factory calibrated and stored in Calibration Words 1 and 2 (2009h and 200Ah).

The Calibration Words do not participate in erase operations. The device can be erased without affecting the Calibration Words.

REGISTER 3-1: CONFIGURATION WORD 1

R/P-1	R/P-1	U-1 ⁽²⁾	R/P-1	R/P-1 R/P-1		U-1 ⁽²⁾
DEBUG ⁽¹⁾	PLLEN	_	BORV	BOREN1	BOREN0	_
bit 13						

| R/P-1 |
|-------|-------|-------|-------|-------|-------|-------|
| CP | MCLRE | PWRTE | WDTE | FOSC2 | FOSC1 | FOSC0 |
| | | | | | | bit 0 |

Legend:	P = Programmable	x = Bit is unknown
R = Readable bit	W = Writable bit	U = Unimplemented bit, read as '1'
-n = Default value	'1' = Bit is written to '1'	'0' = Bit is written to '0'

bit 13 **DEBUG**: Debugger mode bit⁽¹⁾

1 = Background debugger is disabled0 = Background debugger is enabled

bit 12 PLLEN: INTOSC PLL Enable bit

1 = INTOSC frequency is 16 MHz 0 = INTOSC frequency is 500 kHz

bit 11 **Unimplemented:** Read as '1'

bit 10 BORV: Brown-out Reset Voltage Selection bit

1 =Brown-out Reset Voltage (VBOR) set to 1.9V 0 =Brown-out Reset Voltage (VBOR) set to 2.5V

bit 9-8 BOREN<1:0>: Brown-out Reset Enable bits

0x = Brown-out Reset disabled

10 = Brown-out Reset enabled during operation and disabled in Sleep

11 = Brown-out Reset enabled

bit 7 **Unimplemented:** Read as '1'

For PIC16F/LF726/727:

0 = 0000h to 1FFFh code protection on

1 = Code protection off For PIC16F/LF723/723A/724:

0 = 0000h to 0FFFh code protection on

1 = Code protection off For PIC16F/LF722/722A:

0 = 0000h to 07FFh code protection on

1 = Code protection off

bit 5 MCLRE: RE3/MCLR/VPP Pin Function Select bit

 $1 = RE3/\overline{MCLR}/VPP$ pin function is \overline{MCLR} ; Weak pull-up enabled.

0 = RE3/MCLR/VPP pin function is digital input; MCLR internally disabled; Weak pull-up disabled.

bit 4 **PWRTE:** Power-up Timer Enable bit

1 = PWRT disabled0 = PWRT enabled

bit 3 WDTE: Watchdog Timer Enable bit

1 = WDT enabled0 = WDT disabled

Note 1: \overline{DEBUG} bit is ignored when code-protect is enabled ($\overline{CP} = 0$).

2: MPLAB® IDE masks unimplemented Configuration bits to '0'.

REGISTER 3-1: CONFIGURATION WORD 1 (CONTINUED)

bit 2-0 FOSC<2:0>: Oscillator Selection bits

111 = RC with CLKOUT oscillator: CLKO function on RA6/OSC2/CLKO pin, RC on RA7/OSC1/CLKI

110 = RC NO CLKOUT oscillator: I/O function on RA6/OSC2/CLKO pin, RC on RA7/OSC1/CLKI

101 = INTOSC with CLKOUT oscillator: CLKO function on RA6/OSC2/CLKO pin, I/O function on RA7/OSC1/CLKI

100 = INTOSC NO CLKOUT oscillator: I/O function on RA6/OSC2/CLKO pin, I/O function on RA7/OSC1/CLKI

011 = EC oscillator: I/O function on RA6/OSC2/CLKO pin, CLKI on RA7/OSC1/CLKI

010 = HS oscillator: High-speed crystal/resonator on RA6/OSC2/CLKO pin and RA7/OSC1/CLKI

001 = XT oscillator: Crystal/resonator on RA6/OSC2/CLKO pin and RA7/OSC1/CLKI

000 = LP oscillator: Low-power crystal on RA6/OSC2/CLKO pin and RA7/OSC1/CLKI

Note 1: $\overline{\text{DEBUG}}$ bit is ignored when code-protect is enabled ($\overline{\text{CP}} = 0$).

2: MPLAB® IDE masks unimplemented Configuration bits to '0'.

REGISTER 3-2: CONFIGURATION WORD 2

U-1 ⁽¹⁾	U-1 ⁽¹⁾	U-1 ⁽¹⁾	U-1 ⁽¹⁾ U-1 ⁽¹⁾		U-1 ⁽¹⁾ U-1 ⁽¹⁾	
_	_	_	_			_
bit 13						

U-1 ⁽¹⁾	R/P-1	R/P-1	U-1 ⁽¹⁾	U-1 ⁽¹⁾	U-1 ⁽¹⁾	U-1 ⁽¹⁾
_	VCAPEN1	VCAPEN0	_			_
						bit 0

Legend:	P = Programmable	x = Bit is unknown
R = Readable bit	W = Writable bit	U = Unimplemented bit, read as '1'
-n = Default value	'1' = Bit is written to '1'	'0' = Bit is written to '0'

bit 13-6 **Unimplemented:** Read as '1'

bit 5-4 VCAPEN<1:0>: Voltage Regulator Capacitor Enable bits

For PIC16LF72X:

These bits are ignored. All VCAP pin functions are disabled.

For PIC16F72X:

00 = VCAP functionality is enabled on RA0

01 = VCAP functionality is enabled on RA5 10 = VCAP functionality is enabled on RA6

11 = All VCAP pin functions are disabled

bit 3-0 **Unimplemented:** Read as '1'

Note 1: MPLAB® IDE masks unimplemented Configuration bits to '0'.

4.0 PROGRAM/VERIFY MODE

In Program/Verify mode, the program memory and the configuration memory can be accessed and programmed in serial fashion. ICSPDAT and ICSPCLK are used for the data and the clock, respectively. All commands and data words are transmitted LSb first. Data changes on the rising edge of the ICSPCLK and latched on the falling edge. In Program/Verify mode both the ISCPDAT and ICSPCLK are Schmitt Trigger inputs. The sequence that enters the device into Program/Verify mode places all other logic into the Reset state. Upon entering Program/Verify mode, all I/O's are automatically configured as high-impedance inputs and the Program Counter (PC) is cleared.

4.1 Program/Verify Mode Entry and Exit

There are 2 different methods of entering Program/ Verify mode:

- VPP First entry mode
- VDD First entry mode

4.1.1 VPP – FIRST ENTRY MODE

To enter Program/Verify mode via the VPP-first method the following sequence must be followed:

- Hold ICSPCLK and ICSPDAT low. All other pins should be unpowered.
- 2. Raise the voltage on \overline{MCLR} from 0V to VIHH.
- 3. Raise the voltage on VDD from 0V to the desired operating voltage.

The VPP-first entry prevents the device from executing code prior to entering Program/Verify mode (e.g., When the Configuration Word has \overline{MCLR} disabled (MCLRE = 0), the power-up time disabled (\overline{PWRTE} = 0), and the internal oscillator is selected (Fosc = 10x), VPP-first entry mode is strongly recommended for this reason. ICSPCLK or ICSPDAT is driven high by the user code. See the timing diagram in Figure 8-4.

4.1.2 VDD-FIRST ENTRY MODE

To enter Program/Verify mode via the VDD-first method the following sequence must be followed:

- 1. Hold ICSPCLK and ICSPDAT low.
- Raise the voltage on VDD from 0V to the desired operating voltage.
- Raise the voltage on MCLR from below VDD to VPP.

The VDD-first method is useful when programming the device when VDD is already applied, for it is not necessary to disconnect VDD to enter Program/Verify mode. See the timing diagram in Figure 8-5.

4.1.3 PROGRAM/VERIFY MODE EXIT

To exit Program/Verify mode take $\overline{\text{MCLR}}$ to VDD or lower.

4.2 Program/Verify Commands

The PIC16F72X and PIC16LF72X devices implement 10 programming commands, each six bits in length. The commands are summarized in Table 4-1.

Commands that have data associated with them are specified to have a minimum delay of TDLY between the command and the data. After this delay 16 clocks are required to either clock in or clock out the 14-bit data word. The first clock is for the Start bit and the last clock is for the Stop bit.

TABLE 4-1: COMMAND MAPPING FOR PIC16F72X

Command		Mapping						Data/Note
Command		Bina	ary (M	Sb I	LSb)		Hex	
Load Configuration	х	0	0	0	0	0	00h	0, data (14), 0
Load Data For Program Memory	х	0	0	0	1	0	02h	0, data (14), 0
Read Data From Program Memory	х	0	0	1	0	0	04h	0, data (14), 0
Increment Address	х	0	0	1	1	0	06h	
Reset Address	х	1	0	1	1	0	16h	
Begin Internally Timed Programming	х	0	1	0	0	0	08h	
Begin Externally Timed Programming	х	1	1	0	0	0	18h	
End Externally Timed Programming	х	0	1	0	1	0	0Ah	
Bulk Erase Program Memory	х	0	1	0	0	1	09h	Internally Timed
Row Erase Program Memory	х	1	0	0	0	1	11h	Internally Timed


4.2.1 LOAD CONFIGURATION

The Load Configuration command is used to access the configuration memory (user ID locations, Configuration Words, Calibration Words). The Load Configuration command sets the Program Counter (PC) to address 2000h and loads the data latches with one word of data.

After issuing the Load Configuration command, use the Increment Address command until the proper address to be programmed is reached. The address is then programmed by issuing either the Begin Internally Timed Programming or Begin Externally Timed Programming command.

After the configuration memory has been accessed by the Load Configuration command, the only way to get back to the program memory is to exit Program/Verify mode or issue the Reset Address command.


FIGURE 4-1: LOAD CONFIGURATION

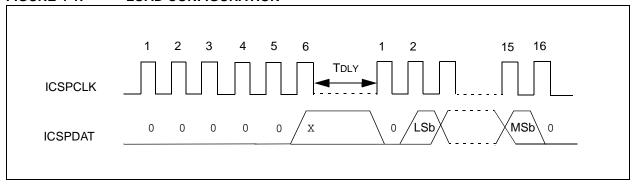

4.2.2 LOAD DATA FOR PROGRAM MEMORY

The Load Data for Program Memory command is used to load one 14-bit word into the data latches. The word in placed into program memory after the Begin Internally Timed Programming or Begin Externally Timed Programming command is issued.


FIGURE 4-2: LOAD DATA FOR PROGRAM MEMORY

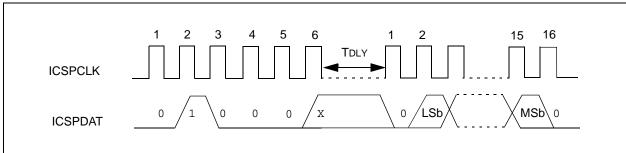

4.2.3 READ DATA FROM PROGRAM MEMORY

After receiving this command, the chip will transmit data bits out of the program memory (user or configuration) currently accessed, starting with the second rising edge of the clock input. The data pin will go into Output mode on the first falling clock edge, and it will revert to Input mode (high-impedance) after the 16th falling edge of the clock. If the program memory is code-protected (\overline{CP}) , the data will be read as zeros.


FIGURE 4-3: READ DATA FROM PROGRAM MEMORY

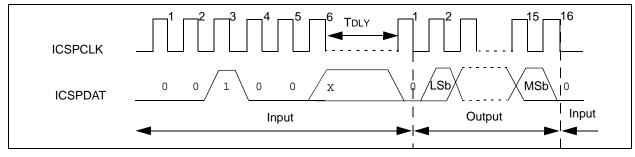

4.2.4 INCREMENT ADDRESS

The Program Counter (PC) is incremented when this command is received. It is not possible to decrement the PC. To reset this counter, the user must exit Program/Verify mode and re-enter it or use the Reset Address command.


FIGURE 4-4: INCREMENT ADDRESS

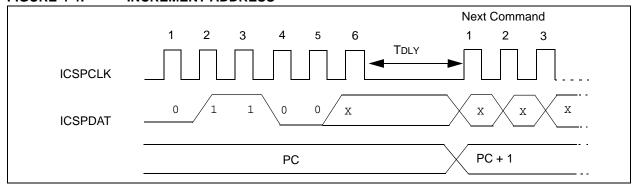

4.2.5 RESET ADDRESS

After receiving this command the Program Counter (PC) is set to 0000h. The PC will be reset independent of addressing the program memory or the configuration memory.

FIGURE 4-5: RESET ADDRESS

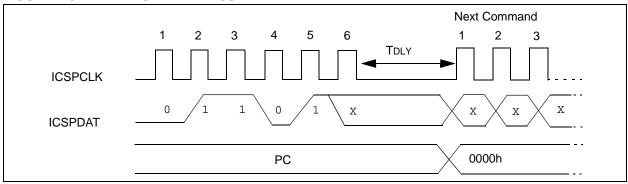


4.2.6 BEGIN INTERNALLY TIMED PROGRAMMING

A Load Configuration or Load Data for Program Memory command must be given before every Begin Programming command. Programming of the addressed memory will begin after this command is received. An internal timing mechanism executes the write. The user must allow for the program cycle time for the programming to complete. The address that is being programmed is not erased prior to being programmed.

The End Externally Timed Programming command is not needed when the Begin Internally Timed Programming is used to start the programming.

FIGURE 4-6: BEGIN INTERNALLY TIMED PROGRAMMING

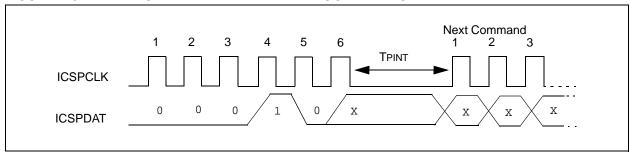


4.2.7 BEGIN EXTERNALLY TIMED PROGRAMMING

A Load Configuration, Load Data for Program Memory or Load Data for Data Memory command must be given before every Begin Programming command. Programming of the addressed memory will begin after this command is received. To complete the programming of the address, the End Externally Timed Programming command must be sent in the specified time window defined by TPEXT.

The Begin Externally Timed Programming command cannot be used for programming the Configuration Words.

FIGURE 4-7: BEGIN EXTERNALLY TIMED PROGRAMMING

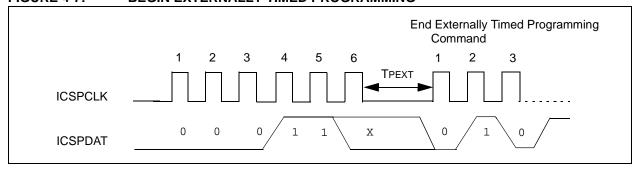


4.2.8 END EXTERNALLY TIMED PROGRAMMING

This command is required after a Begin Externally Timed Programming command is given. This command must be sent within the time window specified by TPEXT after the Begin Externally Timed Programming command is sent.

After sending the End Externally Timed Programming command, an additional delay (TDIS) is required before sending the next command. This delay is longer than the delay ordinarily required between other commands.

FIGURE 4-8: END EXTERNALLY TIMED PROGRAMMING

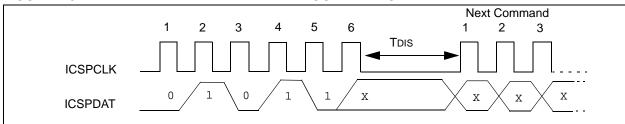

4.2.9 BULK ERASE PROGRAM MEMORY

The Bulk Erase Program Memory command performs two different functions, dependant on the current state of the Program Counter (PC).

PC 0000h-1FFFh:

Program Memory is erased Configuration words are erased


PC 2000h-2008h:

Program Memory is erased Configuration Words are erased User ID Locations are erased After receiving the Bulk Erase Program Memory command, the erase will not complete until the time interval, TERAB, has expired.

Note 1: The code protection Configuration bit (CP) has no effect on the Bulk Erase Program Memory command.

Note 2: A Bulk Erase Program Memory command should not be issued when the PC is greater than 2008h.

FIGURE 4-9: BULK ERASE PROGRAM MEMORY

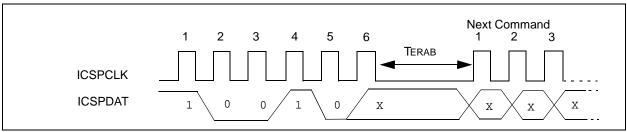


4.2.10 ROW ERASE PROGRAM MEMORY

A row of program memory consists of 32 consecutive 14-bit words. A row is addressed by the Program Counter PC<13:5>. The Row Erase Program Memory command can be used to erase an individual row. If the program memory is code-protected the Row Erase Program Memory command will be ignored. When the PC is 2000h-2008h the Row Erase Program Memory command will only erase the user ID locations, independent of the setting of the $\overline{\text{CP}}$ Configuration bit.

After receiving the Row Erase Program Memory command, the erase will not complete until the time interval, TERAR, has expired.

FIGURE 4-10: ROW ERASE PROGRAM MEMORY

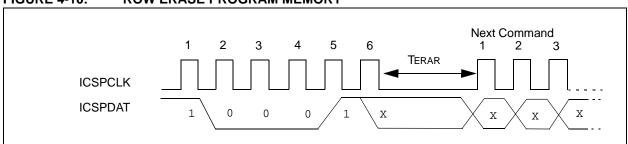


5.0 PROGRAMMING ALGORITHMS


The PIC16(L)F72X devices have the capability of storing eight 14-bit words in its data latches. The data latches are internal to the PIC16(L)F72X devices and are only used for programming. The data latches allow the user to program up to eight program words with a single Begin Externally Timed Programming or Begin Internally Timed Programming command. The Load Program Data or the Load Configuration Word command is used to load a single data latch. The data latch will hold the data until Begin Externally Timed Programming or Begin Internally Timed Programming command is given.


The data latches are aligned with the 3 LSb of the PC. The address of the PC, at the time the Begin Externally Timed Programming or Begin Internally Timed Programming command is given, will determine which location(s) in memory are written. Writes cannot cross a physical eight-word boundary. For example, attempting to write from PC 0002h-0009h will result in data being written to 0008h-000Fh.


If more than 8 data latches are written without a Begin Externally Timed Programming or Begin Internally Timed Programming command the data in the data latches will be overwritten. The following diagrams show the recommended flowcharts for programming.

FIGURE 5-1: ONE-WORD PROGRAMMING FLOWCHART

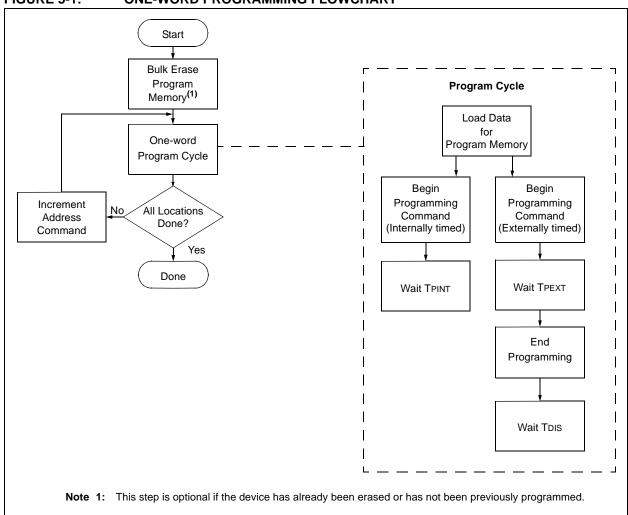

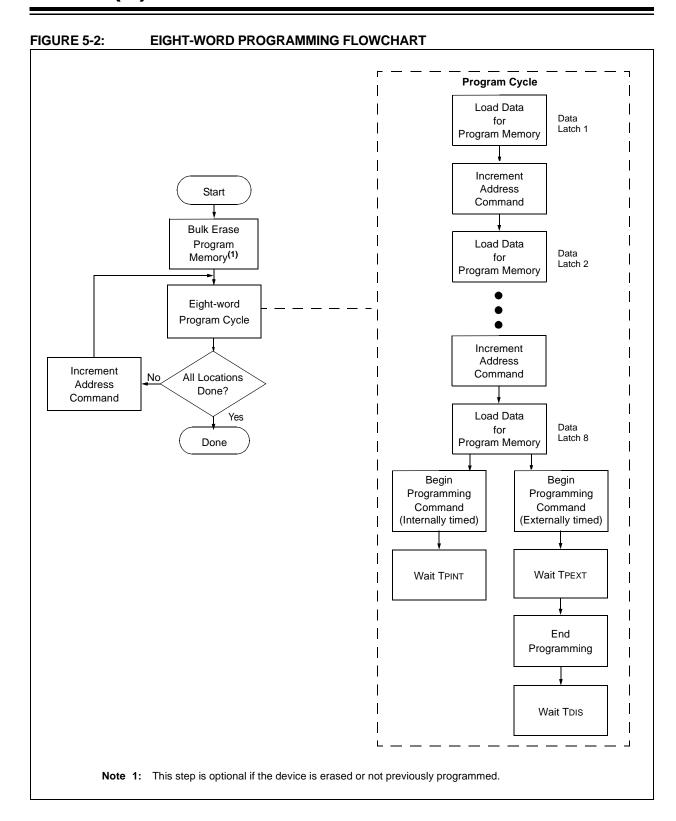

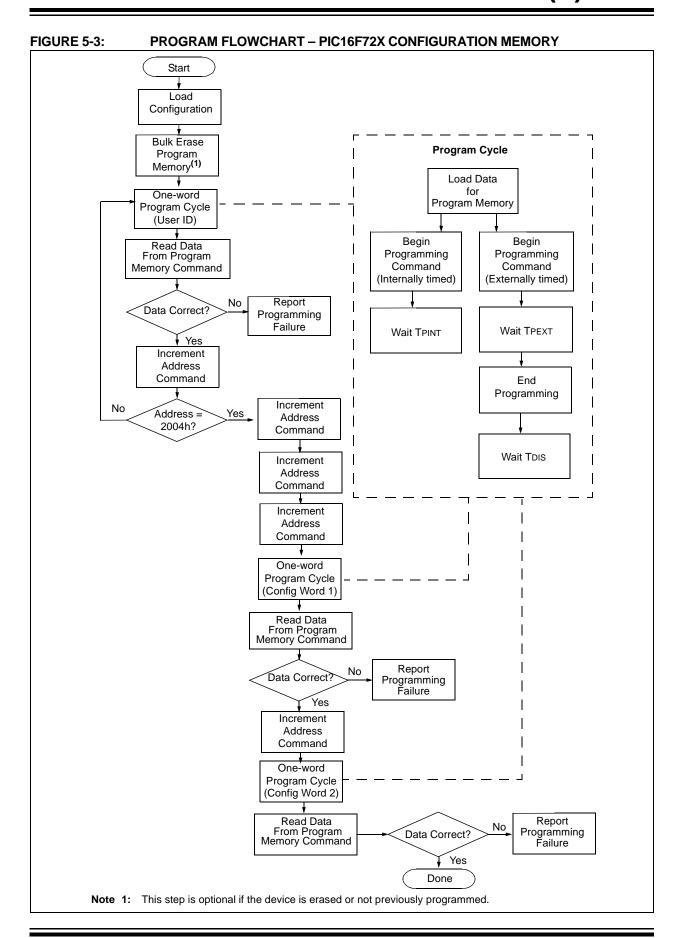

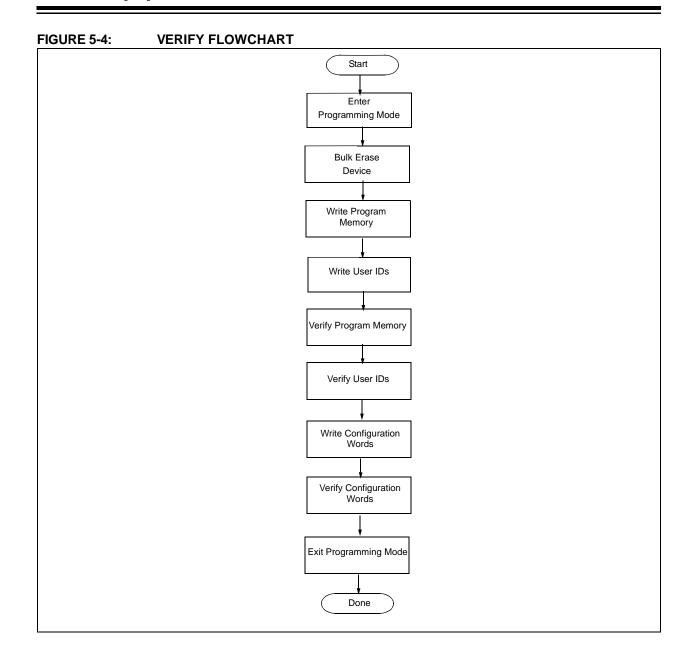

6.0 CODE PROTECTION

Code protection is controlled using the \overline{CP} bit in Configuration Word 1. When code protection is enabled, all program memory locations (0000h-1FFFh) read as all '0'. Further programming is disabled for the program memory (0000h-1FFFh).

The user ID locations and Configuration Words can be programmed and read out regardless of the code protection settings.

6.1 Enabling Code Protection

Code protection is enabled by programming the $\overline{\text{CP}}$ bit in Configuration Word 1 to '0'.

6.2 Disabling Code Protection

The only way to disable code protection is to use the Bulk Erase Program Memory command.

7.0 HEX FILE USAGE

In the hex file there are two bytes per program word stored in the Intel[®] INH8M hex format. Data is stored LSB first, MSB second. Because there are two bytes per word, the addresses in the hex file are 2x the address in program memory. (Example: The Configuration Word 1 is stored at 2007h on the PIC16(L)F72X. In the hex file this will be at location 400Eh-400Fh).

7.1 Configuration Word

To allow portability of code, it is strongly recommended that the programmer is able to read the Configuration Words and user ID locations from the hex file. If the Configuration Words information was not present in the hex file, a simple warning message may be issued. Similarly, while saving a hex file, Configuration Words and user ID information should be included.

7.2 Device ID and Revision

If a device ID is present in the hex file at 400Ch-400Dh (2006h on the part), the programmer should verify the device ID/revision against the value read from the part. On a mismatch condition, the programmer should generate a warning message.

7.3 Checksum Computation

The checksum is calculated by $\underline{\text{two}}$ different methods, dependent on the setting of the $\overline{\text{CP}}$ Configuration bit.

7.3.1 CODE PROTECTION DISABLED

With the code protection disabled, the checksum is computed by reading the contents of the PIC16(L)F72X program memory locations and adding up the program memory data, starting at address 0000h, up to the maximum user addressable location (e.g., 1FFFH for the PIC16F726). Any Carry bit exceeding 16 bits are neglected. Additionally, the relevant bits of the Configuration Words are added to the checksum. All unused Configuration bits are masked to '0'.

EXAMPLE 7-1: CHECKSUM COMPUTED WITH CODE PROTECTION DISABLED, PIC16F726, BLANK DEVICE

PIC16F726	Sum of Memory addresses 0000h-1FFFh		E000h
	Configuration Word	1	2AC3h
	Configuration Word	1 mask	377Fh
	Configuration Word	2	3FEFh
	Configuration Word	2 mask	0030h
	Checksum	= E000h + (2AC3h and 377F	h) + (3FEFh and 0030h)
	= E000h + 2243h + 0020h		
		= 0263h	

7.3.2 CODE PROTECTION ENABLED

With the code protection enabled, the checksum is computed in the following manner. The Configuration Words are summed (all unused Configuration bits are masked to '0') with the Least Significant nibble of the user ID's.

EXAMPLE 7-2: CHECKSUM COMPUTED WITH CODE PROTECTION ENABLED, PIC16F726, BLANK DEVICE

PIC16F726	Configuration V	Vord 1	2A83h	
	Configuration V	Vord 1 mask	377Fh	
	Configuration V	Vord 2	3FEFh	
	Configuration V	Vord 2 mask	0030h	
	User ID (2000h)	0123h	
	User ID (2001h)	4567h	
	User ID (2002h)	89ABh	
	User ID (2003h)	CDEFh	
	Sum of User ID	s = (0003h and 000Fh) << 12 + (0007	7h and 000Fh) << 8 +	
		(000Bh and 000Fh) << 4 + (000F	h and 000Fh)	
		= 3000h + 0700h +00B0h + 000Fh		
		= 37BFh		
	Checksum	= (2A83h and 377Fh) + (3FEFh and	nd 0030h) + Sum of User IDs	
	= 2203h + 0020h + 37BFh			
		= 59E2h		

8.0 ELECTRICAL SPECIFICATIONS

Refer to the device specific data sheet for absolute maximum ratings.

TABLE 8-1: AC/DC CHARACTERISTICS TIMING REQUIREMENTS FOR PROGRAM/VERIFY MODE

AC/DC	CHARACTERISTICS	Standard Operating			ns (unle	ess otherwise stated) +40°C
Sym.	Characteristics	Min.	Type.	Max.	Units	Conditions/Comments
	Suppl	y Voltages	and curre	ents		
	VDD					
Vdd	PIC16F72X (excluding Bulk Erase)	1.8	_	5.5	V	
	PIC16LF72X (excluding Bulk Erase)	1.8	_	3.6	V	
	PIC16(L)F72X Bulk Erase	2.7		_	V	
Iddi	Current on VDD, Idle			1.0	mA	
IDDA	Current on VDD, program cycle or Bulk Erase in progress			5.0	mA	
	VPP					
VIHH	High voltage on MCLR/VPP for Program/Verify mode entry	8.0	_	9.0	V	
TVHHR	MCLR rise time (VDD to VIHH) for Program/Verify mode entry	_	_	1.0	μS	
IPP	Current on MCLR/VPP			5.0	mΑ	
	I/O pins	•	•			
VIH	(ICSPCLK, ICSPDAT) input high level	0.8 VDD	_	_	V	
VIL	(ICSPCLK, ICSPDAT) input low level	_	_	0.2 VDD	V	
Vон	ICSPDAT output high level	VDD-0.7 VDD-0.7 VDD-0.7		VDD	V	IOH = 3.5 mA, VDD = 5V IOH = 3 mA, VDD = 3.3V IOH = 2 mA, VDD = 1.8V
VoL	ICSPDAT output low level	Vss		Vss+0.6 Vss+0.6 Vss+0.6	V	IOH = 8 mA, VDD = 5V IOH = 6 mA, VDD = 3.3V IOH = 3 mA, VDD = 1.8V
	Program	ming mode	e entry ar	nd exit		· · · · · · · · · · · · · · · · · · ·
TENTS	Programing mode entry setup time: ICSPCLK, ICSPDAT setup time before VDD or MCLR↑	100	_	_	ns	
TENTH	Programing mode entry hold time: ICSPCLK, ICSPDAT hold time after VDD or MCLR↑	250			μS	
		rial Progra	am/Verify			
TCKL	Clock Low Pulse Width	100		_	ns	
ТСКН	Clock High Pulse Width	100	_		ns	
TDS	Data in setup time before clock↓	100	_	_	ns	
TDH	Data in hold time after clock↓	100	_	_	ns	
Tco	Clock↑ to data out valid (during a Read Data command)	0	_	80	ns	
TLZD	Clock↓ to data low-impedance (during a Read Data command)	0	_	80	ns	
THZD	Clock↓ to data high-impedance (during a Read Data command)	0	-	80	ns	

TABLE 8-1: AC/DC CHARACTERISTICS TIMING REQUIREMENTS FOR PROGRAM/VERIFY MODE (CONTINUED)

AC/DC CHARACTERISTICS		Standard Operating Conditions (unless otherwise stated) Operating Temperature $+10^{\circ}\text{C} \le \text{Ta} \le +40^{\circ}\text{C}$					
Sym.	Characteristics	Min.	Type.	Max.	Units	Conditions/Comments	
TDLY	Data input not driven to next clock input (delay required between command/data or command/ command)	1.0	_		μS		
TERAB	Bulk Erase cycle time	_	_	5	ms		
TERAR	Row Erase cycle time	_	_	2.5	ms		
TPINT	Internally timed programming operation time	_	_	2.5 5	ms ms	Program memory Configuration fuses	
Трехт	Externally timed programming pulse	1.0	_	2.1	ms	10°C ≤ TA ≤ +40°C Program memory	
TDIS	Time delay from program to compare (HV discharge time)	100	_	_	μS		
TEXIT	Time delay when exiting Program/Verify mode	1	_	_	μS		

8.1 AC Timing Diagrams

FIGURE 8-2: PROGRAMMING MODE ENTRY – VDD FIRST

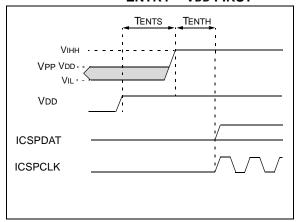


FIGURE 8-3: PROGRAMMING MODE ENTRY – VPP FIRST

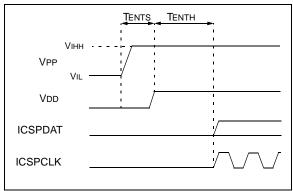


FIGURE 8-4: PROGRAMMING MODE EXIT – VPP LAST

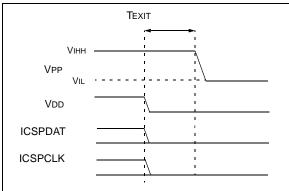


FIGURE 8-5: PROGRAMMING MODE EXIT – VDD LAST



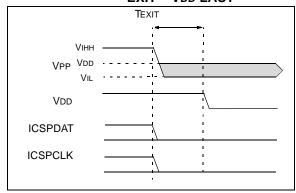


FIGURE 8-6: CLOCK AND DATA TIMING

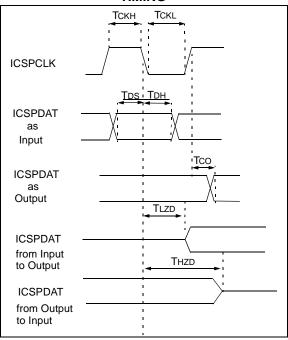

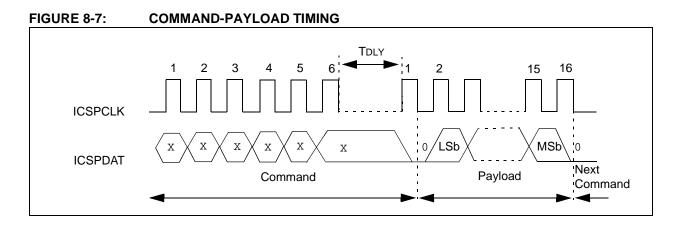

APPENDIX A: REVISION HISTORY

Revision A (11/2007)

Original release of this document.

Revision B (02/2009)

Updated minimum VDD for Bulk Erase in Table 8-1. Various minor edits.

Clarified time of transition from input to output in Figure 4-3

Corrected Reserved area range in Figures 3-1, 3-2, and 3-3.

Corrected low-voltage range for Programming modes shown in Figures 8-3 and 8-5.

Revision C (02/2010)

Added PIC16F722A, PIC16F723A, PIC16LF722A and PIC16LF723A devices to the Programming Specification; Other minor edits.

Revision D (03/2011)

Updated spec. to new format; Updated Figure 2-2 to add UQFN; Added Figure 2-6; Added Note 2 to Register 3-1, and Note 1 to Register 3-2; Revised Examples 7-1 and 7-2.

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, dsPIC, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, PIC³² logo, rfPIC and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

FilterLab, Hampshire, HI-TECH C, Linear Active Thermistor, MXDEV, MXLAB, SEEVAL and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, CodeGuard, dsPICDEM, dsPICDEM,net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, HI-TIDE, In-Circuit Serial Programming, ICSP, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, mTouch, Omniscient Code Generation, PICC, PICC-18, PICDEM, PICDEM.net, PICkit, PICtail, REAL ICE, rfLAB, Select Mode, Total Endurance, TSHARC, UniWinDriver, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2011, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

Microchip received ISO/TS-16949:2002 certification for its worldwide

📢 Printed on recycled paper.

ISBN: 978-1-61341-083-7

headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

QUALITY MANAGEMENT SYSTEM CERTIFIED BY DNV == ISO/TS 16949:2002 ===



Worldwide Sales and Service

AMERICAS

Corporate Office 2355 West Chandler Blvd.

Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277

Technical Support:

http://www.microchip.com/

support

Web Address: www.microchip.com

Atlanta

Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455

Boston

Westborough, MA Tel: 774-760-0087

Fax: 774-760-0088

Chicago Itasca, IL

Tel: 630-285-0071 Fax: 630-285-0075

Cleveland

Independence, OH Tel: 216-447-0464 Fax: 216-447-0643

Dallas

Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

Detroit

Farmington Hills, MI Tel: 248-538-2250 Fax: 248-538-2260

Indianapolis

Noblesville, IN Tel: 317-773-8323 Fax: 317-773-5453

Los Angeles

Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608

Santa Clara

Santa Clara, CA Tel: 408-961-6444 Fax: 408-961-6445

Toronto

Mississauga, Ontario,

Canada

Tel: 905-673-0699 Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office

Suites 3707-14, 37th Floor Tower 6, The Gateway Harbour City, Kowloon

Hong Kong Tel: 852-2401-1200

Fax: 852-2401-3431

Australia - Sydney Tel: 61-2-9868-6733 Fax: 61-2-9868-6755

China - Beijing

Tel: 86-10-8528-2100 Fax: 86-10-8528-2104

China - Chengdu

Tel: 86-28-8665-5511 Fax: 86-28-8665-7889

China - Chongqing

Tel: 86-23-8980-9588 Fax: 86-23-8980-9500

China - Hong Kong SAR

Tel: 852-2401-1200 Fax: 852-2401-3431

China - Nanjing

Tel: 86-25-8473-2460 Fax: 86-25-8473-2470

China - Qingdao

Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

China - Shanghai

Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8203-2660 Fax: 86-755-8203-1760

China - Wuhan

Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

China - Xian

Tel: 86-29-8833-7252 Fax: 86-29-8833-7256

China - Xiamen

Tel: 86-592-2388138 Fax: 86-592-2388130

China - Zhuhai

Tel: 86-756-3210040 Fax: 86-756-3210049

ASIA/PACIFIC

India - Bangalore

Tel: 91-80-3090-4444 Fax: 91-80-3090-4123

India - New Delhi

Tel: 91-11-4160-8631 Fax: 91-11-4160-8632

India - Pune

Tel: 91-20-2566-1512 Fax: 91-20-2566-1513

Japan - Yokohama

Tel: 81-45-471- 6166 Fax: 81-45-471-6122

Korea - Daegu

Tel: 82-53-744-4301 Fax: 82-53-744-4302

Korea - Seoul

Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

Malaysia - Kuala Lumpur

Tel: 60-3-6201-9857 Fax: 60-3-6201-9859

Malaysia - Penang

Tel: 60-4-227-8870 Fax: 60-4-227-4068

Philippines - Manila

Tel: 63-2-634-9065 Fax: 63-2-634-9069

Singapore

Tel: 65-6334-8870 Fax: 65-6334-8850

Taiwan - Hsin Chu

Tel: 886-3-6578-300 Fax: 886-3-6578-370

Taiwan - Kaohsiung

Tel: 886-7-213-7830 Fax: 886-7-330-9305

Taiwan - Taipei

Tel: 886-2-2500-6610 Fax: 886-2-2508-0102

Thailand - Bangkok Tel: 66-2-694-1351

Fax: 66-2-694-1350

EUROPE

Austria - Wels

Tel: 43-7242-2244-39 Fax: 43-7242-2244-393 Denmark - Copenhagen

Tel: 45-4450-2828 Fax: 45-4485-2829

France - Paris

Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany - Munich

Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Italy - Milan

Tel: 39-0331-742611 Fax: 39-0331-466781

Netherlands - Drunen

Tel: 31-416-690399 Fax: 31-416-690340

Spain - Madrid

Tel: 34-91-708-08-90 Fax: 34-91-708-08-91 **UK - Wokingham**

Tel: 44-118-921-5869 Fax: 44-118-921-5820

02/18/11