



WIRING CHANGE AT REGULATOR

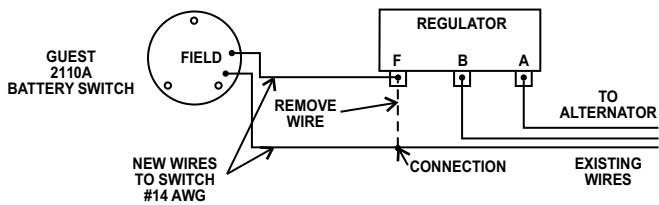

OR WIRING CHANGE AT ALTERNATOR

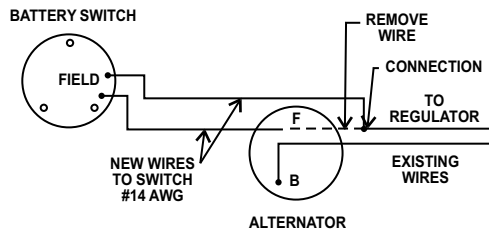


Alternators with INTERNAL REGULATOR:


The field circuit wire on alternators with internal regulators is located within the alternator housing and it is impractical to use the field disconnect feature. Protection of the alternator diodes can be achieved by installing a Guest® Isolator #2401A (for 70 ampere alternators) or other appropriate model.

See below for various wiring diagram for alternators with internal regulator:


1-ALTERNATOR 2-BATTERIES 1-SWITCH

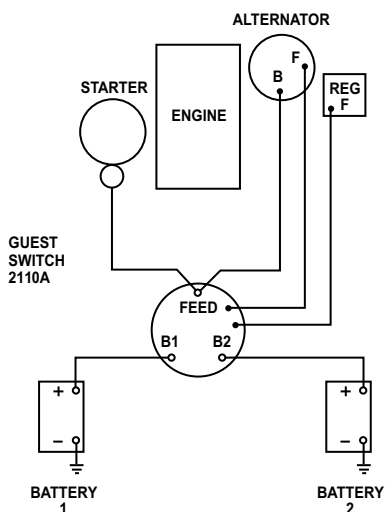

1-ALTERNATOR 3-BATTERIES 2-SWITCHES

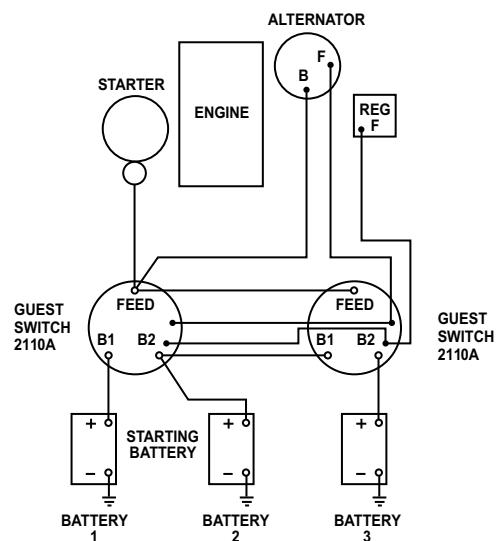

2-ALTERNATORS 2-BATTERIES 2-SWITCHES

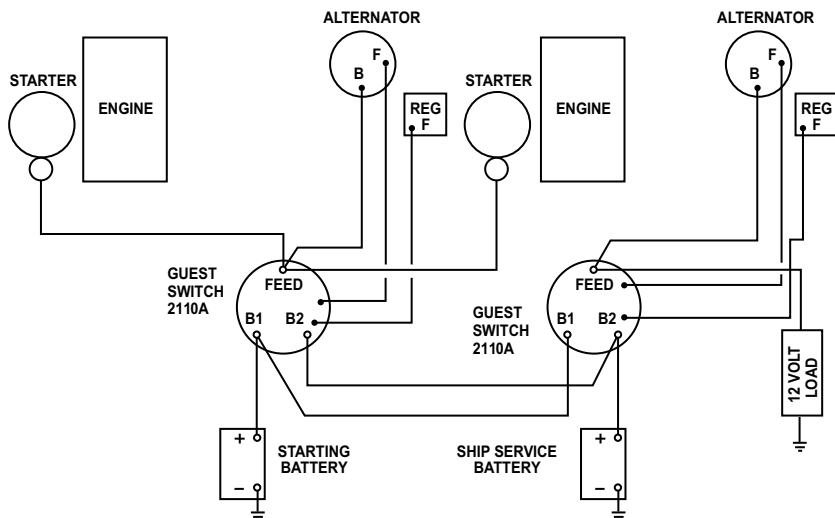

Marinco

2655 Napa Valley Corporate Drive
Napa, CA 94558
Tel: (707) 226-9600
Fax: (707) 226-9670
website: www.marinco.com
08/02 201001