




SPECIFICATIONS

| Contact Resistance | 50 milliohms max (before and after rated life) | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|---|---------|--|---------|------|--|--------|--------|------------------|---------|-------|-------------------|----|--------|--------|----------------|--------|---------|----------------|---------|-------|-------------------|-------|--------|-----------------|--|--|
| Contact Ratings | <table border="1"> <thead> <tr> <th>VDE</th> <th>Cycles</th> <th>Voltage</th> <th>Amps</th> </tr> </thead> <tbody> <tr> <td rowspan="2"></td> <td>20,000</td> <td>48 VDC</td> <td>0.5A (Resistive)</td> </tr> <tr> <td>100,000</td> <td>5 VDC</td> <td>0.01A (Resistive)</td> </tr> <tr> <td rowspan="4">UL</td> <td>30,000</td> <td>48 VDC</td> <td>1A (Resistive)</td> </tr> <tr> <td>30,000</td> <td>120 VAC</td> <td>1A (Resistive)</td> </tr> <tr> <td>100,000</td> <td>5 VDC</td> <td>0.02A (Resistive)</td> </tr> <tr> <td>6,000</td> <td>24 VAC</td> <td>1A (pilot duty)</td> </tr> </tbody> </table> | VDE | Cycles | Voltage | Amps | | 20,000 | 48 VDC | 0.5A (Resistive) | 100,000 | 5 VDC | 0.01A (Resistive) | UL | 30,000 | 48 VDC | 1A (Resistive) | 30,000 | 120 VAC | 1A (Resistive) | 100,000 | 5 VDC | 0.02A (Resistive) | 6,000 | 24 VAC | 1A (pilot duty) | | |
| VDE | Cycles | Voltage | Amps | | | | | | | | | | | | | | | | | | | | | | | | |
| | 20,000 | 48 VDC | 0.5A (Resistive) | | | | | | | | | | | | | | | | | | | | | | | | |
| | 100,000 | 5 VDC | 0.01A (Resistive) | | | | | | | | | | | | | | | | | | | | | | | | |
| UL | 30,000 | 48 VDC | 1A (Resistive) | | | | | | | | | | | | | | | | | | | | | | | | |
| | 30,000 | 120 VAC | 1A (Resistive) | | | | | | | | | | | | | | | | | | | | | | | | |
| | 100,000 | 5 VDC | 0.02A (Resistive) | | | | | | | | | | | | | | | | | | | | | | | | |
| | 6,000 | 24 VAC | 1A (pilot duty) | | | | | | | | | | | | | | | | | | | | | | | | |
| Contact Operations | Either close on rise (make) or open on rise (break) | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Operating Temperature | 40°C to 130°C (104°F to 266°F) | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Temperature Tolerance | Standard of ±5°C (±9°F) with nominal operating temperature settings in 5°C increments | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Short Term / Long Term Exposure Limit | Short = 260°C (500°F), 10 second duration | | Long = -55°C to 160°C (-67°F to 320°F) | | | | | | | | | | | | | | | | | | | | | | | | |
| Dielectric Strength | Nickel-plated copper bracket has 1480 VAC 60Hz, 1 second duration terminals to case. Plastic bracket has 2000 VAC 60Hz, 1 second duration terminals to case. | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Insulation Resistance | 100 Mohms at 500 VDC | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Contact Bounce | 3 milliseconds max (make) | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Vibration | Per Mil-Std-202, method 204D, test condition D, 10 to 2,000 Hz | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Shock | Per Mil-Std-202, method 213, test condition C, 100 G's for 6 millisecond duration, ½ sine wave | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Seal | High temperature epoxy sealed for wave soldering and cleaning, moisture proof per Sensata specification S-722 (unit will not leak while submerged in 9" of water for a minimum of two minutes) | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Base Material | PPS (Polyphenylene Sulfide), 94 VO rated | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Terminal Material | 65% Copper, 18% Nickel | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Contact Material | Gold-plated or overlay, silver crossbar | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Mounting Bracket Material | Nickel-plated copper bracket has 1480 VAC 60Hz, 1 second duration terminals to case. Plastic bracket has 2000 VAC 60Hz, 1 second duration terminals to case. | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Chemical Resistance | Unit is resistance to water, salt, alcohol, ammonia, trichlorethane and most other organic solvents | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Solderability | Terminal material is selectively striped with lead-free solder for improved solderability | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Soldering Heat Resistance | Per Mil-Std-202G, method 210F, test condition C & K, test condition K validated at 260°C for 25 seconds | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Weight | Approximately 0.5 grams | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Agency Approvals | cRUus recognized E36687 VDE approval 40028976 RoHS Compliant per EU Directive 2002/95/EC | | | | | | | | | | | | | | | | | | | | | | | | | | |




DIMENSIONS

Dimensions in inches [mm]

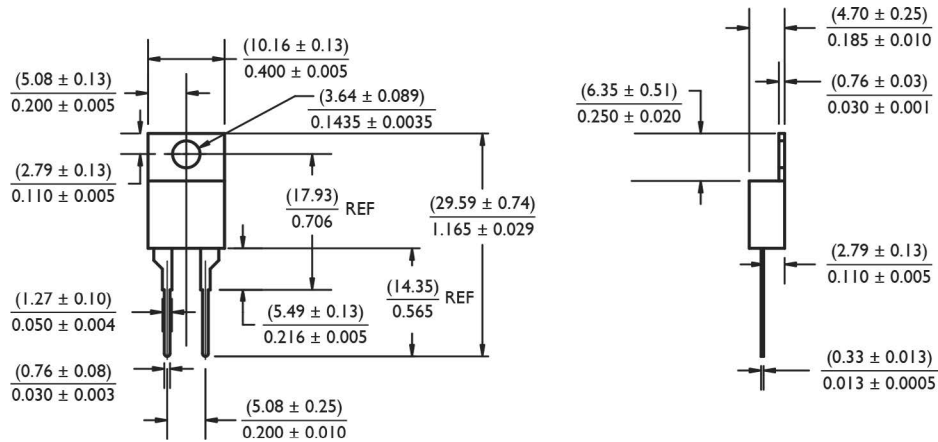

STANDARD PACKAGING

All samples and production orders will be shipped in plastic, industry standard shipping tubes.

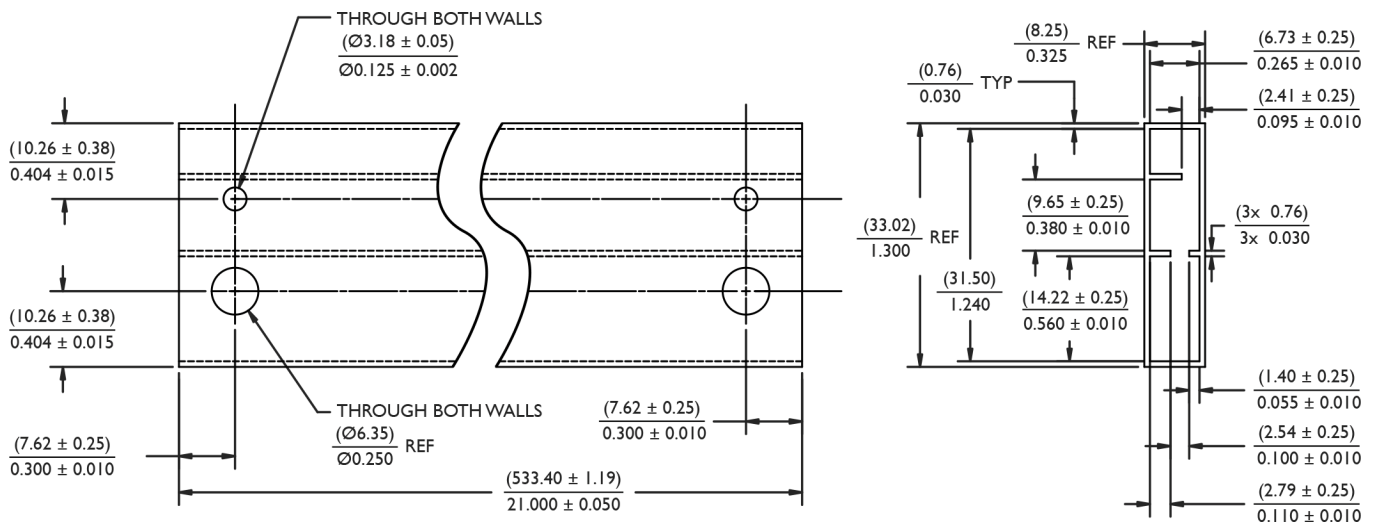



STANDARD TEMPERATURE CALIBRATION TABLE

Each thermostat part number consists of functional “building blocks” to enable the user to specify the desired characteristics. Select the proper code in each category, then transfer it to the box indicated. Unless a special requirement is indicated, the part number will be complete when the proper temperature is selected. If you have a special requirement, please call Sensata for a factory assigned number to complete the part number.

Example 1:

A 67F090 thermostat will close (make contact) on a rising temperature from 85°C to 95°C and will reset open (break contact) on a falling temperature within a window of no greater than 6°C lower than the actual close temperature and no less than 60°C ambient temperature.

Example 2:

A 67L060P thermostat has a plastic mounting bracket with 2000 VAC dielectric strength and VDE approval. The thermostat will open (break contact) on a rising temperature from 55°C to 65°C and will reset close (make contact) on a falling temperature within a window of no greater than 4°C lower than the actual open temperature and no less than 40°C ambient temperature.

The mounting bracket designation and the 4 digit manufacturing dash number are used for ordering special features and may not appear as part of the marking on the thermostat.

Temperature set point calibration is checked at Sensata Technologies with precision test equipment and proven methods. Because customer checking methods may differ, a typical variance allowed for correlation is ±1°C.

| OPERATE (±5°C) | MIN DIFFERENTIAL (°C) | MIN RESET (°C) |
|-------------------|--------------------------|-------------------|
| 40 | 4 | 20 |
| 45 | 4 | 20 |
| 50 | 4 | 30 |
| 55 | 4 | 30 |
| 60 | 4 | 40 |
| 65 | 4 | 40 |
| 70 | 4 | 50 |
| 75 | 4 | 50 |
| 80 | 6 | 55 |
| 85 | 6 | 55 |
| 90 | 6 | 60 |
| 95 | 6 | 60 |
| 100 | 6 | 70 |
| 105 | 6 | 70 |
| 110 | 6 | 80 |
| 115 | 6 | 80 |
| 120 | 9 | 85 |
| 125 | 9 | 85 |
| 130 | 9 | 90 |



ORDERING OPTIONS

Example : 67L090P-5588

Basic Product Series 67 **Contact Operation** L **Operating Temperature** 090 **Mounting Bracket Designation** P **Factory Assigned Number** 5588

67
Basic Product Series

F = Fan (close on rise)
L = Limit (open on rise)

Operating Temperature
in °C, 3 digits (from above table, put “0” in front of 2 digit temps)

Mounting Bracket Designation
Blank or no entry for a standard nickel-plated copper bracket
P = Plastic mounting bracket (VDE approved)

Factory Assigned Number
Nondescript, 4 digit dash number assigned for a customer’s special requirements. The dash and factory assigned number is not required for ordering a standard product

AGENCY APPROVALS & CERTIFICATIONS



cRUUS recognized
E36687



VDE approval
40028976



RoHS Compliant
per EU Directive
2002/95/EC

WARNINGS



RISK OF MATERIAL DAMAGE AND HOT ENCLOSURE

- The product's side panels may be hot, allow the product to cool before touching
- Follow proper mounting instructions including torque values
- Do not allow liquids or foreign objects to enter this product

Failure to follow these instructions can result in serious injury, or equipment damage.



HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power before installing or working with this equipment
- Verify all connections and replace all covers before turning on power

Failure to follow these instructions can result in death or serious injury.

Sensata Technologies, Inc. ("Sensata") data sheets are solely intended to assist designers ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products. Sensata data sheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular data sheet. Sensata may make corrections, enhancements, improvements and other changes to its data sheets or components without notice.

Buyers are authorized to use Sensata data sheets with the Sensata component(s) identified in each particular data sheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATA SHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATA SHEETS OR USE OF THE DATA SHEETS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATA SHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.

CONTACT US

Americas

+1 (888) 438 2214
sensors@sensata.com

Europe, Middle East & Africa

+31 (74) 357 8156 (Klixon+Airpax)
temperature-info.eu@sensata.com

Asia Pacific

sales.isasia@list.sensata.com
China +86 (21) 2306 1500
Japan +81 (45) 277 7117
Korea +82 (31) 601 2004
India +91 (80) 67920890
Rest of Asia +886 (2) 27602006
ext 2808