30CTQ... Series

Vishay High Power Products Schottky Rectifier, 2 x 15 A



PARAMETER	SYMBOL	TEST CONDITIONS		VALUES	UNITS
Maximum forward voltage drop per leg See fig. 1	V _{FM} ⁽¹⁾	15 A	– T _J = 25 °C	0.62	v
		30 A		0.82	
		15 A	– T _J = 125 °C	0.56	
		30 A		0.71	
Maximum reverse leakage current per leg See fig. 2	I _{RM} ⁽¹⁾	$T_J = 25 \ ^{\circ}C$	V _R = Rated V _R	0.80	mA
		T _J = 125 °C		45	
Threshold voltage	V _{F(TO)}	- T _J = T _J maximum		0.39	V
Forward slope resistance	r _t			8.47	mΩ
Maximum junction capacitance per leg	CT	V_{R} = 5 V_{DC} (test signal range 100 kHz to 1 MHz) 25 °C		720	pF
Typical series inductance per leg	L _S	Measured lead to lead 5 mm from package body		8.0	nH
Maximum voltage rate of change	dV/dt	Rated V _R		10 000	V/µs

Note


 $^{(1)}\,$ Pulse width < 300 $\mu s,$ duty cycle < 2 %


THERMAL - MECHANICAL SPECIFICATIONS							
PARAMETER		SYMBOL	TEST CONDITIONS	VALUES	UNITS		
Maximum junction and storage temperature range	9	T _J , T _{Stg}		- 55 to 150	°C		
Maximum thermal resistance, junction to case per leg		Р	DC operation	3.25	°C/W		
Maximum thermal resistance, junction to case per package		R _{thJC}		1.63			
Typical thermal resistance, case to heatsink		R _{thCS}	Mounting surface, smooth and greased	0.50			
Approvimento uscight				2	g		
Approximate weight				0.07	oz.		
Mounting torque	minimum			6 (5)	kgf ⋅ cm		
	maximum			12 (10)	(lbf · in)		
Marking device				30CT	30CTQ050		
			Case style TO-220AB	30CT	30CTQ060		

Downloaded from Arrow.com.



Schottky Rectifier, 2 x 15 A Vishay High Power Products

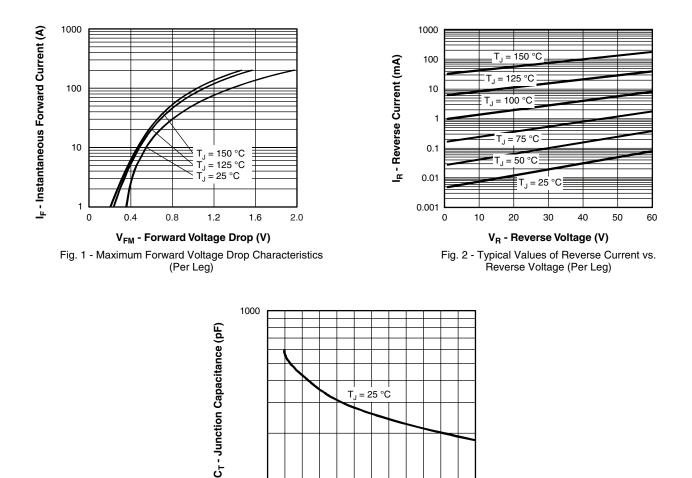

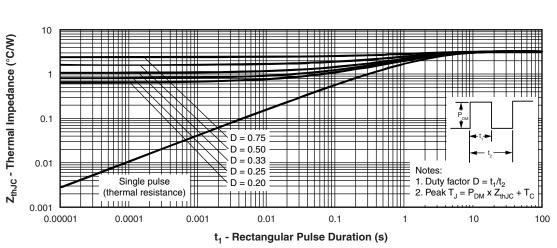

100 L

10

20

30

V_R - Reverse Voltage (V) Fig. 3 - Typical Junction Capacitance vs. Reverse Voltage (Per Leg)

40

50


60

Fig. 4 - Maximum Thermal Impedance ZthJC Characteristics (Per Leg)

Document Number: 93306 Revision: 22-Aug-08

30CTQ... Series

Vishay High Power Products Schottky Rectifier, 2 x 15 A

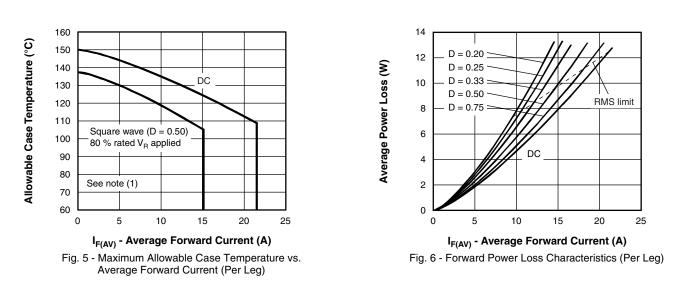

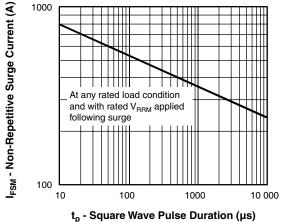


Fig. 7 - Maximum Non-Repetitive Surge Current (Per Leg)

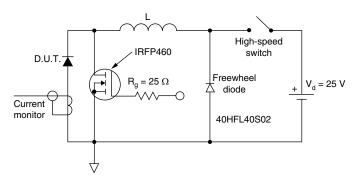


Fig. 8 - Unclamped Inductive Test Circuit

Note

(1)

 $\begin{array}{l} \mbox{Formula used: } T_C = T_J - (Pd + Pd_{REV}) \ x \ R_{thJC}; \\ Pd = \mbox{Forward power loss} = I_{F(AV)} \ x \ V_{FM} \ at \ (I_{F(AV)}/D) \ (see \ fig. \ 6); \\ Pd_{REV} = \ Inverse \ power \ loss = V_{R1} \ x \ I_R \ (1 - D); \ I_R \ at \ V_{R1} = 10 \ V \end{array}$


www.vishay.com 4





Schottky Rectifier, 2 x 15 A Vishay High Power Products

ORDERING INFORMATION TABLE

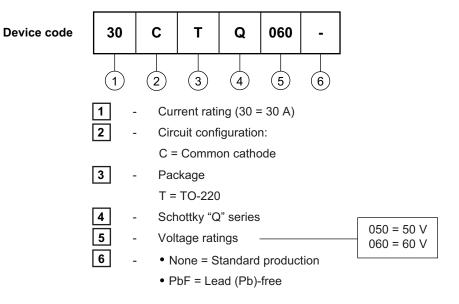

Tube standard pack quantity: 50 pieces

LINKS TO RELATED DOCUMENTS				
Dimensions	http://www.vishay.com/doc?95222			
Part marking information	http://www.vishay.com/doc?95225			



Vishay

Disclaimer

All product specifications and data are subject to change without notice.

Vishay Intertechnology, Inc., its affiliates, agents, and employees, and all persons acting on its or their behalf (collectively, "Vishay"), disclaim any and all liability for any errors, inaccuracies or incompleteness contained herein or in any other disclosure relating to any product.

Vishay disclaims any and all liability arising out of the use or application of any product described herein or of any information provided herein to the maximum extent permitted by law. The product specifications do not expand or otherwise modify Vishay's terms and conditions of purchase, including but not limited to the warranty expressed therein, which apply to these products.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document or by any conduct of Vishay.

The products shown herein are not designed for use in medical, life-saving, or life-sustaining applications unless otherwise expressly indicated. Customers using or selling Vishay products not expressly indicated for use in such applications do so entirely at their own risk and agree to fully indemnify Vishay for any damages arising or resulting from such use or sale. Please contact authorized Vishay personnel to obtain written terms and conditions regarding products designed for such applications.

Product names and markings noted herein may be trademarks of their respective owners.