
Simplified Block Diagram

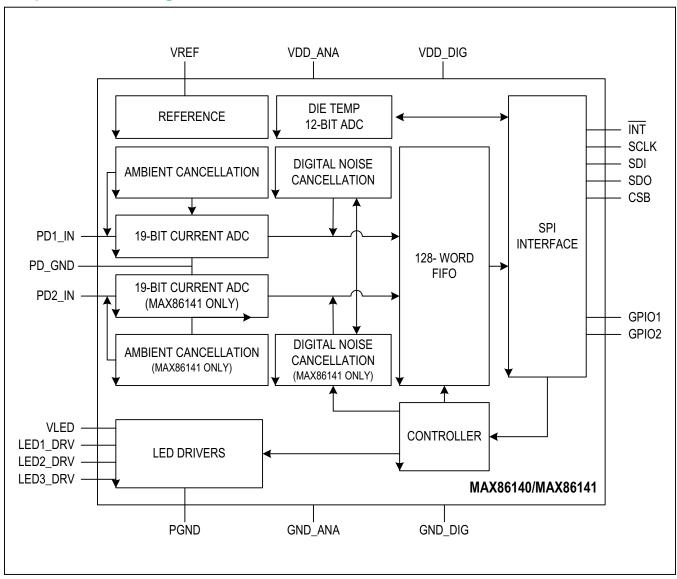

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Absolute Maximum Ratings

VDD_ANA to GND_ANA0.3V to +2.2V	PD1_IN to GND_ANA0.3V to +2.2V
VDD_DIG to GND_ANA0.3V to +2.2V	PD2_IN to GND_ANA
VDD_ANA to VDD_ANA0.3V to +0.3V	PD_GND to GND_ANA0.3V to +0.3V
PGND to GND_ANA0.3V to +0.3V	All other pins to GND_ANA0.3V to +2.2V
SCLK, SDO, SDI, CSB, INT to GND_ANA0.3V to +6.0V	Output Short-Circuit Duration
GND_DIG to GND_ANA0.3V to +0.3V	Continuous Input Current Into Any Pin
VLED to PGND0.3V to +6.0V	(except LED_DRVx Pins)±20mA
LED_DRV1 to PGND0.3V to V _{LED} + 0.3V	Continuous Power Dissipation (WLP
LED_DRV2 to PGND0.3V to V _{LED} + 0.3V	(derate 5.5mW/°C above +70°C))
LED_DRV3 to PGND0.3V to V _{LED} + 0.3V	Operating Temperature Range40°C to +85°C
	Storage Temperature Range40°C to +105°C

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect

Package Information

5 x 4 WLP

PACKAGE CODE	N201A2+1
Outline Number	<u>21-100134</u>
Land Pattern Number	Refer to Application Note 1891
Thermal Resistance, Four-Layer Board:	
Junction to Ambient (θ _{JA})	55.49°C/W
Junction to Case (θ _{JC})	N/A

For the latest package outline information and land patterns (footprints), go to www.maximintegrated.com/packages. Note that a "+", "#", or "-" in the package code indicates RoHS status only. Package drawings may show a different suffix character, but the drawing pertains to the package regardless of RoHS status.

Package thermal resistances were obtained using the method described in JEDEC specification JESD51-7, using a four-layer board. For detailed information on package thermal considerations, refer to www.maximintegrated.com/thermal-tutorial.

Electrical Characteristics

(VDDANA = 1.8V, VDDDIG = 1.8V, VLED = 5.0V, ADC_RGE = $16\mu A$, PPG_SR = 1024sps, PPG_TINT = $14.8\mu s$, LED_SETLNG = $6\mu s$, LEDx_RGE = 31mA, CPD = 65pF, PD_BIAS = 0x1, I $_{exposure}$ = $1\mu A$, TA = $25^{\circ}C$, min/max are from TA = $-40^{\circ}C$ to $+85^{\circ}C$, unless otherwise noted. (Note 1))

PARAMETER	SYMBOL	CONDITI	ONS	MIN	TYP	MAX	UNITS			
Readout Channel	•	1			1					
ADC Resolution					19		bits			
		ADC_RGE = 0x0			4.0					
ADO E II Ossils Issuel Ossuesil		ADC_RGE = 0x1			8.0					
ADC Full Scale Input Current		ADC_RGE = 0x2			16.0		μA			
		ADC_RGE = 0x3			32.0					
		PPG_TINT = 0x0			14.8					
ADC late anotice Time		PPG_TINT = 0x1			29.4					
ADC Integration Time	t _{INT}	PPG_TINT = 0x2			58.7		μs			
		PPG_TINT = 0x3			117.3					
Minimum PPG Sample Rate		PPG_SR = 0x0A			8		sps			
Maximum PPG Sample Rate		PPG_SR = 0x13			4096		sps			
Sample Rate Error		From nominal as indicate table	ed in the PPG_SR	-2		+2	%			
DC Ambient Light Input Range	ALR	ALC = on, ALC_OVF = 1		100			μA			
AC Ambient Light Rejection	AC_ALRR	ALC = on, I _{ambient} = 1µA ±0.4µA pk-pk 120Hz Sin			70		dB			
DC Ambient Light Rejection		ALC = on, I _{ambient} modu and 30µA, LED_SETLN PPG_TINT = 117.3µs			0.5		nA			
Dark Current Offset	DC_O	ALC = ON, PD_BIAS = 0x	0, ADD_OFFSET = 1		±1		Counts			
		PPG_TINT = 14.8µs			262					
Dark Current Input Referred		PPG_TINT = 29.4µs			128		pArms			
Noise		PPG_TINT = 58.7µs			83					
		PPG_TINT = 117.3µs			56		pArms			
			PD_BIAS = 0x1		65					
Maximum Photodiode Input		I _{ambient} = 0μA, less	PD_BIAS = 0x5		130					
Capacitance	C _{pd}	than 1nA of code shift	PD_BIAS = 0x6		260		pF			
			PD_BIAS = 0x7		520					
VDD DC PSR		I _{ambient} = 0μA, V _{DD} = 1.	-560	-330	+560	LSB/V				
LED Driver										
LED Current Resolution				8		Bits				
Driver DNL		LEDx_RGE = 124mA		-1		1	LSB			
Driver INL		LEDx_RGE = 124mA			0.6		LSB			

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Electrical Characteristics (continued)

(VDDANA = 1.8V, VDDDIG = 1.8V, VLED = 5.0V, ADC_RGE = 16μ A, PPG_SR = 1024sps, PPG_TINT = 14.8μ s, LED_SETLNG = 6μ s, LEDx_RGE = 31mA, C_{PD} = 65pF, PD_BIAS = 0x1, I $_{exposure}$ = 1μ A, T_A = 25°C, min/max are from T_A = -40°C to +85°C, unless otherwise noted. (Note 1))

PARAMETER	SYMBOL	CONDITIO	ONS	MIN	TYP	MAX	UNITS	
			LEDx_RGE = 0x0		31			
Full Scale I ED Current (Note 2)	L	LEDY DA - OVEE	LEDx_RGE = 0x1		62		^	
Full Scale LED Current (Note 3)	ILED	LEDx_PA = 0xFF	LEDx_RGE = 0x2		93		mA	
			LEDx_RGE = 0x3	117	124	129		
			LEDx_RGE = 0x0		160	253		
Minimum output voltage	\/	LEDx_PA = 0xFF, 95% of the desired LED	LEDx_RGE = 0x1		317		mV	
Willimum output voltage	V _{OL}	current	LEDx_RGE = 0x2		495		IIIV	
			LEDx_RGE = 0x3		700			
LED Driver DC PSR		V _{DD} = 1.8V, VLEDx_DR\ LEDx_PA = 0xFF, V _{LED} = 5.5V, LEDx_RGE = 124n		-1	+400	μΑ/V		
		V_{DD} = 1.7 to 2.0V, T_A = -		110	1410			
LED1 Driver Compliance Interrupt	LED1 _{COMP}				180		mV	
Internal Die Temperature Senso	or							
Temperature Sensor Accuracy		T _A = 25°C			1		°C	
Temperature Sensor Minimum Range		Temperature error < 5°C			-40		°C	
Temperature Sensor Maximum Range		Temperature error < 5°C			85		°C	
Temperature ADC Acquisition Time					29		ms	
Power Supply								
Power Supply Voltage	V_{DD}	Verified during PSRR Tes	st	1.7	1.8	2.0	V	
LED Supply Voltage	V_{LED}	Verified during PSRR Tes	st	3.1		5.5	V	

Electrical Characteristics (continued)

(VDDANA = 1.8V, VDDDIG = 1.8V, VLED = 5.0V, ADC_RGE = 16 μ A, PPG_SR = 1024sps, PPG_TINT = 14.8 μ s, LED_SETLNG = 6 μ s, LEDx_RGE = 31mA, CPD = 65pF, PD_BIAS = 0x1, I_{exposure} = 1 μ A, T_A = 25°C, min/max are from T_A = -40°C to +85°C, unless otherwise noted. (Note 1))

PARAMETER	SYMBOL	CONDITI	ONS	MIN	TYP	MAX	UNITS		
		MAX86140, Single LED E PPG_SR = 4096sps, LP_ LEDxPA = 0mA			660	780			
		MAX86140, Single LED	PPG_SR = 256sps		80		μA		
		Exposure/Sample,	PPG_SR = 100sps		32		•		
		PW = 14.8µs, LP_MODE	PPG_SR = 50sps		16				
		= 0x1, LEDx_PA = 0mA	PPG_SR = 25sps		8.5				
		MAX86140, Double LED	Single pulse		42		μA		
VDD Supply Current		Exposure/Sample, PPG_SR = 84sps, PW = 14.8µs, LP_MODE = 0x1, LEDx_PA = 0mA	Double pulse		89		μА		
	I _{DD}	MAX86141, Single LED PPG_SR = 4096sps, LP LEDxPA = 0mA			978	1170			
		MAX86141, Single LED	PPG_SR = 256sps		115.5		μA		
			PPG_SR = 100sps		46				
		LP_BOOST = 1,	PPG_SR = 50sps		23				
		LEDx_PA = 0mA	PPG_SR = 25sps		11				
		MAX86141, Two LED	Single pulse		60		μA		
		Exposure/Sample, PPG_SR = 84sps, LP_BOOST = 1, LEDx_PA = 0mA	Double pulse		130		μΑ		
		Die Temperature mode, channel(s) disabled		8		μA			
		Single LED exposure pe TINT = 117.3µs, Single-F PPG_SR = 256sps, LED	Pulse,		0.22				
		Single LED exposure	PPG_SR = 256sps		1880		μA		
		per Sample, PPG_TINT	PPG_SR = 100sps		735		•		
VLED Supply Current	I _{LED}		PPG_SR = 50sps		370				
		LEDx_PA = 62mA	PPG_SR=25sps		185				
		Two LED exposure per	Single-Pulse		1240				
		sample, PPG_TINT = 117.3µs, LEDx_PA = 62mA, PPG_SR = 84sps	Dual-Pulse		2480		μΑ		
VDD Current in Shutdown		T _A = +25°C		0.6	2.5	μA			
VLED Current in Shutdown		T _A = +25°C				1	μA		

Electrical Characteristics (continued)


(VDD_{ANA} = 1.8V, VDD_{DIG} = 1.8V, V_{LED} = 5.0V, ADC_RGE = 16 μ A, PPG_SR = 1024sps, PPG_TINT = 14.8 μ s, LED_SETLNG = 6 μ s, LEDx_RGE = 31mA, C_{PD} = 65pF, PD_BIAS = 0x1, I_{exposure} = 1 μ A, T_A = 25°C, min/max are from T_A = -40°C to +85°C, unless otherwise noted. (Note 1))


PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
Digital I/O Characteristics						
SDO Output Low Voltage	V _{OL_SDO}	I _{SINK} = 2mA			0.4	V
SDO Output High Voltage	V _{OH_SDO}	I _{SOURCE} = 2mA	V _{DD} -0.4			V
Open-Drain Output Low Voltage	V _{OL_OD}	I _{SINK} = 6mA, INTB, GPIO1, GPIO2			0.4	V
Input Voltage Low	V _{IL}	SDI, SCLK, CSB, GPIO1, GPIO2			0.4	V
Input Voltage High	V _{IH}	SDI, SCLK, CSB, GPIO1, GPIO2	1.4			V
la a de la catala	\/	SDI, SCLK, CSB		330		\/
Input Hysteresis	V_{HYS}	GPIO1, GPO2		240		mV
Input Leakage Current	I _{IN}	V _{IN} = 0V, T _A = +25°C (SDI, SCLK, CSB, GPIO1, GPIO2)		0.01	1	μΑ
Input Capacitance	C _{IN}	SDI, SCLK, CSB, GPIO1, GPIO2		10		pF
SPI Timing Charateristics						
SCLK Frequency	f _{SCLK}				8	MHz
SCLK Period	t _{CP}		125			ns
SCLK Pulse Width High	t _{CH}		40			ns
SCLK Pulse Width Low	t _{CL}		40			ns
CSB Fall to SCLK Rise Setup Time	t _{CSS0}	To 1st SCLK rising edge	20			ns
CSB Fall to SCLK Rise Hold Time	t _{CSH0}	Applies to inactive rising edge preceding 1st rising edge	5			ns
CSB Rise to SCLK Rise Hold Time	t _{CSH1}	Applies to 24th rising edge	500			ns
SCLK Rise to CSB Fall	t _{CSF}	Applies to 24th rising edge	500			ns
CSB Pulse Width High	t _{CSPW}		250			ns
SDI to SCLK Rise Setup Time	t _{DS}		10			ns
SDI to SCLK Rise Hold Time	t _{DH}		10			ns
SCLK Fall to SDO Transition	t _{DOT}	C _{LOAD} = 50pF			35	ns
CSB Fall to SDO Enabled	t _{DOE}	C _{LOAD} = 0pF	12			ns
CSB Rise to SDO Hi-Z	t _{DOZ}	Disable Time			25	ns
GPIO1 External Sync Pulse Width	t _{PLGPIO1}		64			μs
GPIO2 External Clock Input (Note 4)	f _{GPIO2}	External Sample Reference Clock on GPIO2	31900		32868	Hz
GPIO2 External Clock Pulse Width	t _{PWGPIO2}		1			μs


- **Note 1:** All devices are 100% production tested at $T_A = +25$ °C. Specifications over temperature limits are guaranteed by Maxim Integrated's bench or proprietary automated test equipment (ATE) characterization.
- **Note 2:** Specifications are guaranteed by Maxim Integrated's bench characterization and by 100% production test using proprietary ATE setup and conditions.
- Note 3: The LED current is trim in production to meet the IR and RED ADC counts. Actual values may vary by up to ±50%. Values shown here are for 0% trim.
- Note 4: See Register Map/PPG Configuration 2 (0x12) section for the sample rate by the external clock frequency. The sample rate will be shifted when the external clock frequency shifts.


Typical Operating Characteristics


 $(V_{DD} = 1.8V, V_{LED} = 5.0V, GND = PGND = 0V, T_A = +25^{\circ}C, unless otherwise noted.)(T_A = +25^{\circ}C, unless otherwise noted.)$

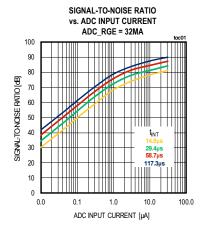


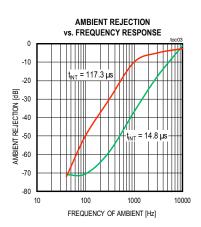

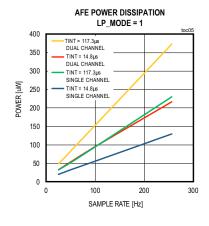

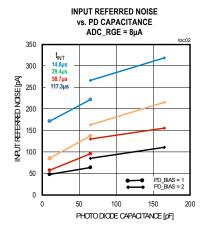


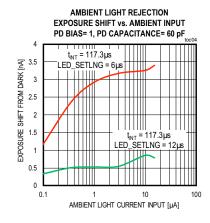


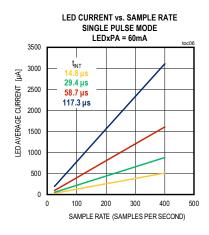



Typical Operating Characteristics (continued)

 $(V_{DD} = 1.8V, V_{LED} = 5.0V, GND = PGND = 0V, T_A = +25^{\circ}C, unless otherwise noted.)$

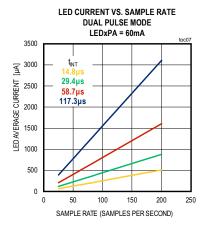


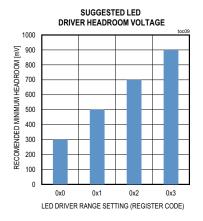

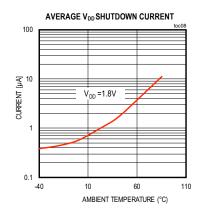


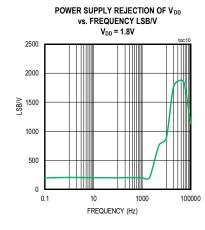

Pin Configurations

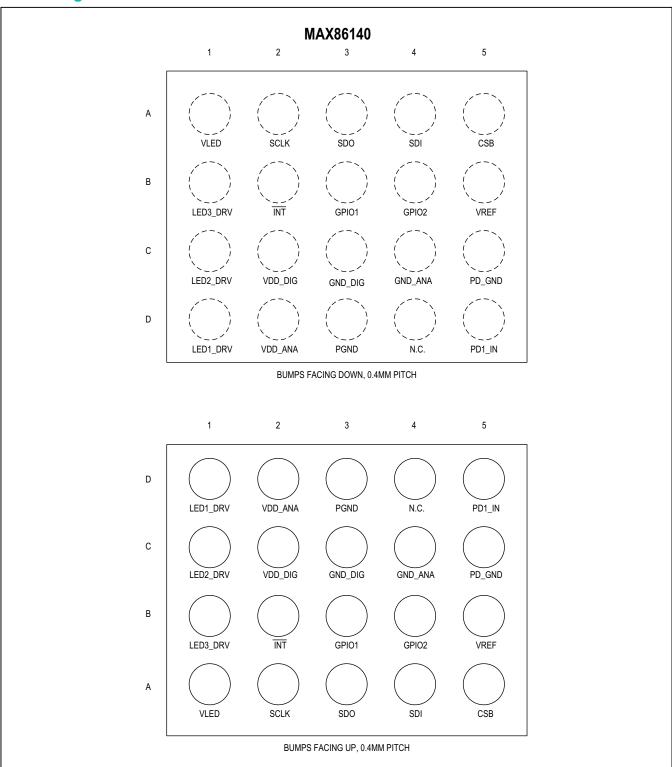

Pin Configurations (continued)

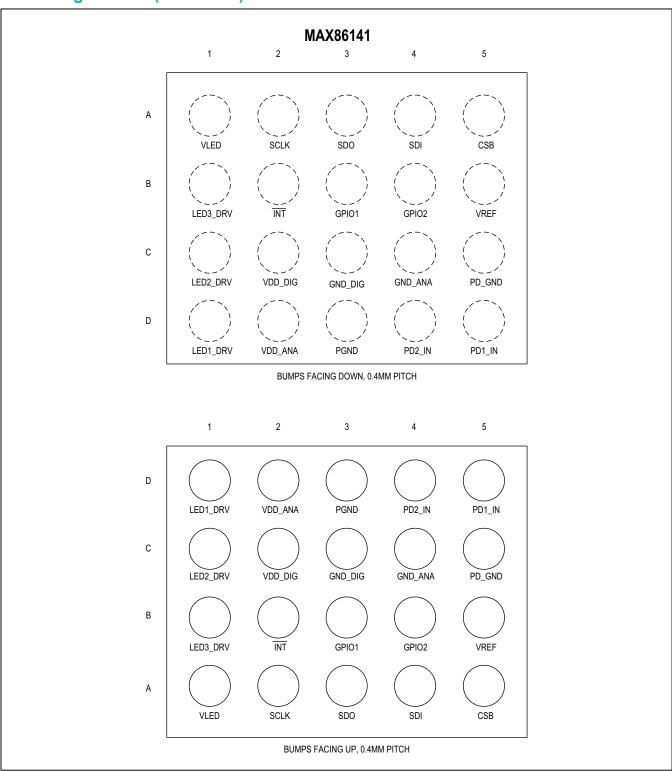

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Pin Description

P	IN		
MAX86140	MAX86141	NAME	FUNCTION
Power	l.	I.	
C2	C2	VDD_DIG	Digital Logic Supply. Connect to externally-regulated supply. Bypass to GND_DIG
C3	C3	GND_DIG	Digital Logic and Digital Pad Return. Connect to GND.
D2	D2	VDD_ANA	Analog Supply. Connect to externally-regulated supply. Bypass with a 0.1µF capacitor as close as possible to bump and a 10µF capacitor to GND_ANA.
C4	C4	GND_ANA	Analog Power Return. Connect to GND.
A1	A1	VLED	LED Power Supply Input. Connect to external voltage supply. Bypass with a 10μF capacitor to PGND.
D3	D3	PGND	LED Power Return. Connect to GND.
Control Inte	erface		
A2	A2	SCLK	SPI Clock
A3	A3	SDO	SPI Data Ouput
A4	A4	SDI	SPI Data Input
A5	A5	CSB	SPI Chip select
B2	B2	ĪNT	Interrupt. Programmable open-drain Interrupt output signal pin (active-low).
В3	В3	GPIO1	General Purpose I/O. Open-drain when programmed as output (active-low).
B4	B4	GPIO2	General Purpose I/O. Open-drain when programmed as output (active-low).
Optical Pins	S	,	
_	D4	PD2_IN	Photodiode Cathode Input
D5	D5	PD1_IN	Photodiode Cathode Input
C5	C5	PD_GND	Photodiode Anode
D1	D1	LED1_DRV	LED Output Driver 1. Connect the LED cathode to LED1_DRV and its anode to the V _{LED} supply.
C1	C1	LED2_DRV	LED Output Driver 2. Connect the LED cathode to LED2_DRV and its anode to the V _{LED} supply.
B1	B1	LED3_DRV	LED Output Driver 3 Connect the LED cathode to LED3_DRV and its anode to the V _{LED} supply.
Reference			
B5	B5	VREF	Internal Reference Decoupling Point. Bypass with a 1µF capacitor to GND_ANA.
N.C.			
D4		N.C.	No Connection. Connect to unconnected PCB pad for mechanical stability. N.C. pins should not be connected to any signal, power, or ground pins.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Detailed Description

The MAX86140/MAX86141 are complete integrated optical data acquisition systems, ideal for optical pulse oximetry and heart rate detection applications. Both parts have been designed for the demanding requirements of mobile and wearable devices and require minimal external hardware components are necessary for integration into a wearable device. They include high-resolution, optical readout signal processing channels with robust ambient light cancellation and high-current LED driver DACs to form a complete optical readout signal chain.

The MAX86140/MAX86141 are fully adjustable through software registers and the digital output data is stored in a 128-word FIFO within the IC. The FIFO allows the MAX86140/MAX86141 to be connected to a microcontroller or processor on a shared bus, where the data is not being read continuously from the MAX86140/MAX86141's registers. Both operate in fully autonomous modes for low power battery applications.

The MAX86140 consists of a single optical readout channel, while the MAX86141 incorporates dual optical readout channels that operate simultaneously. Both parts have three LED drivers and are well suited for a wide variety of optical sensing applications.

The MAX86140/MAX86141 operate on a 1.8V main supply voltage, with a separate 3.1V to 5.0V LED driver power supply. Both devices have flexible timing and shutdown configurations as well as control of individual blocks so an optimized measurement can be made at minimum power levels.

Optical Subsystem

The optical subsystem in the MAX86140/MAX86141 is composed of ambient light cancellation (ALC), a continuous-time sigma-delta ADC, and proprietary discrete time filter. ALC incorporates a proprietary scheme to cancel ambient light generated photo diode current, allowing the sensor to work in high ambient light conditions. The optical ADC has programmable full-scale ranges of $4\mu A$ to $32\mu A$. The internal ADC is a continuous time oversampling sigma delta converter with 19-bit resolution. The ADC output data rate can be programmed from 8sps (samples per second) to 8192sps. The MAX86140 includes a proprietary discrete time filter to reject 50 Hz/60 Hz interference and changing residual ambient light from the sensor measurements.

The MAX86140/MAX86141 supports Dynamic Power Down mode (Low-Power mode) in which the power consumption is decreased between samples. This mode is only supported for sample rates 128sps and below. For more details on the power consumption at each sample rates, refer to the *Electrical Characteristics* table.

LED Driver

The MAX86140/MAX86141 integrates three precision LED driver-current DACs that modulate LED pulses for a variety of optical measurements. The LED current DACs have 8-bits of dynamic range with four programmable full-scale ranges of 31mA, 62mA, 94mA, and 124mA. The LED drivers are low dropout current sources, allowing for low-noise, power-supply independent LED currents to be sourced at the lowest supply voltage possible; therefore minimizing LED power consumption. The LED pulse width can be programmed from 14.8µs to 117.3µs to allow the algorithms to optimize SpO₂ and HR accuracy at the lowest dynamic power consumption dictated by the application.

FIFO Configuration

The FIFO is 128 sample depth and is designed to support various data types, as shown in <u>Table 2</u>. Each sample width is 3 bytes, which includes a 5-bit tag width. The tag embedded in the FIFO_DATA is used to identify the source of each sample data. The description of each Tag is as shown in Table 3.

LED Sequence Control (address 0x20 ~ 0x22)

The data format in the FIFO, as well as the sequencing of exposures, are controlled by the LED Sequence Registers through LEDC1 through LEDC6. There are six LED Sequence Data Items available, as shown in <u>Table 1</u>. The exposure sequence cycles through the LED Sequence bit fields, starting from LEDC1 to LEDC6. The first LED Sequence field set to NONE (0000) ends the sequence.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Table 1. LED Sequence Control Registers

ADDRESS	REGISTER NAME	DEFAULT VALUE	В7	В6	B5	B4	В3	B2	B1	В0			
0x20	LED Sequence Register 1	00		LEDC	2[3:0]		LEDC1[3:0]						
0x21	LED Sequence Register 2	00		LEDC	4[3:0]		LEDC3[3:0]						
0x22	LED Sequence Register 3	00		LEDC	6[3:0]			LEDC	C5[3:0]				

 $\underline{\mathsf{Table}\ 2}$ lists the codes for exposures selected in the LED sequence control registers.

Table 2. LED Sequence Register Data Type

LEDCN[3:0]	DATA TYPE
0000	NONE
0001	LED1
0010	LED2
0011	LED3
0100	LED1 and LED2 pulsed simultaneously
0101	LED1 and LED3 pulsed simultaneously
0110	LED2 and LED3 pulsed simultaneously
0111	LED1, LED2, and LED3 pulsed simultaneously
1000	Pilot on LED1
1001	DIRECT AMBIENT
1010	LED4 (external mux control)
1011	LED5 (external mux control)
1100	LED6 (external mux control)
1101	Reserved
1110	Reserved
1111	Reserved

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

<u>Table 3</u> shows the format of the FIFO data along with the associated Tag. In a sample if a picket fence event is detected, the predicted value is pushed to the FIFO along with its tag (PPFx_LEDCx_DATA).

Table 3. FIFO Data and Tag

TAG[4:0]	DATA TYPE	FIFO_DATA[23:0]	COMMENTS
00001	PPG1_LEDC1_DATA	LEDC1_DATA[18:0]	If LEDC1 is non-zero
00010	PPG1_LEDC2_DATA	LEDC2_DATA[18:0]	If LEDC1 and LEDC2 are non-zero
00011	PPG1_LEDC3_DATA	LEDC3_DATA[18:0]	If LEDC1, LEDC2 and LEDC3 are non-zero
00100	PPG1_LEDC4_DATA	LEDC4_DATA[18:0]	If LEDC1, LEDC2, LEDC3, and LEDC4 are non-zero
00101	PPG1_LEDC5_DATA	LEDC5_DATA[18:0]	If LEDC1, LEDC2, LEDC3, LEDC4, and LEDC5 are non-zero
00110	PPG1_LEDC6_DATA	LEDC6_DATA[18:0]	If LEDC1, LEDC2, LEDC3, LEDC4, LEDC5, and LEDC6 are non-zero
00111	PPG2_LEDC1_DATA	LEDC1_DATA[18:0]	If LEDC1 is non-zero
01000	PPG2_LEDC2_DATA	LEDC2_DATA[18:0]	If LEDC1 and LEDC2 are non-zero
01001	PPG2_LEDC3_DATA	LEDC3_DATA[18:0]	If LEDC1, LEDC2, and LEDC3 are non-zero
01010	PPG2_LEDC4_DATA	LEDC4_DATA[18:0]	If LEDC1, LEDC2, LEDC3, and LEDC4 are non-zero
01011	PPG2_LEDC5_DATA	LEDC5_DATA[18:0]	If LEDC1, LEDC2, LEDC3, LEDC4, and LEDC5 are non-zero
01100	PPG2_LEDC6_DATA	LEDC6_DATA[18:0]	If LEDC1, LEDC2, LEDC3, LEDC4, LEDC5, and LEDC6 are non-zero
01101	PPF1_LEDC1_DATA	LEDC1_DATA[18:0]	If LEDC1 is non-zero (Picket Fence Event)
01110	PPF1_LEDC2_DATA	LEDC2_DATA[18:0]	If LEDC1 and LEDC2 are non-zero (Picket Fence Event)
01111	PPF1_LEDC3_DATA	LEDC3_DATA[18:0]	If LEDC1, LEDC2, and LEDC3 are non-zero (Picket Fence Event)
10000	Reserved	_	
10001	Reserved	_	
10010	Reserved	_	
10011	PPF2_LEDC1_DATA	LEDC1_DATA[18:0]	If LEDC1 is non-zero (Picket Fence Event)
10100	PPF2_LEDC2_DATA	LEDC2_DATA[18:0]	If LEDC1 and LEDC2 are non-zero (Picket Fence Event)
10101	PPF2_LEDC3_DATA	LEDC3_DATA[18:0]	If LEDC1, LEDC2, and LEDC3 are non-zero (Picket Fence Event)
10110	Reserved	-	
10111	Reserved	-	
11000	Reserved	_	
11001	PROX1_DATA	PROX1_DATA[18:0]	Only PILOT LED1 for LEDC1 is used
11010	PROX2_DATA	PROX2_DATA[18:0]	Only PILOT LED1 for LEDC1 is used
11011	Reserved	_	
11100	Reserved		
11101	Reserved	_	
11110	INVALID_DATA	Don't_care[18:0]	This tag indicates that there was an attempt to read an empty FIFO
11111	TIME_STAMP	TIME_STAMP[18:0]	If TIME_STAMP_EN = 1, this is TIME_STAMP

There are seven registers that control how the FIFO is configured and read out. These registers are illustrated below.

Table 4. PPG Configuration

ADDRESS	REGISTER NAME	В7	В6	B5	B4	В3	B2	B1	В0				
0x04	FIFO Write Pointer			_	FIFO_WR	_PTR[6:0]							
0x05	FIFO Read Pointer		- FIFO_RD_PTR[6:0]										
0x06	Overflow Counter		- OVF_COUNTER[6:0]										
0x07	FIFO Data Counter		FIFO_DATA_COUNT[7:0]										
0x08	FIFO Data Register				FIFC	D_DATA[7:0]							
0x09	FIFO Configuration 1	_	- FIFO_A_FULL[6:0]										
0x0A	FIFO Configuration 2	_	_	TIME_ STAMP_EN	FLUSH_ FIFO	FIFO_ STAT_CLR	-		-				

Write Pointer (Register 0x04)

FIFO_WR_PTR[6:0] points to the FIFO location where the next item will be written. This pointer advances for each item pushed on to the FIFO by the internal conversion process. The write pointer is a 7-bit counter and will wrap around to count 0x00 on the next item after count 0x7F.

Read Pointer (Register 0x05)

FIFO_RD_PTR[6:0] points to the location from where the next item from the FIFO will be read via the serial interface. This advances each time an item is read from the FIFO. The read pointer can be both read and written to. This allows an item to be reread from the FIFO if it has not already been overwritten. The read pointer is updated from a 7-bit counter and will wrap around to count 0x00 from count 0x7F.

Overflow Counter (Register 0x06)

OVF_COUNTER[6:0] logs the number of items lost if the FIFO is not read in a timely fashion. This counter holds/ saturates at count value 0x7F. When a complete item is popped from the FIFO (when the read pointer advances), the OVF_COUNTER is reset to zero. This counter is essentially a debug tool. It should be read immediately before reading the FIFO in order to check if an overflow condition has occurred.

FIFO Data Counter (Register 0x07)

FIFO_DATA_COUNT[7:0] is a read-only register which holds the number of items available in the FIFO for the host to read. This increments when a new item is pushed to the FIFO, and decrements when the host reads an item from the FIFO.

FIFO Data (Register 0x08)

FIFO_DATA[7:0] is a read-only register used to retrieve data from the FIFO. It is important to burst read the item from the FIFO. Each item is three bytes. So burst reading three bytes at FIFO_DATA register via the serial interface advances the FIFO_RD_PTR. The format and data type of the data stored in the FIFO is determined by the Tag associated with data. Readout from the FIFO follows a progression defined by LED Sequence Control registers as well. This configuration is best illustrated by a few examples.

Assume it is desired to perform a SpO₂ measurement and also monitor the ambient level on the photodiode to adjust the IR and red LED intensity. To perform this measurement, configure the following registers:

```
LED Sequence Control
               LEDC1 = 0x1
                                              (LED1 exposure)
               LEDC2 = 0x2
                                              (LED2 exposure)
               LEDC3 = 0x9
                                              (DIRECT AMBIENT exposure)
               LEDC4 = 0x0
                                              (NONE)
               LEDC5 = 0x0
                                              (NONE)
               LEDC6 = 0x0
                                              (NONE)
         PPG Configuration
               PPG1_ADC_RGE[1:0]
                                              (PPG1 Gain Range Control)
               PPG2 ADC RGE[1:0]
                                              (PPG2 Gain Range Control)
                                              (LED Pulse-Width Control)
               PPG TINT[1:0]
               PPG_SR[3:0]
                                              (Sample Rate)
         LED Pulse Amplitude
               LED1_PA[7:0]
                                              (LED1 Drive Current)
               LED2_PA[7:0]
                                              (LED2 Drive Current)
When done so the sample sequence and the data format in the FIFO will follow the following time/location sequence.
         tag 1, PPG1 LED1 data
         tag 7, PPG2 LED1 data
         tag 2, PPG1 LED2 data
         tag 8, PPG2 LED2 data
         tag 3, PPG1 Ambient data
         tag 9, PPG2 Ambient data
         tag 1, PPG1 LED1 data
         tag 7, PPG2 LED1 data
         tag 2, PPG1 LED2 data
         tag 8, PPG2 LED2 data
         tag 3, PPG1 Ambient data
         tag 9, PPG2 Ambient data
         tag 1, PPG1 LED1 data
         tag 7, PPG2 LED1 data
         tag 2, PPG1 LED2 data
         tag 8, PPG2 LED2 data
         tag 3. PPG1 Ambient data
         tag 9, PPG2 Ambient data
   where:
         PPGm LED1 data = the ambient corrected exposure data from LED1 in PPGm channel
         PPGm LED2 data = the ambient corrected exposure data from LED2 in PPGm channel
         PPGm Ambient data = the direct ambient sample in PPGm channel
         m is 1 of PPG1 channel, and 2 for PPG2 channel
For a second example, assume it is desired to pulse LED1 and LED2 simultaneously while also monitoring the ambient level.
          LED Sequence Control
                                              (LED1 and LED2 exposure)
               LEDC1 = 0x4
               LEDC2 = 0x9
                                              (DIRECT AMBIENT exposure)
               LEDC3 = 0x0
                                              (NONE)
               LEDC4 = 0x0
                                              (NONE)
               LEDC5 = 0x0
                                              (NONE)
```

(NONE)

LEDC6 = 0x0

```
In this case, the sequencing in the FIFO will then be: tag 1, PPG1 LED1+LED2 data
```

tag 7, PDC2 LED1 LED2 data

tag 7, PPG2 LED1+LED2 data

tag 2, PPG 1 Ambient data

tag 8, PPG 2 Ambient data

tag 1, PPG1 LED1+LED2 data

tag 7, PPG2 LED1+LED2 data

tag 2, PPG1 Ambient data

tag 8, PPG2 Ambient data

.

tag 1, PPG1 LED1+LED2 data

tag 7, PPG2 LED1+LED2 data

tag 2, PPG1 Ambient data

tag 8, PPG2 Ambient data

where:

PPGm LED1+LED2 data = the ambient corrected exposure data from LED1 and LED2 for PPGm channel PPGm Ambient data = the direct ambient corrected sample for PPGm channel

The number of bytes of data for the PPG channel is given by: 2 x 3 x K x N

where:

K = the number of active exposures as defined in the LED Sequence Control registers 0x20, 0x21, and 0x22.

N = the number of samples in the FIFO

To calculate the number of available items one can perform the following pseudo-code:

```
read the OVF_COUNTER register
read the FIFO_DATA_COUNT register
if OVF_COUNTER == 0 //no overflow occurred
    NUM_AVAILABLE_SAMPLES = FIFO_DATA_COUNT
else
    NUM_AVAILABLE_SAMPLES = 128 // overflow occurred and data has been lost
```

 $\underline{\mathsf{Table}\ 6}$ shows the FIFO data format depends on the data type being stored. Optical data, whether full ambient corrected LED exposure, ambient corrected proximity or direct ambient sampled data is left-justified, as shown in $\underline{\mathsf{Table}\ 6}$. Bits F23:F19 of the FIFO word contains the tag that identifies the data.

Table 6. Optical FIFO Data Format

		FIFO DATA FORMAT (FIFO_DATA[23:0])																						
ADC Tag (TAG[4:0]) ADC Value (FIFO_DATA[18:0])																								
Res	F23	F22	F21	F20	F19	F18	F17	F16	F15	F14	F13	F12	F11	F10	F9	F8	F7	F6	F5	F4	F3	F2	F1	F0
19- bits	T4	Т3	T2	T1	ТО	O18	O17	O16	O15	O14	O13	O12	O11	O10	О9	O8	07	O6	O5	04	О3	O2	01	00

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

FIFO_A_FULL (address 0x09)

The FIFO_A_FULL[6:0] field in the FIFO Configuration 1 register (0x09) sets the watermark for the FIFO and determines when the A_FULL bit in the Interrupt_Status register (0x00) gets asserted. The A_FULL bit will be set when the FIFO contains 128 minus FIFO_A_FULL[6:0] items. When the FIFO is almost full, if the A_FULL_EN mask bit in the Interrupt_Enable register (0x03) is set, then A_FULL bit gets asserted in the Interrupt Status 1 register and this bit is routed to the INT pin on the serial interface. This condition should prompt the applications processor to read samples off of the FIFO before it fills. The A_FULL bit is cleared when the status register is read.

The application processor can read both the FIFO_WR_PTR and FIFO_RD_PTR to calculate the number of items available in the FIFO, or just read the OVF_COUNTER and FIFO_DATA_COUNT registers, and read as many items as it needs to empty the FIFO. Alternatively, if the applications always responds much faster than the selected sample rate, it could just read 128 minus FIFO_A_FULL[6:0] items when it gets A_FULL interrupt and be assured that all data from the FIFO are read.

FIFO RO (Address 0x0A)

The FIFO_RO bit in the FIFO Configuration 2 register (0x0A) determines whether samples get pushed on to the FIFO when it is full. If push is enabled when FIFO is full, old samples are lost. If FIFO_RO is not set, the new sample is dropped and the FIFO is not updated.

A_FULL_TYPE (Address 0x0A)

The A_FIFO_TYPE bit defines the behavior of the A_FULL interrupt. If the A_FIFO_TYPE bit is set low, the A_FULL interrupt gets asserted when the A_FULL condition is detected and cleared by status register read, but reasserts for every sample if the A_FULL condition persists. If A_FIFO_TYPE

bit is set high, the A_FULL interrupt gets asserted only when a new A_FULL condition is detected. The interrupt gets cleared on Interrupt Status 1 register read, and does not re-assert for every sample until a new a-full condition is detected.

FIFO_STAT_CLR (Address 0x0A)

The FIFO_STAT_CLR bit defines whether the A-FULL interrupt should get cleared by FIFO_DATA register read. If FIFO_STAT_CLR is set low, A_FULL and DATA_RDY interrupts do not get cleared by FIFO_DATA register read but get cleared by status register read. If FIFO_STAT_CLR is set high, A_FULL and DATA_RDY interrupts get cleared by a FIFO_DATA register read or a status register read.

FLUSH_FIFO (Address 0x0A)

The FIFO Flush bit is used for flushing the FIFO. The FIFO becomes empty and the FIFO_WR_PTR[6:0], FIFO_RD_PTR[6:0], FIFO_DATA_COUNT[7:0] and OVF_COUNTER[6:0] get reset to zero. FLUSH_FIFO is a self-clearing bit.

TIME_STAMP_EN (Address 0x0A)

When TIME_STAMP_EN bit is set to 1, the 19 bits time stamp gets pushed to the FIFO along with its Tag for every 8 samples. This timestamp is useful for aligning data from two devices after the host reads the FIFOs of those devices. When TIME_STAMP_EN bit is set to 0, the sample counter is not pushed to FIFO.

Pseudo-Code Example of Initializing the Optical AFE

The following pseudo-code shows an example of configuring MAX86140/MAX86141 for a SpO₂ applications, where LED1 and LED2 are IR and red LED, respectively.

```
DEVICE OPEN
START;

// AFE Initialization

WRITE RESET[0] to 0x1;

WRITE RESET[0] to 0x1;

WRITE SHDN[0] to 0x1;

READ Interrupt Status 1;

READ Interrupt Status 2;

WRITE PPG_TINT[1:0] to 0x3;

WRITE PPG_TINT[1:0] to 0x3;

WRITE PPG_ADC_RGEI:0] to 0x2;

WRITE PPG_ADC_RGEI:0] to 0x2;

WRITE PPG_ADC_RGEI:0] to 0x3;

WRITE SMP_AVE[2:0] to 0x0;

WRITE PPG_SR[4:0] to 0x0;

WRITE PD_BIAS1[2:0] to 0x3;

WRITE PD_BIAS1[2:0] to 0x0;

WRITE PD_BIAS2[2:0] to 0x0;

WRITE PD_BIAS2[2:0] to 0x0;

WRITE LED_RCE[1:0] to 0x3;

WRITE LEDL_RCE[1:0] to 0x3;

WRITE LEDL_DRV[1:0] to 0x2;

WRITE LEDL_DRV[1:0] to 0x2;

WRITE LEDL_DRV[1:0] to 0x2;

WRITE LEDL_DRV[1:0] to 0x2;

WRITE FIFO_A FULL[6:0] to 0x1;

WRITE A_FULL_EN to 0x1;

WRITE LEDC(3:0] to 0x2;

WRITE LEDC(3:0] to 0x2;

WRITE LEDC(3:0] to 0x2;

WRITE LEDC(3:0] to 0x3;

WRITE LEDC(3:0] to 0x2;

WRITE LEDC(3:0] to 0x2;

WRITE LEDC(3:0] to 0x3;

WRITE LEDC(3:0] to 0x3;

WRITE LEDC(3:0] to 0x6;

WRITE LEDC(3:0] to 0x6;

WRITE LEDC(3:0] to 0x6;

WRITE LEDC(5:0] to 0x6;
```

Pseudo-Code for Interrupt Handling with FIFO_A_FULL

The following pseudo-code shows an example on handling the Interrupt when using A FULL Interrupt.

```
Interrupt handlervoid irqHandler(void)
{
    uint8_t intStatus;
    //Read Status
    ReadReg(0x00, &intStatus);

if ( intStatus& 0x80 ) { //A FULL RDY
    device_data_read(); //Data Read Routine
```

Pseudo-Code Example of Reading Data from FIFO

Example pseudo-code for reading data from FIFO when using single photodiode channel and two LED channels.

```
void device data read(void) {
    uint8_t sampleCnt;
    uint8 t regVal;
    uint8 t dataBuf[128*2*3];
                                  //128 FIFO samples, 2 channel, 3 byte/channel
    int led1[32];
    int led2[32];
    ReadReg(0x07, &sampleCnt);
    //Read FIFO
    ReadFifo(dataBuf, sampleCnt * 3);
    int i = 0;
    for ( i = 0; i < sampleCnt; i++ ) {
        led1[i] = ((dataBuf[i*6+0] << 16) | (dataBuf[i*6+1] << 8) | (dataBuf[i*6+2])) &
0 \times 7 \text{ ffff};
        led2[i] = ((dataBuf[i*6+3] << 16) | (dataBuf[i*6+4] << 8) | (dataBuf[i*6+5])) &
0 \times 7 \text{ffff};
    }
   }
```

Example pseudo-code for reading data from FIFO when using dual photodiode channels and two LED channels.

```
void device_data_read(void) {
   uint8_t sampleCnt;
   uint8_t regVal;
   uint8 t dataBuf[128*2*2*3]; //128 FIFO samples, 2 channel, 2 PD, 3 byte/channel
   int led1A[32];
   int led1B[32];
   int led2A[32];
   int led2B[32];
   ReadReg(0x07, &sampleCnt);
    //Read FIFO
    ReadFifo(dataBuf, sampleCnt * 3);
    int i = 0;
    for ( i = 0; i < sampleCnt; i++ ) {
        led1A[i] = ((dataBuf[i*12+0] << 16) | (dataBuf[i*12+1] << 8) | (dataBuf[i*12+2])) &
0x7ffff;
        // LED1, PD1
        led1B[i] = ((dataBuf[i*12+3] << 16) | (dataBuf[i*12+4] << 8) | (dataBuf[i*12+5])) &
0 \times 7 \text{ffff};
        // LED1, PD2
        led2A[i] = ((dataBuf[i*12+6] << 16) | (dataBuf[i*12+7] << 8) | (dataBuf[i*12+8])) &
0 \times 7 \text{ffff};
       // LED2, PD1
        led2B[i] = ((dataBuf[i*12+9] << 16) | (dataBuf[i*12+10] << 8) | (dataBuf[i*12+11]))
& 0x7ffff; // LED2, PD2
   }
   }
```

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Optical Timing

The MAX86140/MAX86141 optical controller is capable of being configured to make a variety of measurements. Each LED exposure is ambient light compensated before the ADC conversion.

The controller can be configured to pulse one, two or three LED drivers sequentially so as to make measurements at multiple wavelengths as is done in a pulse oximetry measurements or simultaneously to drive multiple LEDs such as is done with heart rate measurements on the wrist.

The controller is also configurable to measure direct ambient level for every exposure sample. The direct ambient measurement can be used to adjust the LED drive level to compensate for increased noise levels when high interfering ambient signals are present.

The following optical timing diagrams illustrate several possible measurement configurations.

One LED Pulsing with No Direct Ambient Sampling

The optical timing diagram below represents just LED1 pulsing during the exposure time with no direct ambient sampling enabled. This timing mode would be used when heart rate is being measured with a single green LED. In this mode a single optical sampled value will appear successively in the FIFO.

One LED Pulsing with Direct Ambient Sampling

The optical timing diagram below represents just LED1 pulsing during the exposure time with direct ambient sampling enabled. This timing mode would be used when heart rate is being measured with a single, green LED. In this mode a single optical sampled value followed by the ambient sampled value will appear successively in the FIFO.

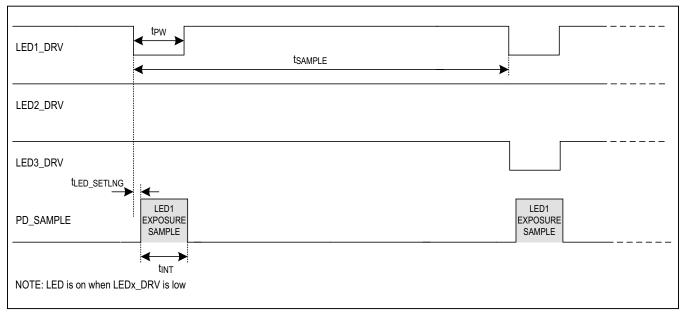


Figure 1. Timing for LED1 Pulsing with No Direct Ambient Sampling

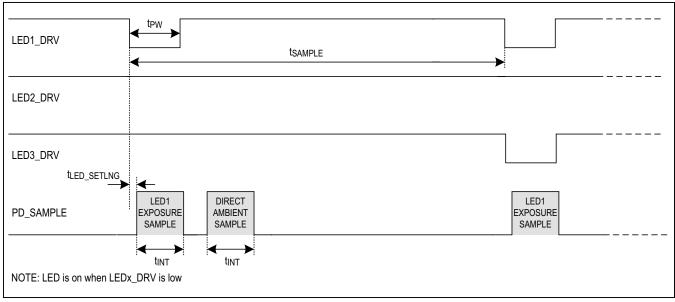


Figure 2. Timing for LED1 Pulsing with Direct Ambient Sampling

Two LEDs Pulse Simultaneously with Direct Ambient Sampling

The optical timing diagram below represents both LED1 and LED2 pulsing simultaneously with direct ambient sampling enabled. This timing mode would be used when heart rate is being measured with two green LEDs. In this mode a single optical sampled value followed by the ambient sampled value will appear in successive the FIFO locations. The direct ambient sampling is typically used to compensate the LED drive levels as the optical noise level can be elevated from ambient shot noise.

All LED Pulsing Simultaneously with Direct Ambient Sampling

The optical timing diagram below represents all three LEDs pulsing simultaneously with direct ambient sampling enabled. This timing mode would be used when heart rate is being measured with three green LEDs. In this mode, a single optical sampled value, followed by the ambient sampled value, will appear in successive the FIFO locations. The direct ambient sampling is typically used to compensate the LED drive levels as the optical noise level can be elevated from ambient shot noise.

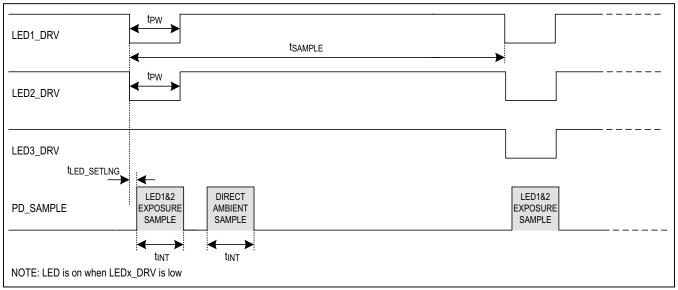


Figure 3. Timing for LED1 and LED2 Pulsing Simultaneously with Direct Ambient Sampling

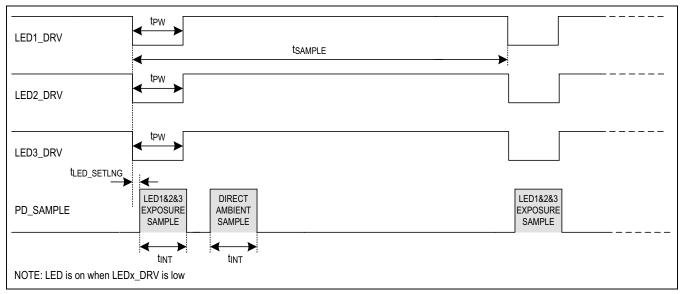


Figure 4. Timing for LED1, LED2, and LED3 Pulsing Simultaneously with Direct Ambient Sampling

Two LEDs Pulse Sequentially with Direct Ambient Sampling

The timing diagram below illustrates the optical timing when both LED1 and LED2 are enabled to pulse sequentially and direct ambient sampling is also enabled. This timing mode would be used when SpO₂ is being measured with IR and red LEDs. The optical sampled value for each LED will appear successively, followed by the direct ambient sampled value in the FIFO. when SpO₂ is being measured with IR and red LEDs. The

optical sampled value for each LED will appear successively, followed by the direct ambient sampled value in the FIFO.

All LEDs Pulse Sequential with Direct Ambient Sampling

The optical timing diagram below illustrates the three LEDs pulsing sequentially, followed by a direct ambient sample. This timing mode would be used when heart rate on a green LED is combined with and SpO₂ measurement using IR and red LEDs.

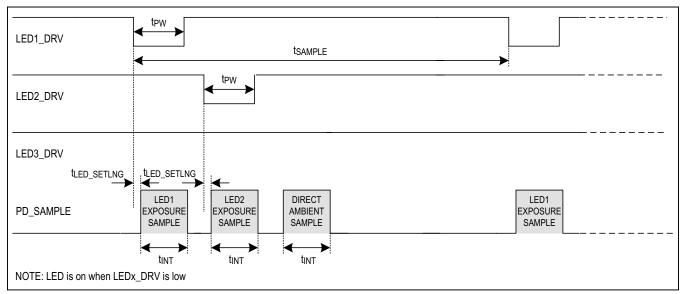


Figure 5. Timing for LED1 and LED2 Pulsing Sequentially with Direct Ambient Sampling

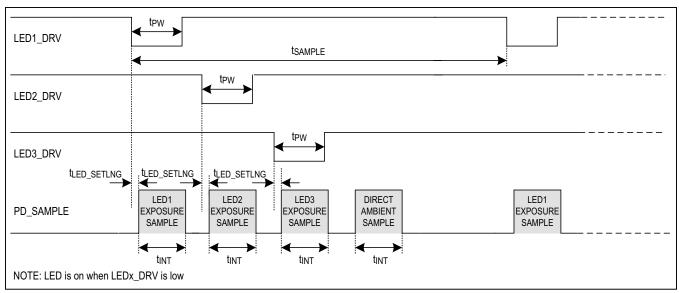


Figure 6. Timing for LED1, LED2, and LED3 Pulsing Sequentially with Direct Ambient Sampling

GPIO Configuration

The MAX86140/MAX86141 support several means by which they can synchronize to external sensors, muxes, and be extended to allow for more flexibility in the measurement configuration. This functionality is extended through the GPIO1 and GPIO2 pins and is selected by the GPIO CTRL bit field in the PPG SYNC Control register (0x10). The following describes option and the functional state of GPIO1 and GPIO2 as well as the part behavior.

GPIO CTRL[3:0] 0000 and 0001: Stand Along With and Without External Mux

Table 7. GPIO Mode 0000 and 0001

GPIO CTRL	GPIO1 FUNCTION	GPIO2 FUNCTION	COMMENT	
0000	Tristate or Mux Control	Disabled	GPIO1 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO1 will be low during exposures on LED4, LED5 or LED6, otherwise it will be high. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO1 will be tristate unless externally pulled up. GPIO2 is disabled. Sample and exposure timing is controlled by the internal 32768Hz oscillator.	
0001	Tristate or Mux Control	Input 32768Hz or 32000Hz Clock Input	If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO1 will be tristate unless	

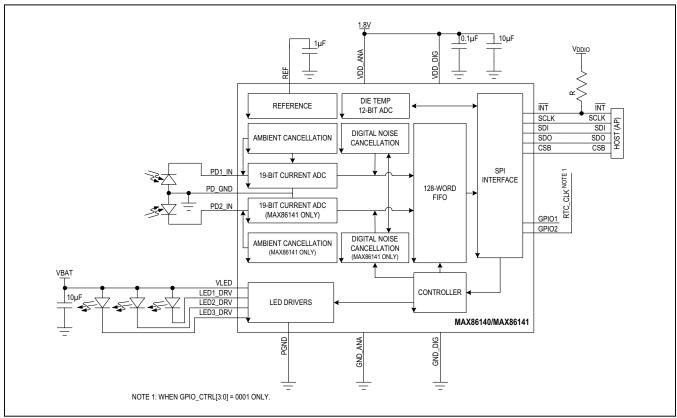


Figure 7. Block Diagram for GPIO CTRL[3:0] 0000 and 0001 Without External Mux

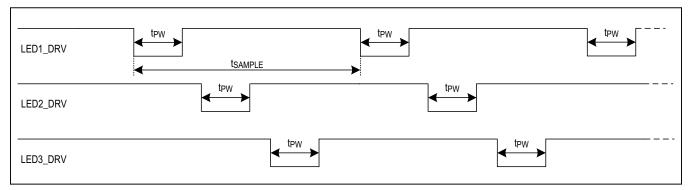


Figure 8. Timing Diagram for GPIO CTRL[3:0] 0000 and 0001 Without External Mux

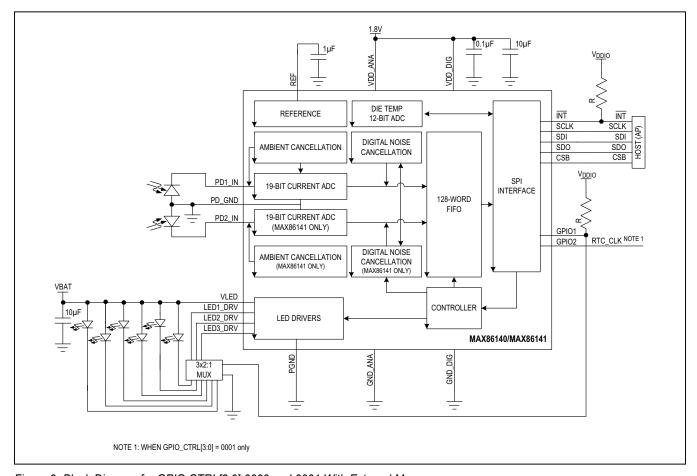


Figure 9. Block Diagram for GPIO CTRL[3:0] 0000 and 0001 With External Mux

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

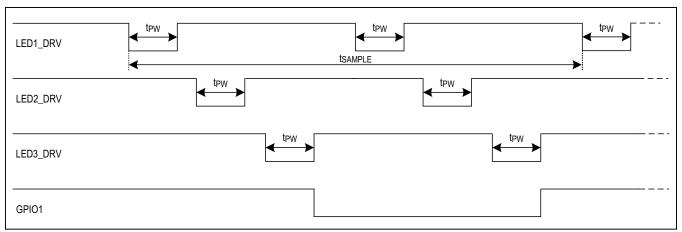


Figure 10. Timing Diagram for GPIO CTRL[3:0] 0000 and 0001 with External Mux

GPIO CTRL[3:0] 0010: Start of Sample Input with and without External Mux

Table 8. GPIO Mode 0010

GPIO CTRL	GPIO1 FUNCTION	GPIO2 FUNCTION	COMMENT
0010	Input Sample Trigger	Tristate or Mux Control	GPIO1 is defined as a sample trigger input (Slave). This input can come from an external source or from another MAX86140/ MAX86141 in master sample mode. GPIO2 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO2 will be low during exposures on LED4, LED5 or LED6, otherwise it will be high. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO2 will be tristate unless externally pulled up. Exposure timing is controlled by internal oscillator.

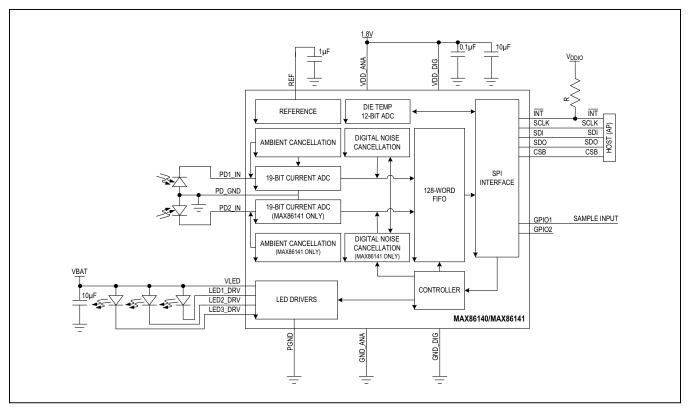


Figure 11. Block Diagram for GPIO CTRL[3:0] 0010 Without External Mux

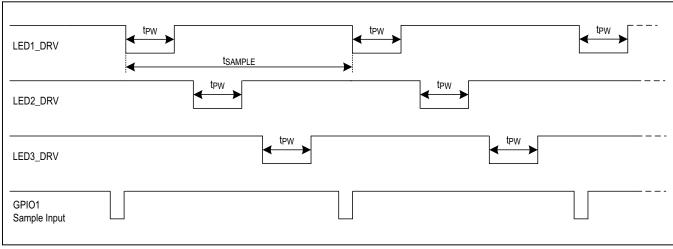


Figure 12. Timing Diagram for GPIO CTRL[3:0] 0010 Without External Mux

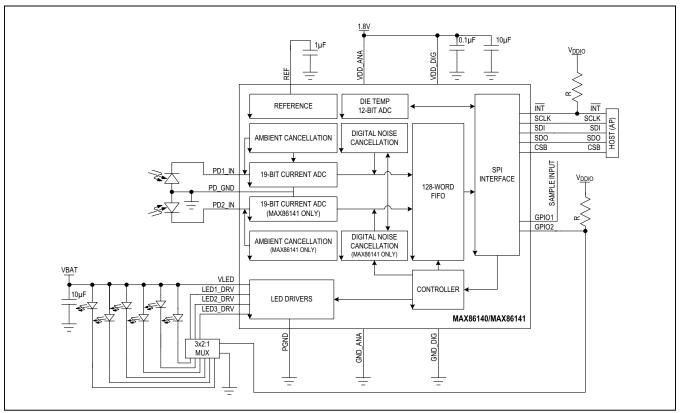


Figure 13. Block Diagram for GPIO CTRL[3:0] 0010 with External Mux

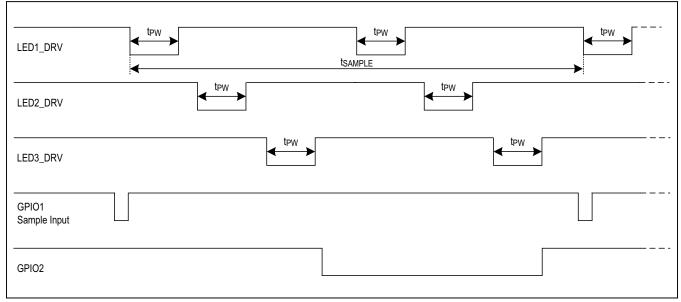


Figure 14. Timing Diagram for GPIO CTRL[3:0] 0010 with External Mux

GPIO CTRL[3:0] 0011: Start of Sample Input with External Clock

Table 9. GPIO Mode 0011

GPIO CTRL	GPIO1 FUNCTION	GPIO2 FUNCTION	COMMENT
0011	Input Sample Trigger	Input 32768Hz or 32000Hz Clock Input	GPIO1 is defined as a sample trigger input (Slave). This input can come from an external source or from another MAX86140/ MAX86141 in master sample mode. GPIO2 is an input 32768/32000Hz clock input. Exposure timing is controlled by GPIO2 clock input.

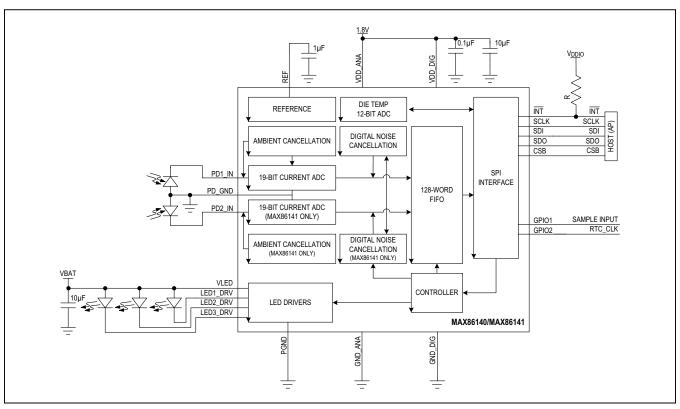


Figure 15. Block Diagram for GPIO CTRL[3:0] 0011

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

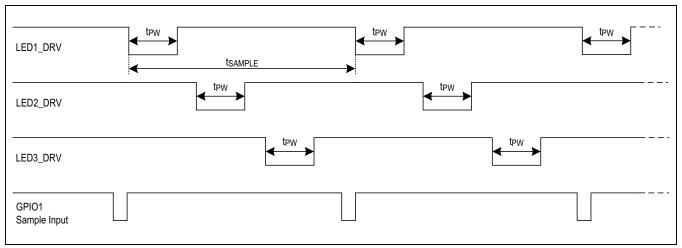


Figure 16. Timing Diagram for GPIO CTRL[3:0] 0011

GPIO CTRL[3:0] 0100: Start of Sample Output With and Without External Mux

Table 10. GPIO Mode 0100

GPIO CTRL	GPIO1 FUNCTION	GPIO2 FUNCTION	COMMENT
0100	Active Output Master Sample Output	Tristate or Mux Control	GPIO1 is defined as a master sample output. The GPIO1 output can be used to trigger a second sensor. When used with a second MAX86140/MAX86141 set to slave sample mode, the master sample timing will drive slave sample time. GPIO2 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO2 will be low during exposures on LED4, LED5 or LED6, otherwise it will be high. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO2 will be tristate unless externally pulled up. Sample and exposure timing is controlled by internal oscillator.

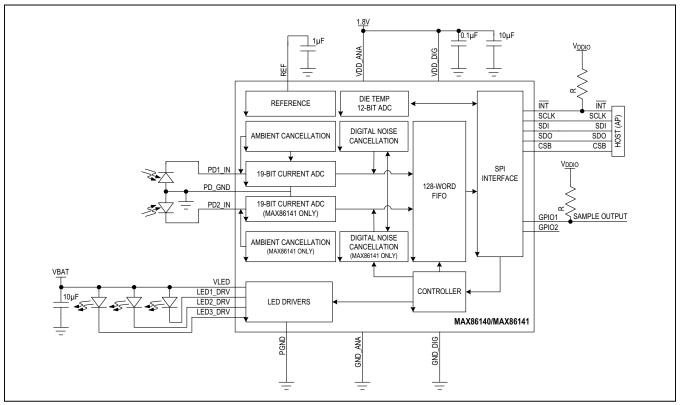


Figure 17. Block Diagram for GPIO CTRL[3:0] 0100 Without External Mux

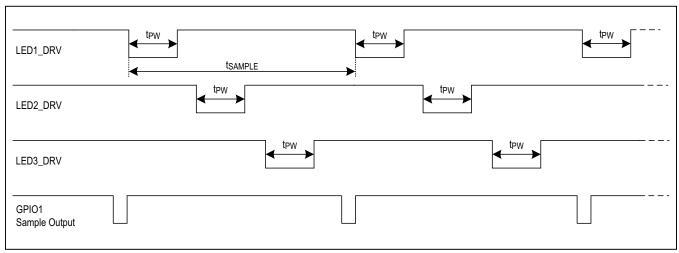


Figure 18. Timing Diagram for GPIO CTRL[3:0] 0100 Without External Mux

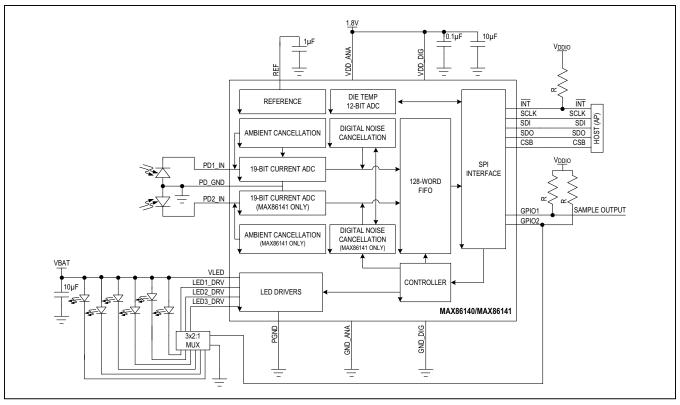


Figure 19. Block Diagram for GPIO CTRL[3:0] 0100 with External Mux

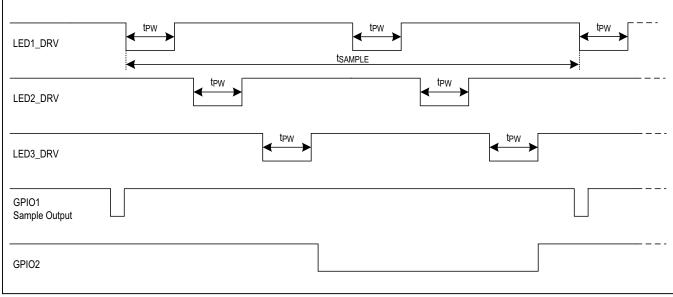


Figure 20. Timing Diagram for GPIO CTRL[3:0] 0100 with External Mux

GPIO CTRL[3:0] 0101: Start of Sample Output with RTC Input Clock

Table 11. GPIO Mode 0101

GPIO CTRL	GPIO1 FUNCTION	GPIO2 FUNCTION	COMMENT
0101	Active Output Master Sample Output	Input 32768/32000Hz Clock Input	GPIO1 is defined as a master sample output. The GPIO1 output can be used to trigger a second sensor. When used with a second MAX86140/MAX86141 set to slave sample mode, the master sample timing will drive slave sample time. GPIO2 is an input 32768/32000Hz. Exposure timing is controlled by GPIO2 clock input.

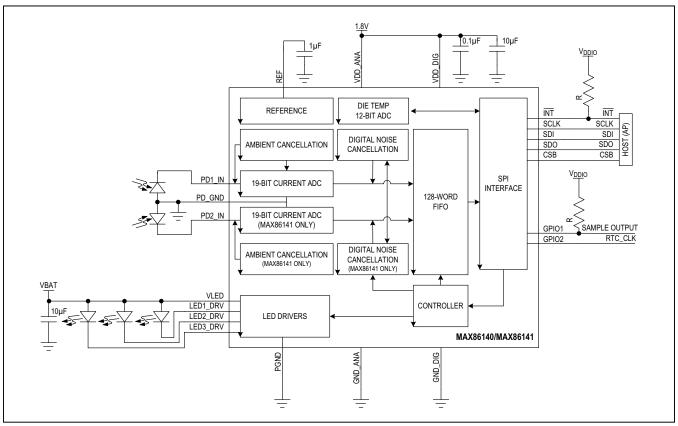


Figure 21. Block Diagram for GPIO CTRL[3:0] 0101

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

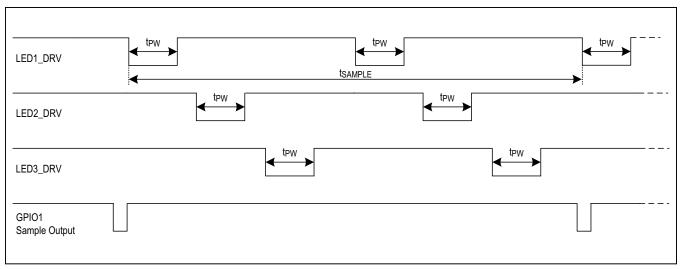


Figure 22. Timing Diagram for GPIO CTRL[3:0] 0101

GPIO CTRL[3:0] 0110 and 0111: Master/Slave with External Mux

Table 12. GPIO Mode 0110 and 0111

GPIO CTRL	GPIO1 FUNCTION	GPIO2 FUNCTION	COMMENT	
0110	Input Exposure Trigger	Tristate or Mux Control	GPIO1 is defined as an exposure trigger input (Slave). This input can come from an external source or from another MAX86140 in master sample mode. Both sample and exposure timing is controlled by the GPIO1 input. GPIO2 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO2 will be high during exposures on LED4, LED5 or LED6, otherwise it will be low. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO2 will be tristate.	
0111	Active Output Master Exposure Output	Tristate or Mux Control	GPIO1 is defined as a master sample output. The GPIO1 output can be used to trigger and second sensor. When used with a second MAX86140 set to slave exposure mode, the master exposure timing will drive slave exposure time. GPIO2 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO2 will be high during exposures on LED4, LED5 or LED6, otherwise it will be low. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO2 will be tristate. Sample and exposure time is controlled internally	

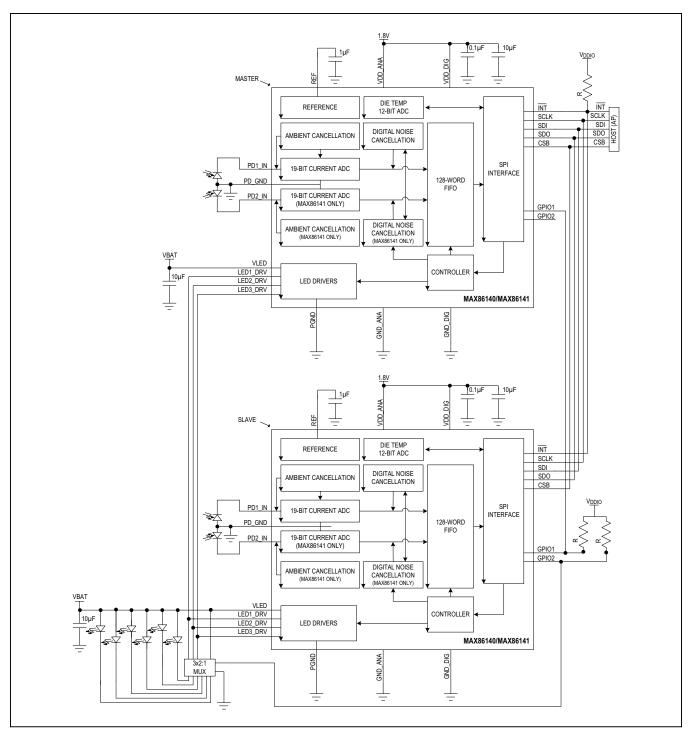


Figure 23. Block Diagram for GPIO CTRL[3:0] 0110 and 0111 with A Single External Mux

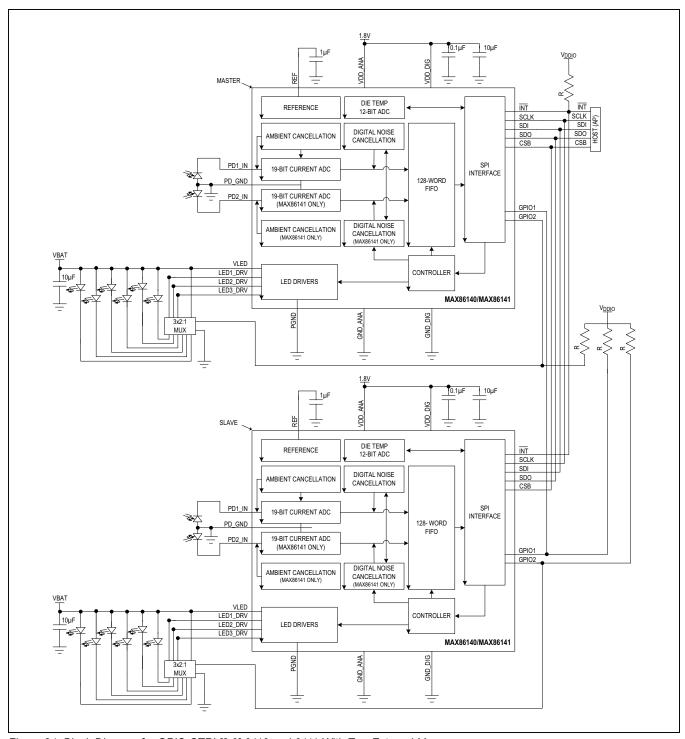


Figure 24. Block Diagram for GPIO CTRL[3:0] 0110 and 0111 With Two External Muxes

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

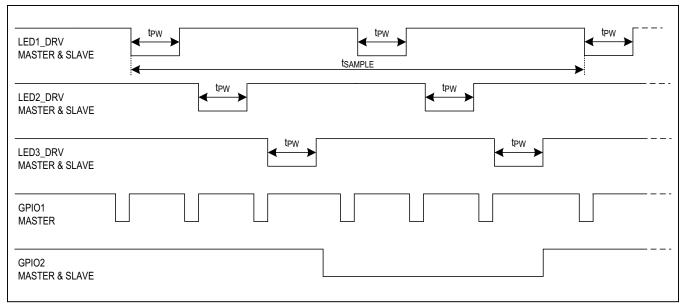


Figure 25. Timing Diagram for GPIO CTRL[3:0] 0110 and 0111 With External Mux

GPIO CTRL[3:0] 0110 and 1000: Master/Slave with and without External Mux

Table 13. GPIO Mode 0110 and 1000

GPIO CTRL	GPIO1 FUNCTION	GPIO2 FUNCTION	COMMENT
0110	Input Exposure Trigger	Tristate or Mux Control	GPIO1 is defined as an exposure trigger input (Slave). This input can come from an external source or from another MAX86140/MAX86141 in master sample mode. Both sample and exposure timing is controlled by the GPIO1 input. GPIO2 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO2 will be low during exposures on LED4, LED5, or LED6, otherwise it will be high. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO2 will be tristate unless externally pulled up.
1000	Active Output Master Exposure Output	Input 32768/32000Hz Clock Input	GPIO1 is defined as a master sample output. The GPIO1 output can be used to trigger and second sensor. When used with a second MAX86140 /MAX86141 set to slave exposure mode, the master exposure timing will drive slave exposure time. GPIO2 is an input 32768/32000Hz. Sample and exposure timing is controlled by GPIO2 clock input.

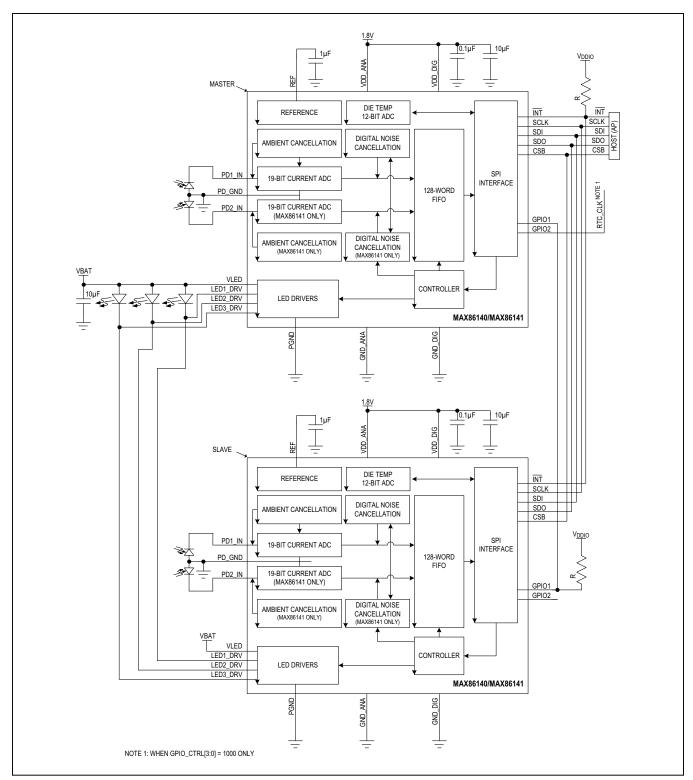


Figure 26. Block Diagram for GPIO CTRL[3:0] 0110 and 1000 Without External Mux

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

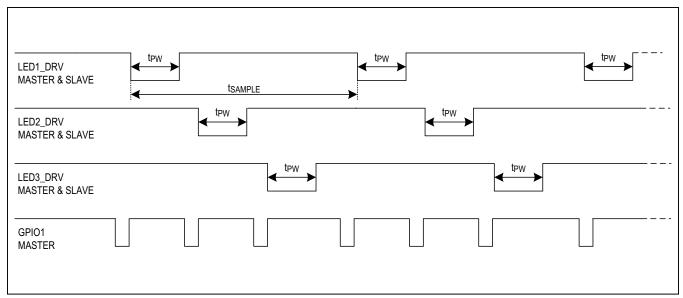


Figure 27. Timing Diagram for GPIO CTRL[3:0] 0110 and 1000 Without External Mux

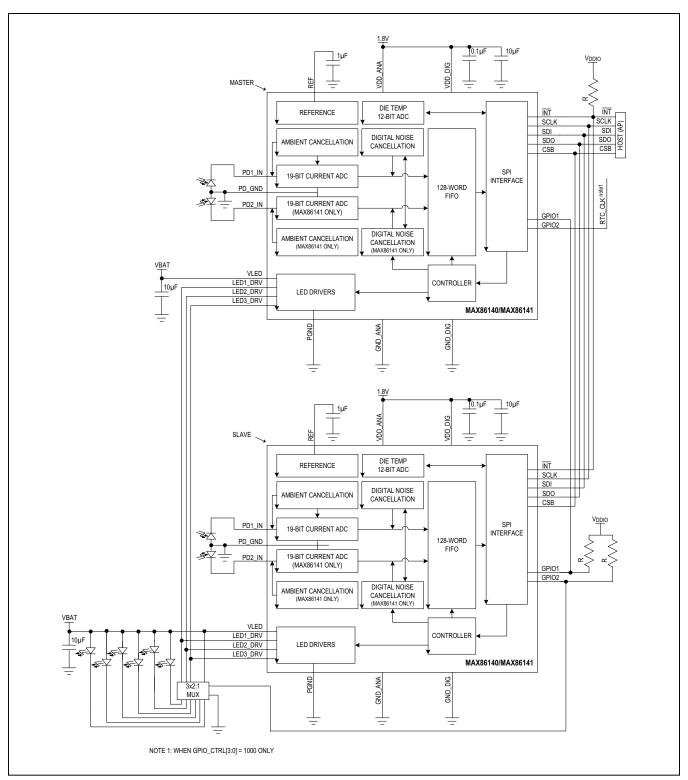


Figure 28. Block Diagram for GPIO CTRL[3:0] 0110 and 1000 With External Mux

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

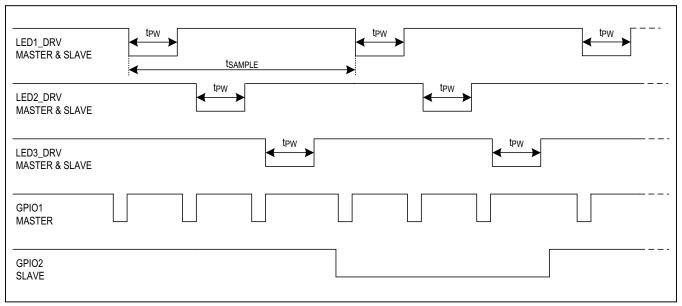


Figure 29. Timing Diagram for GPIO CTRL[3:0] 0110 and 1000 with External Mux

GPIO CTRL[3:0] 1001 Hardware Sync

Table 14. GPIO Mode 1001

GPIO	GPIO1	GPIO2	COMMENT
CTRL	FUNCTION	FUNCTION	
1001	Input HW_FORCE_ SYNC	Input 32768Hz or 32000Hz Clock Input	GPIO1 is defined as a start of sample sync input. The rising edge of GPIO1 causes the present sample sequence to be terminated and reinitiated on the next rising edge of GPIO2 input. GPIO2 is an input 32768/32000Hz. Sample and exposure timing is controlled by GPIO2 clock input.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Proximity Mode Function

The MAX86140/MAX86141 includes an optical proximity function that could significantly reduce energy consumption and extend battery life when the sensor is not in contact with the skin. Proximity mode is enabled by setting PROX_INT_EN bit field to 1 in the Interrupt Enable 2 register (address 0x02[4]), setting a threshold in the PROX_INT_THRESH register (address 0x14) and assigning an LED current in the PILOT_PA (address 0x29). Proximity mode also requires that LED Sequence Register 1, field LEDC1 (address [3:0]) to be assigned to a specific measurement and that measurement is correctly connected to a light source. The LEDC1 measurement is used to detect the optical presents of a reflecting object in proximity mode and thus must be valid for proximity mode to work.

When enabled, the Proximity Detect Interrupt (register 0x01[4]) will be asserted and proximity mode will be entered when the value of the measurement assigned to LEDC1 drops below the PROX_INT_THRESH. When entering proximity mode, the MAX86140/MAX86141 will drop the current to the LED(s) assigned to LEDC1 to PILOT_PA value, reduce the sample rate to 8sps and operates in Low Power mode. The intent here is to both reduce the consumed LED current and MAX86140/MAX86141 power to a minimum during situations where there is no reflective returned signal. It is also intended to reduce the emitted light to a minimum or even below that perceivable by the human eye.

When the proximity mode is enabled and the measurement assigned to LEDC1 with the LED current in PILOT_PA exceeds the PROX_INT_THRESH, the MAX86140/MAX86141 will also generate a Proximity Detect Interrupt (register 0x01[4]). In such an event MAX86140/MAX86141 will switch to normal mode, changing the sample rate to that assigned in PPG Configuration 2 register (address 0x12) bit field PPG_SR and the LED current assigned to the measurement of LEDC1. Therefore, the MAX86140 is able to switch to proximity mode and back to normal mode without microprocessor interaction.

The threshold applied to PROX_INT_THRESH should be well below that of a usable signal at the maximum LED current applied to LEDC1 but high enough to not be triggered by noise from distant objects. Further the current assigned to PILOT_PA should be much lower than that assigned to LEDx_PA in normal mode. This will ensure that the signal obtained from LEDC1 will drop significantly when entering proximity mode, thus providing enough hysteresis to eliminate multiple interrupts being generated at the proximity/normal mode transition.

To guarantee that MAX86140/MAX86141 will successfully transition from proximity mode to normal mode, the PROX_INT_THRESH should be low enough and the PILOT_PA high enough to ensure that the device mounted on the darkest of skins will return a signal above the PROX_INT_THRESH at the PILOT_PA current.

Note that proximity mode is only available to LEDC1 measurements that are made with PD1_IN optical channel without an external mux. When proximity mode is active, LEDC2~LEDC6 will be ignored. The threshold applied to PROX_INT_THRESH register are in units of 2048LSBs.

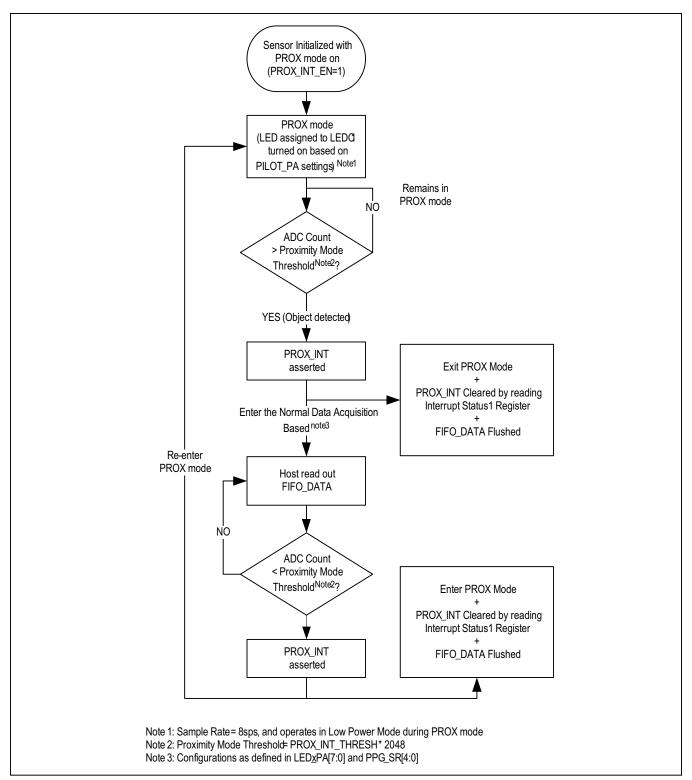


Figure 30. Proximity Function Flow Diagram

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Picket Fence Detect-and-Replace Function

Under typical situations, the rate of change of ambient light is such that the ambient signal level during exposure can be accurately predicted and high levels of ambient rejection are obtained. However, it is possible to have situations where the ambient light level changes extremely rapidly, for example when in a car with direct sunlight exposure passes under a bridge and into a dark shadow. In these situations, it is possible for the MAX86140/MAX86141 ambient light correction (ALC) circuit to fail and produce and erroneous estimation of the ambient light during the exposure interval. The MAX86140/MAX86141 has a built-in algorithm, called the picket fence function, that can correct for these extreme conditions resultant failure of the ALC circuit.

The picket fence function works on the basis that the extreme conditions causing a failure of the ALC are rare events. These events resulting in a large deviation from the past sample history of a normal PPG riding on a motion effect signal, which normally would change relatively slowly with respect to the sampling interval. Under these conditions, it is possible to detect sample values that are well outside the normal sample to sample deviation and replace those samples with an extrapolated value based on the relatively recent history of samples.

The picket fence function is enabled by setting PF_ENABLE (address 0x16[7]) bit to 1. The power on reset default of MAX86140/MAX86141 has the picket fence function disabled. The function begins with detecting a picket fence event. Detection is done by taking the absolute value of the difference between the present ADC converted value a predicted point, called an estimation error, and comparing this estimation error to a threshold. If the estimation error exceeds the threshold, then the present ADC converted point is considered a picket fence event.

The predicted point referred to above is computed in one of two ways, set by the value in the PF_ORDER (address 0x16[6]) bit. If PF_ORDER = 0 the predicted point is

simply the previous ADC converted point. If PF_ORDER = 1, the predicted point is a least square fit extrapolation based on the previous four picket fence outputs, which, under normal circumstances, is identical to the ADC converted inputs.

The threshold used in detecting a picket fence event is a low passed version of the running estimation error computed above times a multiplier. The multiplier used is set by the THRESHOLD_SIGMA_MULT (address 0x16[1:0]) bits and can be 4, 8, 16, or 32 times the running low-passed filter output of the estimation error.

The low-pass filter function is controlled by two parameters, the IIR_TC (address 0x16[5:4]) bits and IIR_INIT_VALUE (address 0x16[3:2]) bits. The IIR_TC bits control the filters time constant and are adjustable from 8 to 64 samples. The IIR_INIT_VALUE bits control the initial values for the IIR low pass filter when the algorithm is initialized.

When a picket fence event is detected, the option of how to extrapolate the correct point is again controlled by the PF_ORDER bit. This point can be identical as the previous point (PF_ORDER = 0) or a least square fit extrapolation based on the previous four ADC converted points (PF_ORDER = 1).

<u>Figure 31</u> below illustrates the function in block diagram form. If the picket fence algorithm is enabled (bit PF_ENABLE = 1), the input from the ADC, s(n) generates p(n) in a way that is dependent on the value of the PF_ORDER bit. Value s(n) is subtracted from p(n) and turned into a positive number d(n) and fed into the IIR low-pass filter producing value lpf(n). The output of the low pass filter lpf(n) is then multiplied by a user constant, THRESHOLD_SIGMA_MULT to produce the picket fence threshold, PFT(n). The value d(n) is then compared to this threshold and if greater than the PFT(n), the point s(n) is replaced with the point p(n).

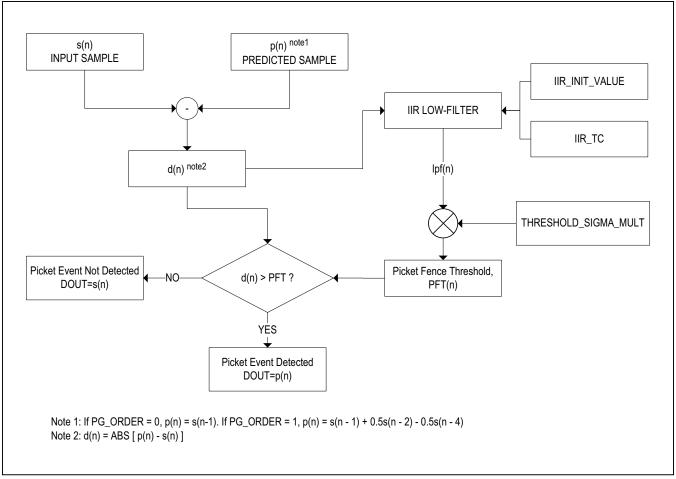


Figure 31. Picket Fence Function Flow

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

This scheme essentially produces a threshold that tracks the past returned optical signal with a band width based on the past historical change sample to sample. Figure 32 below illustrates graphically how the threshold detection scheme works on a real PPG signal. Note that the black

trace is the real ADC sample points, the red traces are the output of the low-pass filter of the error estimation mirrored around the ADC points and the blue traces are the threshold values.

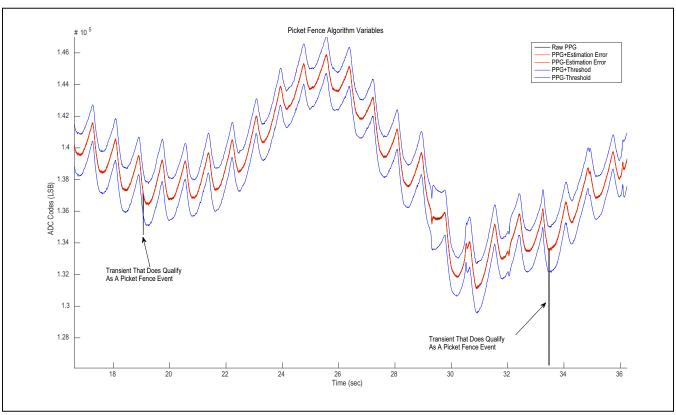


Figure 32. Picket Fences Variables In A PPG Waveform

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

The recommended settings for the picket fence algorithm are the default power on reset values for all registers but THRESHOLD_SIGMA_MULT bits. Here it is recommended that the 32x value 0x3 be used so only large excursions are classified as picket fence events. Lower values of THRESHOLD_SIGMA_MULT can cause the algorithm to go off track with extremely noisy waveform.

Photo Diode Biasing

The MAX86140/MAX86141 provides multiple photo diode biasing options (see <u>Table 15</u>). These options allow the MAX86140/MAX86141 to operate with a large range of photo diode capacitance. The PDBIAS values adjust the PD_IN bias point impedance to ensure that the photo diode settles rapidly enough to support the sample timing. As the PDBIAS values goes up, the input-referred noise of the MAX86140/MAX86141 goes up. The relationship between PDBIAS and noise with increasing photo diode capacitance is illustrated in the "Input Referred Noise vs. PD Capacitance" graph of the <u>Typical Operating Characteristics</u> section. Because of the increased noise with PDBIAS, the lowest recommended PDBIAS values should be used for a given photo diode capacitance.

Layout Guidelines

The MAX86140/MAX86141 is a high dynamic range analog front-end (AFE) and its performance can be adversely impacted by the physical printed circuit board (PCB) layout. Maxim recommends that all bypass recommendations in the pin table be followed. Specifically, it is recommended that the VDD_ANA and VDD_DIG pins be shorted at the PCB. Maxim also recommends that GND_ANA, GND_DIG, and PGND be shorted to a single PCB ground plane. These three pins have been assigned along a single column so they can be shorted and combined into a single via on the edge of the WLP grid array.

The combined VDD_ANA and VDD_DIG pins should then be decoupled with a $0.1\mu F$ or larger ceramic chip capacitor to the PCB ground plane. In addition, the VREF pin should be decoupled to the PCB GND plane with a $1.0\mu F$ ceramic capacitor. The voltage on the VREF pin is nominally 1.21V, so a 6.3V rated ceramic capacitor should be adequate for this purpose. It is recommended that all decoupling caps use individual vias to the PCB GND plane to avoid mutual impedance coupling between decoupled supplies when sharing vias.

The most critical aspect of the PCB layout of MAX86140/ MAX86141 is the handling of the PD IN and PD GND nodes. Parasitic capacitive coupling to the PD IN can result in additional noise being injected into the MAX86140/MAX86141 front-end. To minimize external interference coupling to PD IN, it is recommended that the PD IN node be fully shielded by the PD GND node. An example of this recommendation is shown below. In the three layers shown, the PD_IN node is shielded with a coplanar PD GND trace on the top layer, the layer on which the MAX86140/MAX86141 is mounted. On the bottom layer, the photo diode cathode is entirely shielded with the PD GND shield, which is also the photo diode anode. Note, also, that the PD GND shield also is extended below the photo diode. This is done because, in most photo diodes, the cathode is the bulk of the silicon. Therefore, shielding beneath the photo diode will terminate the capacitance to the bulk or cathode side to the reference node (PD GND). On the layer just above the bottom (layer 5, in this case), the section of the GND plane has been opened up, connected to PD GND to shield the PD IN node below the photo diode cathode contact. Finally, the PD GND pin should only be attached to the PCB GND in only one point. This is shown on the top layer.

Table 15. Recommended PDBIAS Values Based on the Photo Diode Capacitance

PDBIAS<2:0>	PHOTO DIODE CAPACITANCE		
0x001	0pF to 65pF		
0x101	65pF to 130pF		
0x110	130pF to 260pF		
0x111	260pF to 520pF		
All other values	Not recommended		

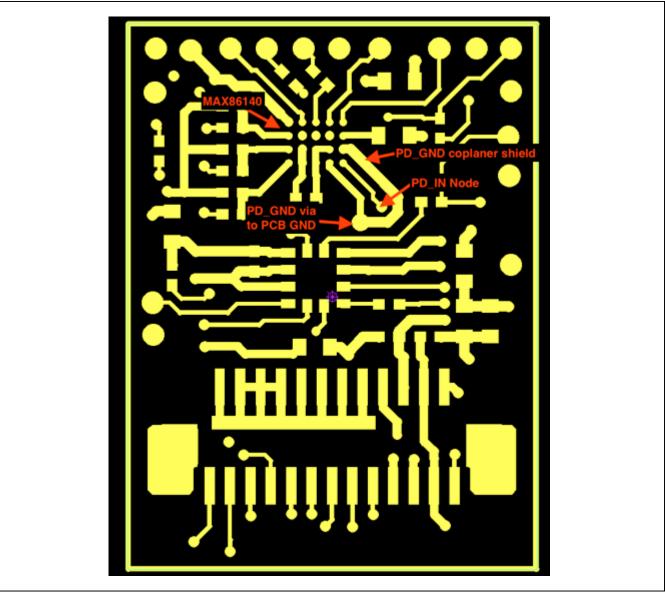


Figure 33. Example PCB Layout, Layer 1 (Top, MAX86140)

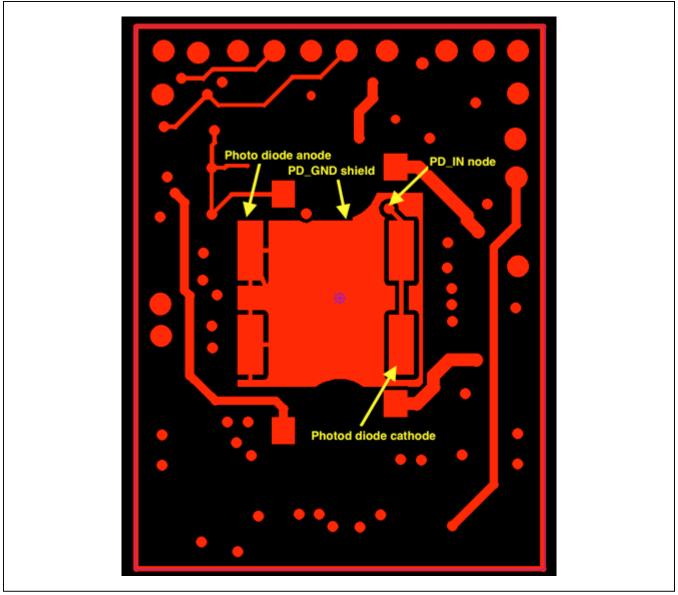


Figure 34. Example PCB Layout, Layer 6 (Bottom, Optical Layer)

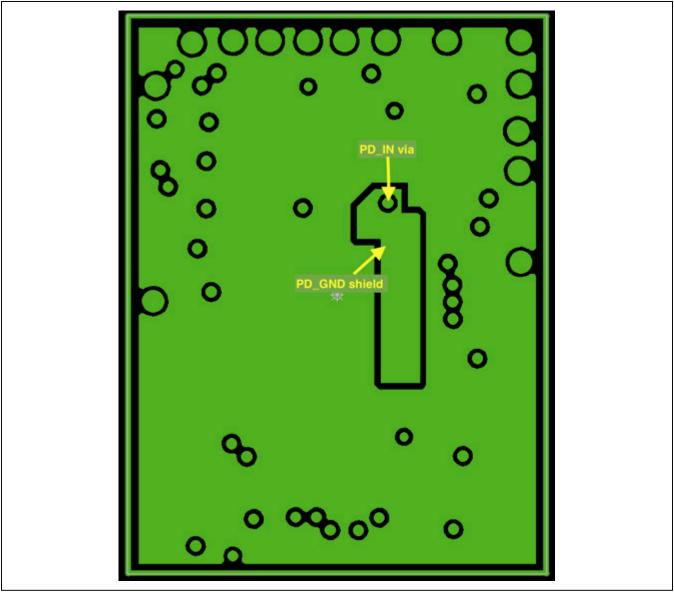


Figure 35. Example PCB Layout, Layer5 (Ground Layer)

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

SPI Timing

Detailed SPI Timing

The detailed SPI timing is illustrated below. The timings indicated are all specified in the *Electrical Characteristics* table.

Single-Word SPI Register Read/Write Transaction

The MAX86140/MAX86141 is SPI/QSPI/Micro-wire/DSP compatible. The operation of the SPI interface is shown below. Data is strobed into the MAX86140/MAX86141 on the SCLK rising edge while clocked out on the SCLK falling edge. All single-word SPI read and write operations are done in a 3-byte, 24 clock cycle SPI instruction framed by a CSB low interval. The content of the SPI operation con-

sists of a one-byte register address (A[7:0]), followed by a one-byte command word that defines the transaction as write or read, followed by a single-byte data word either written to, or read from, the register location provided in the first byte.

Write mode operations will be executed on the 24th SCLK rising edge using the first three bytes of data available. In write mode, any data supplied after the 24th SCLK rising edge will be ignored. Subsequent writes require CSB to deassert high and then assert low for the next write command. A rising CSB edge preceding the 24th rising edge of SCLK by tCSA (detailed SPI timing diagram), will result in the transaction being aborted.

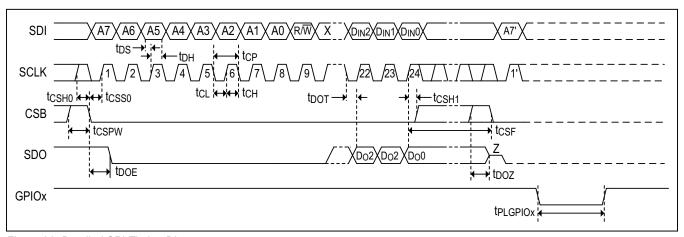


Figure 36. Detailed SPI Timing Diagram

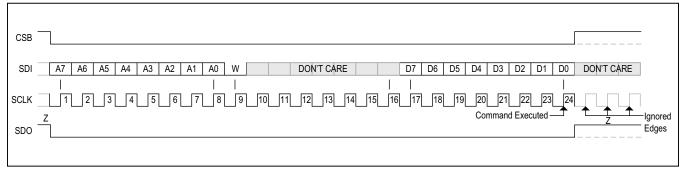


Figure 37. SPI Write Transaction

Read mode operations will access the requested data on the 16th SCLK rising edge, and present the MSB of the requested data on the following SCLK falling edge, allowing the μ C to latch the data MSB on the 17th SCLK rising edge. Configuration and status registers are available through normal mode readback sequences. FIFO reads must be performed with a burst mode FIFO read (see <u>SPI FIFO Burst Mode Read Transaction</u>). If more than 24 SCLK rising edges are provided in a normal read sequence, the excess edges will be ignored and the device will read back zeros.

SPI FIFO Burst Mode Read Transaction

The MAX86140/MAX86141 provides a FIFO burst read mode to increase data transfer efficiency. The first 16 SCLK cycles operate exactly as described for the normal

read mode, the first byte being the register address, the second being a read command. The subsequent SCLKs consist of FIFO data, 24 SCLKs per word. All words in the FIFO should be read with a single FIFO burst read command.

Each FIFO sample consists of 3 bytes per sample and thus requires 24 SCLKs per sample to readout. The first byte (SCLK 16 to 23) consists of a tag indicating the data type of the subsequent bits. Following the tag is the MSBs of the subsequent data (MSB, MSB-1, and MSB-2). The next byte (SCLK 24 to 31) consists of data bits MSB-3 to MSB-19. The final byte of each sample (SCLK 32 to 40) consists of the data LSB bits. The number of words in the FIFO depends on the FIFO configuration. See *FIFO Configuration* for more details the FIFO configuration and readout.

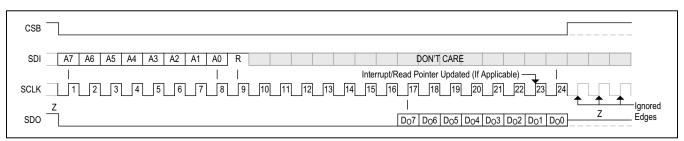


Figure 38. SPI Read Transaction

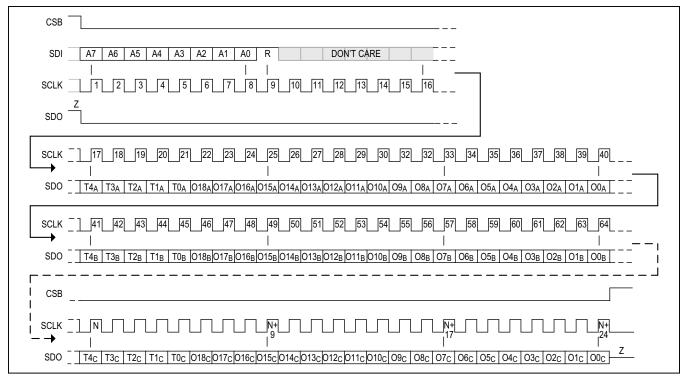


Figure 39. SPI FIFO Burst Mode Read Transaction

Register Map

User Register Map

ADDRESS	NAME	MSB							LSB
Status							l	I	
0x00	Interrupt Status 1[7:0]	A_FULL	DATA_ RDY	ALC_ OVF	PROX_ INT	LED_ COMPB	DIE_ TEMP_ RDY	VDD_ OOR	PWR_ RDY
0x01	Interrupt Status 2[7:0]	_	_	_	_	-	_	_	SHA_ DONE
0x02	Interrupt Enable 1[7:0]	A_FULL_ EN	DATA_ RDY_EN	ALC_ OVF_EN	PROX_ INT_EN	LED_ COMPB_ EN	DIE_ TEMP_ RDY_EN	VDD_ OOR_EN	I
0x03	Interrupt Enable 2[7:0]	П	-	_	_	_	_	_	SHA_ DONE_ EN
FIFO			,	,	,		,		
0x04	FIFO Write Pointer[7:0]	_			FIF	D_WR_PTR	[6:0]		
0x05	FIFO Read Pointer[7:0]	_			FIF	O_RD_PTR	[6:0]		
0x06	Over Flow Counter[7:0]	_			OVF	_COUNTER	R[6:0]		
0x07	FIFO Data Counter[7:0]		,	F	IFO_DATA	_COUNT[7:0	0]		
0x08	FIFO Data Register[7:0]				FIFO_D	ATA[7:0]			
0x09	FIFO Configuration 1[7:0]	_			FIF	O_A_FULL[6:0]		
0x0A	FIFO Configuration 2[7:0]	-	-	_	FLUSH_ FIFO	FIFO_ STAT_ CLR	A_FULL_ TYPE	FIFO_ RO	_
System Cont	rol								
0x0D	System Control[7:0]	-	_	_	_	SINGLE_ PPG	LP_ MODE	SHDN	RESET
PPG Configu	ration								
0x10	PPG Sync Control[7:0]	TIME_ STAMP_ EN	_	_	SW_ FORCE_ SYNC		GPIO_C	TRL[3:0]	
0x11	PPG Configuration 1[7:0]	ALC_ ADD_ PPG2_ADC_ DISABLE OFFSET RGE[1:0]				PPG1_ADC_ RGE[1:0] PPG_TINT[1:0]		NT[1:0]	
0x12	PPG Configuration 2[7:0]	PPG_SF			0] SMP_A		MP_AVE[2:	VE[2:0]	
0x13	PPG Configuration 3[7:0]	LED_SE	ΓLNG[1:0]	DIG_ FILT_ SEL	_	_	BURST_I	RATE[1:0]	BURST_ EN
0x14	Prox Interrupt Threshold[7:0]			Р	ROX_INT_	THRESH[7:	0]		
0x15	Photo Diode Bias[7:0]	1	F	DBIAS2[2:0)]	_	F	PDBIAS1[2:0)]

Register Map (continued)

ADDRESS	NAME	MSB							LSB
PPG Picket F	Fence Detect and Replac	е			l				I
0x16 Picket Fence[7:0]		PF_ ENABLE	PF_ ORDER	IIR_T	C[1:0]	IIR_INIT_\	/ALUE[1:0]		HOLD_ MULT[1:0]
LED Sequen	ce Control								
0x20	LED Sequence Register 1[7:0]		LEDC	2[3:0]			LEDC	1[3:0]	
0x21	LED Sequence Register 2[7:0]		LEDO	24[3:0]			LEDC	3[3:0]	
0x22	LED Sequence Register 3[7:0]		LEDO	6[3:0]			LEDC	5[3:0]	
LED Pulse A	mplitude								
0x23	LED1 PA[7:0]				LED1_	DRV[7:0]			
0x24	LED2 PA[7:0]				LED2_	DRV[7:0]			
0x25	LED3_PA[7:0]				LED3_	DRV[7:0]			
0x26	LED4 PA[7:0]				LED4_	DRV[7:0]			
0x27	LED5 PA[7:0]				LED5_	DRV[7:0]			
0x28	LED6 PA[7:0]				LED6_	DRV[7:0]			
0x29	LED PILOT PA[7:0]				PILOT	_PA[7:0]			
0x2A	LED Range 1[7:0]	_	_	LED3_F	RGE[1:0]	LED2_F	RGE[1:0]	LED1_F	RGE[1:0]
0x2B	LED Range 2[7:0]	_	_	LED6_F	RGE[1:0]	LED5_F	RGE[1:0]	LED4_F	RGE[1:0]
PPG1_HI_RE	S_DAC								
0x2C	S1 HI RES DAC1[7:0]	S1_ HRES_ DAC1_ OVR	_		S1_HRES_DAC1[5:0]				
0x2D	S2 HI RES DAC1[7:0]	S2_ HRES_ DAC1_ OVR	-	S2_HRES_DAC1[5:0]					
0x2E	S3 HI RES DAC1[7:0]	S3_ HRES_ DAC1_ OVR	-	S3_HRES_DAC1[5:0]					
0x2F	S4 HI RES DAC1[7:0]	S4_ HRES_ DAC1_ OVR	-	S4_HRES_DAC1[5:0]					
0x30	S5 HI RES DAC1[7:0]	S5_ HRES_ DAC1_ OVR	-	S5_HRES_DAC1[5:0]					
0x31	S6 HI RES DAC1[7:0]	S6_ HRES_ DAC1_ OVR	-	S6_HRES_DAC1[5:0]					

Register Map (continued)

ADDRESS	NAME	MSB							LSB
PPG2_HI_RE	S_DAC					l .	l .	1	
0x32	S1 HI RES DAC2[7:0]	S1_ HRES_ DAC2_ OVR	-			S1_HRES	_DAC2[5:0]		
0x33	S2 HI RES DAC2[7:0]	S2_ HRES_ DAC2_ OVR	-			S2_HRES	_DAC2[5:0]		
0x34	S3 HI RES DAC2[7:0]	S3_ HRES_ DAC2_ OVR	_			S3_HRES	_DAC2[5:0]		
0x35	S4 HI RES DAC2[7:0]	S1_ HRES_ DAC2_ OVR	_			S4_HRES	_DAC2[5:0]		
0x36	S5 HI RES DAC2[7:0]	S2_ HRES_ DAC2_ OVR	_			S5_HRES	_DAC2[5:0]		
0x37	S6 HI RES DAC2[7:0]	S3_ HRES_ DAC2_ OVR	_			S6_HRES	_DAC2[5:0]		
Die Temperat	ture								
0x40	Die Temperature Configuration[7:0]	_	_	_	_	_	_	_	TEMP_ EN
0x41	Die Temperature Integer[7:0]				TEMP_	INT[7:0]			
0x42	Die Temperature Fraction[7:0]	_	_	_	_		TEMP_F	RAC[3:0]	
SHA256									
0xF0	SHA Command[7:0]				SHA_C	MD[7:0]			
0xF1	SHA Configuration[7:0]	_	_	_	_	_	_	SHA_EN	SHA_ START
Memory									
0xF2	Memory Control[7:0]	_	_	_	_	_	_	MEM_ WR_EN	BANK_ SEL
0xF3	Memory Index[7:0]				MEM_I	DX[7:0]			
0xF4	Memory Data[7:0]				MEM_D	ATA[7:0]			
Part ID									
0xFF	Part ID[7:0]				PART_	_ID[7:0]			

Interrupt Status 1 (0x00)

BIT	7	6	5	4	3	2	1	0
Field	A_FULL	DATA_RDY	ALC_OVF	PROX_INT	LED_ COMPB	DIE_TEMP_ RDY	VDD_OOR	PWR_RDY
Reset	0x0	0x0	0x0	0x0	0x0	0x0	0x0	0x0
Access Type	Read Only	Read Only	Read Only	Read Only				

A_FULL

This is a read-only bit. This bit is cleared when the Interrupt Status 1 Register is read. It is also cleared when FIFO_DATA register is read, if FIFO_STAT_CLR = 1.

VALUE	ENUMERATION	DECODE
0	OFF	Normal Operation
1	ON	Indicates that the FIFO buffer will overflow the threshold set by FIFO_A_FULL[6:0] on the next sample.

DATA_RDY

This is a read-only bit and it is cleared by reading the Interrupt Status 1 register (0x00). It is also cleared by reading the FIFO_DATA register if FIFO_STAT_CLR = 1.

VALUE	ENUMERATION	DECODE				
0	OFF	ormal Operation				
1	ON	This interrupt triggers when there is a new data in the FIFO.				

ALC_OVF

This is a read-only bit. The interrupt is cleared by reading the Interrupt Status 1 register (0x00).

VALUE	ENUMERATION	DECODE
0	OFF	Normal Operation
1	ON	This interrupt triggers when the ambient light cancellation function of the photodiode has reached its maximum limit due to overflow, and therefore, ambient light is affecting the output of the ADC.

PROX_INT

VALUE	ENUMERATION	DECODE
0	OFF	Normal Operation
1	ON	Indicates that the ADC reading of the LED configured in LEDC1 has crossed the proximity threshold. If PROX_INT_EN is 0, then the prox mode is disabled and the exposure sequence configured in LED Sequence Control Registers begins immediately. This bit is cleared when the Interrupt Status 1 Register is read.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

LED_COMPB

LED is not compliant. At the end of each sample, if the LED driver is not compliant, LED_COMPB interrupt is asserted if LED_COMPB_EN is set to 1. It is a read-only bit and is cleared when the status register is read.

VALUE	ENUMERATION	DECODE
0	COMPLIANT	LED driver is compliant
1	NOT_COMPLIANT	LED driver is not compliant

DIE_TEMP_RDY

This is a read-only bit and is automatically cleared when the temperature data is read, or when the Interrupt Status 1 Register is read.

VALUE	ENUMERATION	DECODE
0	OFF	Normal Operation
1	ON	Indicates that the TEMP ADC has finished it's current conversion.

VDD_OOR

This is a read-only bit. It is automatically cleared when the Interrupt Status 1 register is read.

The detection circuitry has a 10ms delay time, and will continue to trigger as long as the VDD_ANA is out of range.

VALUE	ENUMERATION	DECODE
0	OFF	Normal operation
1	ON	Indicates that VDD_ANA is greater than 2.05V or less than 1.65V.

PWR RDY

This is a read-only bit and indicates that VDD had gone below the UVLO threshold. This bit is not triggered by a soft reset. This bit is cleared when either Interrupt Status 1 Register is read, or by setting SHDN bit to 1.

VALUE	ENUMERATION	DECODE
0	OFF	Normal Operation
1	ON	Indicates that VBATT went below the UVLO threshold.

Interrupt Status 2 (0x01)

BIT	7	6	5	4	3	2	1	0
Field	_	_	-	_	-	-	_	SHA_DONE
Reset	_	-	-	-	-	-	-	0x0
Access Type	_	_	-	_	-	-	_	Read Only

SHA_DONE

SHA256 Authentication Done status bit is set to 1 when the authentication algorithm completes. This is a read-only bit and gets cleared when the Status Register is read.

VALUE	ENUMERATION	DECODE
0x0		SHA Authentication not done
0x1		SHA Authentication done

Interrupt Enable 1 (0x02)

BIT	7	6	5	4	3	2	1	0
Field	A_FULL_EN	DATA_ RDY_EN	ALC_OVF_ EN	PROX_INT_ EN	LED_ COMPB_EN	DIE_TEMP_ RDY_EN	VDD_OOR_ EN	-
Reset	0x0	0x0	0x0	0x0	0x0	0x0	0x0	_
Access Type	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	_

A_FULL_EN

VALUE	ENUMERATION	DECODE
0	OFF	A_FULL interrupt is disabled
1	ON	A_FULL interrupt in enabled

DATA_RDY_EN

VALUE	ENUMERATION	DECODE
0	OFF	DATA_RDY interrupt is disabled
1	ON	DATA_RDY interrupt is enabled.

ALC_OVF_EN

VALUE	ENUMERATION	DECODE
0	OFF	ALC_OVF interrupt is disabled
1	ON	ALC_OVF interrupt in enabled

PROX_INT_EN

When PROX_INT_EN is enabled, the exposure programmed in the LEDC1 Sequence Register is used for proximity detection. If the ADC reading for this exposure is below 2048 times the threshold programmed in PROX_INT_THRESH register, the device is in proximity mode. Otherwise, it is in normal mode.

When the device is in proximity mode, the sample rate used is 8Hz, and the device starts data acquisition in pilot mode, using only one exposure of the LED programmed in LEDC1 register, and the LED current programmed in PILOT_PA register.

When the device is in normal mode, the sample rate used is as defined under PPG_SR register, and the device starts data acquisition in normal mode, using all the exposures programmed in the LED Sequence registers and appropriate LED currents.

PROX_INT interrupt is asserted when the devices enters proximity mode or normal mode if PROX_INT_EN is programmed to 1.

VALUE	ENUMERATION	DECODE
0	OFF	Proximity mode and PROX_INT interrupt are disabled
1	ON	Proximity mode and PROX_INT interrupt are enabled

LED_COMPB_EN

VALUE	ENUMERATION	DECODE
0	DISABLE	LED_COMPB interrupt is disabled
1	ENABLE	LED_COMPB interrupt is enabled

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

DIE_TEMP_RDY_EN

VALUE	ENUMERATION	DECODE
0	OFF	DIE_TEMP_RDY interrupt is disabled
1	ON	DIE_TEMP_RDY interrupt is enabled

VDD_OOR_EN

VALUE	ENUMERATION	DECODE
0	OFF	Disables the VDD_OVR interrupt
1	ON	Enables the VDD_OVR interrupt

Interrupt Enable 2 (0x03)

BIT	7	6	5	4	3	2	1	0
Field	-	_	-	-	-	-	-	SHA_ DONE_EN
Reset	_	_	_	_	_	-	_	0x0
Access Type	-	_	_	_	-	-	-	Write, Read

SHA_DONE_EN

Enable SHA_DONE Interrupt

VALUE	ENUMERATION	DECODE
0x0		SHA_DONE interrupt disabled
0x1		SHA_DONE interrupt enabled

FIFO Write Pointer (0x04)

BIT	7	6	5	4	3	2	1	0	
Field	_		FIFO_WR_PTR[6:0]						
Reset	-		0x0						
Access Type	-	Read Only							

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

FIFO_WR_PTR

This points to the location where the next sample will be written. This pointer advances for each sample pushed on to the circular FIFO.

See FIFO Configuration for details.

FIFO Read Pointer (0x05)

BIT	7	6	5	4	3	2	1	0	
Field	_		FIFO_RD_PTR[6:0]						
Reset	_		0x0						
Access Type	_		Write, Read						

FIFO_RD_PTR

The FIFO Read Pointer points to the location from where the processor gets the next sample from the FIFO via the serial interface. This advances each time a sample is popped from the circular FIFO.

The processor may also write to this pointer after reading the samples. This allows rereading (or retrying) samples from the FIFO. However, writing to FIFO_RD_PTR may have adverse effects if it results in the FIFO being almost full.

Refer to FIFO Configuration for details.

Overflow Counter (0x06)

BIT	7	6	5	4	3	2	1	0	
Field	_		OVF_COUNTER[6:0]						
Reset	_		0x0						
Access Type	_		Read Only						

OVF_COUNTER

When FIFO is full, any new samples will result in new or old samples getting lost, depending on FIFO_RO. OVF_COUNTER counts the number of samples lost. It saturates at 0x7F.

Refer to FIFO Configuration for details.

FIFO Data Counter (0x07)

BIT	7	6	5	4	3	2	1	0	
Field		FIFO_DATA_COUNT[7:0]							
Reset		0x0							
Access Type		Read Only							

FIFO_DATA_COUNT

This is a read-only register that holds the number of items available in the FIFO for the host to read. This increments when a new item is pushed to the FIFO and decrements when the host reads an item from the FIFO.

Refer to FIFO Configuration for details.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

FIFO Data Register (0x08)

BIT	7	6	5	4	3	2	1	0	
Field		FIFO_DATA[7:0]							
Reset		0x0							
Access Type		Read Only							

FIFO_DATA

This is a read-only register and is used to get data from the FIFO. Refer to FIFO Configuration for details.

FIFO Configuration 1 (0x09)

BIT	7	6	5	4	3	2	1	0	
Field	_		FIFO_A_FULL[6:0]						
Reset	_		0x3F						
Access Type	-		Write, Read						

FIFO_A_FULL

These bits indicate how many new samples can be written to the FIFO before the interrupt is asserted. For example, if set to 0xF, the interrupt triggers when there are 15 empty spaces left (113 entries), and so on.

Refer to FIFO Configuration for details.

FIFO_A_FULL<6:0>	FREE SPACE BEFORE INTERRUPT	# OF SAMPLES IN FIFO
0	0	128
1	1	127
2	2	126
3	3	125
126	126	2
127	127	1

FIFO Configuration 2 (0x0A)

BIT	7	6	5	4	3	2	1	0
Field	-	-	_	FLUSH_ FIFO	FIFO_ STAT_CLR	A_FULL_ TYPE	FIFO_RO	1
Reset	-	_	_	0x0	0x0	0x0	0x0	-
Access Type	_	_	_	Write, Read	Write, Read	Write, Read	Write, Read	-

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

FLUSH_FIFO

When this bit is set to '1', the FIFO gets flushed, FIFO_WR_PTR and FIFO_RD_PTR are reset to zero and FIFO_DATA_COUNT becomes 0. The contents of the FIFO are lost.

FIFO_FLUSH is a self-clearing bit.

Refer to FIFO Configuration for details.

FIFO STAT CLR

This defines whether the A-FULL interrupt should get cleared by FIFO_DATA register read.

Refer to FIFO Configuration for details.

VALUE	ENUMERATION	DECODE
0	RD_DATA_NOCLR	A_FULL and DATA_RDY interrupts do not get cleared by FIFO_DATA register read. They get cleared by status register read.
1	RD_DATA_CLR	A_FULL and DATA_RDY interrupts get cleared by FIFO_DATA register read or status register read.

A_FULL_TYPE

This defines the behavior of the A_FULL interrupt.

VALUE	ENUMERATION	DECODE					
0	AFULL_RPT	A_FULL interrupt gets asserted when the a_full condition is detected. It is cleared by status register read, but re-asserts for every sample if the a_full condition persists.					
1	AFULL_ONCE	A_FULL interrupt gets asserted only when the a_full condition is detected. The interrupt gets cleared on status register read, and does not re-assert for every sample until a new a-full condition is detected.					

FIFO_RO

Push enable when FIFO is full:

This bit controls the behavior of the FIFO when the FIFO becomes completely filled with data.

Push to FIFO is enabled when FIFO is full if FIFO_RO = 1 and old samples are lost. Both FIFO_WR_PTR increments for each sample after the FIFO is full. FIFO_RD_PTR also increments for each sample pushed to the FIFO.

Push to FIFO is disabled when FIFO is full if FIFO_RO = 0 and new samples are lost. FIFO_WR_PTR does not increment for each sample after the FIFO is full.

When the device is in PROX mode, push to FIFO is enabled independent of FIFO RO setting.

Refer to FIFO Configuration for details.

VALUE	ENUMERATION	DECODE				
0	OFF	he FIFO stops on full.				
1	ON	The FIFO automatically rolls over on full.				

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

System Control (0x0D)

BIT	7	6	5	4	3	2	1	0
Field	_	_	_	_	SINGLE_PPG	LP_MODE	SHDN	RESET
Reset	_	_	_	_	0x0	0x0	0x0	0x0
Access Type	_	_	_	_	Write, Read	Write, Read	Write, Read	Write, Read

SINGLE_PPG

In signal PP devices, this bit is ignored. In dual PPG devices, if this bit is 0, use two PPG channels; otherwise, use only PPG1 channel.

VALUE	ENUMERATION	DECODE				
0x0	DUAL_PPG	Both PPG channels are enabled				
0x1	SINGLE_PPG	Only PPG1 channel is enabled				

LP_MODE

In low power mode, the sensor can be dynamically powered down between samples to conserve power. This dynamic power down mode option only supports samples rates of 256sps and below.

VALUE	ENUMERATION	DECODE
0	OFF	Dynamic power down is disabled.
1	ON	Dynamic power down is enabled. The device automatically enters low power mode between samples for samples rates 256sps and below. This mode is not available for higher sample rates.

SHDN

The part can be put into a power-save mode by setting this bit to one. While in power-save mode, all configuration registers retain their values, and write/read operations function as normal. All interrupts are cleared to zero in this mode.

VA	LUE	ENUMERATION	DECODE
	0	OFF	The part is in normal operation. No action taken.
	1	ON	The part can be put into a power-save mode by writing a '1' to this bit. While in this mode all configuration registers remain accessible and retain their data. ADC conversion data contained in the registers are previous values. Writeable registers also remain accessible in shutdown. All interrupts are cleared. In this mode the oscillator is shutdown and the part draws minimum current. If this bit is asserted during an active conversion then the conversion is aborted.

RESET

When this bit is set, the part undergoes a forced power-on-reset sequence. All configuration, threshold, and data registers including distributed registers are reset to their power-on-state. This bit then automatically becomes '0' after the reset sequence is completed.

VALUE	ENUMERATION	DECODE
0	OFF	The part is in normal operation. No action taken.
1	ON	The part undergoes a forced power-on-reset sequence. All configuration, threshold and data registers including distributed registers are reset to their power-on-state. This bit then automatically becomes '0' after the reset sequence is completed.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

PPG Sync Control (0x10)

BIT	7	6	5	4	3	2	1	0
Field	TIME_ STAMP_EN	-	-	SW_FORCE_ SYNC	GPIO_CTRL[3:0]			
Reset	0x0	-	-	0x0	0x0			
Access Type	Write, Read	_	_	Write, Read	Write, Read			

TIME_STAMP_EN

Enable pushing TIME STAMP to FIFO. Refer to FIFO Configuration for details.

VALUE	ENUMERATION	DECODE		
0x0 DISABLE TIME_STAMP is not pushed to FIFO				
0x1	ENABLE	TIME_STAMP is pushed to FIFO for a block of eight samples.		

SW FORCE SYNC

Writing a 1 to this bit, aborts current sample and starts a new sample. This is a self clearing bit.

GPIO_CTRL

The table below shows how the two GPIO ports are control for different modes of operation.

When two devices are configured to work as master-slave device pairs, they have to be configured identical for the following configuration register fields:

- PPG_SR
- PPG TINT
- SMP_AVE
- TIME STAMP EN
- FIFO A FULL
- FIFO_ROLLS_ON_FULL

Number of LED Sequence Registers (LEDC1 to LEDC6) programmed should be same in both the devices. In Exposure Trigger mode, if Ambient is programmed in one of the registers, it needs to be in the same LEDCx register in both the devices

GPIO_CTRL register for both the devices should be programmed to be either Sample Trigger or Exposure Trigger. It is also important to configure the Slave first and then the Master.

DATA_RDY or A_FULL interrupt should be enabled only on the Master. When interrupt is asserted read the Master first and then the Slave. Read same number of items from both devices.

Refer to GPIO Configuration for details.

GPIO_CTRL [3:0]	GPIO1 FUNCTION	GPIO2 FUNCTION	COMMENT				
0000	Tristate or Mux Control	Disabled	GPIO1 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO1 will be low during exposures on LED4, LED5, or LED6, otherwise it will be high. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO1 will be tristate unless externally pulled up. GPIO2 is disabled. Sample and exposure timing is controlled by the internal 32768Hz oscillator.				
0001	Tristate or Mux Control	Input 32768Hz or 32000Hz Clock Input	or LED6, otherwise it will be high. If LEDCn[3:0] state A, B, or C is not enabled in the				

GPIO_CTRL [3:0]	GPIO1 FUNCTION	GPIO2 FUNCTION	COMMENT
0010	Input Sample Trigger	Tristate or Mux Control	GPIO1 is defined as a sample trigger input (Slave). This input can come from an external source or from another MAX86140/MAX86141 in master sample mode. GPIO2 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO2 will be low during exposures on LED4, LED5, or LED6, otherwise it will be high. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO2 will be tristate unless externally pulled up. Exposure timing is controlled by internal oscillator.
0011	Input Sample Trigger	Input 32768Hz or 32000Hz Clock Input	GPIO1 is defined as a sample trigger input (Slave). This input can come from an external source or from another MAX86140/MAX86141 in master sample mode. GPIO2 is an input 32768/32000Hz clock input. Exposure timing is controlled by GPIO2 clock input.
0100	Active Output Master Sample Output	Tristate or Mux Control	GPIO1 is defined as a master sample output. The GPIO1 output can be used to trigger a second sensor. When used with a second MAX86140/MAX86141 set to slave sample mode, the master sample timing will drive slave sample time. GPIO2 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO2 will be low during exposures on LED4, LED5 or LED6, otherwise it will be high. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO2 will be tristate unless externally pulled up. Sample and exposure timing is controlled by internal oscillator.
0101	Active Output Master Sample Output	32768/ 32000Hz	GPIO1 is defined as a master sample output. The GPIO1 output can be used to trigger and second senor. When used with a second MAX86140/MAX86141 set to slave sample mode, the master sample timing will drive slave sample time. GPIO2 is an input 32768/32000Hz. Exposure timing is controlled by GPIO2 clock input.
0110	Input Exposure Trigger	Tristate or Mux Control	GPIO1 is defined as an exposure trigger input (Slave). This input can come from an external source or from another MAX86140/MAX86141 in master sample mode. Both sample and exposure timing is controlled by the GPIO1 input. GPIO2 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO2 will be low during exposures on LED4, LED5, or LED6, otherwise it will be high. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO2 will be tristate unless externally pulled up.
0111	Active Output Master Expo- sure Output	Tristate or Mux Control	GPIO1 is defined as a master sample output. The GPIO1 output can be used to trigger and second sensor. When used with a second MAX86140/MAX86141 set to slave exposure mode, the master exposure timing will drive slave exposure time. GPIO2 will be active if any of the LEDCn[3:0] states A, B, or C are enabled in the exposure sequence. In this case, GPIO2 will be low during exposures on LED4, LED5 or LED6, otherwise it will be high. If LEDCn[3:0] state A, B, or C is not enabled in the exposure sequence, GPIO2 will be tristate unless externally pulled up. Sample and exposure time is controlled internally
1000	Active Output Master Expo- sure Output	32768/ 32000Hz	GPIO1 is defined as a master sample output. The GPIO1 output can be used to trigger second sensor. When used with a second MAX86140/MAX86141 set to slave exposure mode, the master exposure timing will drive slave exposure time. GPIO2 is an input 32768/32000Hz. Sample and exposure timing is controlled by GPIO2 clock input.
1001	Input HW_ FORCE_ SYNC	or 32000Hz	GPIO1 is defined as a start of sample sync input. The falling edge of GPIO1 causes the present sample sequence to be terminated and reinitiated on the next rising edge of GPIO2 input. GPIO2 is an input 32768/32000Hz. Sample and exposure timing is controlled by GPIO2 clock input.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

PPG Configuration 1 (0x11)

BIT	7	6	5	4	3	2	1	0		
Field	ALC_DIS- ABLE	ADD_OFF- SET	PPG2_ADC_RGE[1:0]		PPG1_ADC_RGE[1:0]		PPG_TINT[1:0]			
Reset	0x0	0	0x0		0x0		0x3			
Access Type	Write, Read	Write, Read	Write,	Read	Write, Read		Write, Read			

ALC_DISABLE

VALUE	ENUMERATION	DECODE
0	OFF	ALC is enabled
1	ON	ALC is disabled

ADD_OFFSET

ADD_OFFSET is an option designed for dark current measurement. By adding offset to the PPG Data would allow dark current measurement without clipping the signal below 0.

When ADD_OFFSET is set to 1, an offset is added to the PPG Data to be able to measure the dark current. The offset is 8192 counts if PPG_SR is programmed for single pulse mode. The offset is 4096 counts if PPG_SR is programmed for dual pulse mode.

PPG2_ADC_RGE

These bits set the ADC range of the SPO₂ sensor, as shown in the table below.

PPG_ADC_RGE<1:0>	LSB [pA]	FULL SCALE [nA]
00	78125	4096
01	15.625	8192
10	31.25	16384
11	62.5	32768

PPG1_ADC_RGE

These bits set the ADC range of the SPO₂ sensor, as shown in the table below.

PPG_ADC_RGE<1:0>	LSB [pA]	FULL SCALE [nA]
00	7,8125	4096
01	15.625	8192
10	31.25	16384
11	62.5	32768

PPG_TINT

These bits set the pulse width of the LED drivers and the integration time of PPG ADC as shown in the table below. $t_{PW} = t_{TINT} + t_{LED} \ SETLNG + 0.5 \mu s$

PPG_TINT<1:0>	TPW, PULSE WIDTH [µS]	TTINT, INTEGRATION TIME [µS]	RESOLUTION BITS
00	21.3	14.8	19
01	35.9	29.4	19
10	65.2	58.7	19
11	123.8	117.3	19

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

PPG Configuration 2 (0x12)

BIT	7	6	5	4	3	2	1	0
Field	PPG_SR[4:0]						SMP_AVE[2:0]	
Reset	0x11						0x0	
Access Type		Write, Read					Write, Read	

PPG_SR

These bits set the effective sampling rate of the PPG sensor as shown in the table below. The default on-chip sampling clock frequency is 32768Hz.

Note: If a sample rate is set that can not be supported by the selected pulse width and number of exposures per sample, then the highest available sample rate will be automatically set. The user can read back this register to confirm the sample rate.

SAMPLING CLOCK FREQUENCY	32768HZ	32000HZ	
PPG_SR<4:0>	Samples per Second	Samples per Second	Pulses Per Sample, N
0x00	24.995	24.409	1
0x01	50.027	48.855	1
0x02	84.021	82.051	1
0x03	99.902	97.561	1
0x04	199,805	195.122	1
0x05	399.610	390.244	1
0x06	24.995	24.409	2
0x07	50.027	48.855	2
0x08	84.021	82.051	2
0x09	99.902	97.561	2
0x0A	8.000	7.8125	1
0x0B	16.000	15.625	1
0x0C	32.000	31.250	1
0x0D	64.000	62.500	1
0x0E	128.000	125.000	1
0x0F	256.000	250.000	1
0x10	512.000	500.000	1
0x11	1024.000	1000.000	1
0x12	2048.000	2000.000	1
0x13	4096.000	4000.000	1
0x14-1F	Reserved	Reserved	Reserved

Maximum Sample rates (sps) supported for all the Integration Time (PPG_TINT) and Number of Exposures:

NUMBER OF EXPO- SURE PER SAMPLE	PPG_TINT = 0 (14.8µS)	PPG_TINT = 1 (29.4μS)	PPG_TINT = 2 (58.7μS)	PPG_TINT = 3 (117.3μS)
1 Exposure, N = 1	4096	2048	2048	1024
2 Exposures, N = 1	2048	1024	1024	512
3 Exposures, N = 1	1024	1024	512	512
4 Exposures, N = 1	1024	512	512	400
5 Exposures, N = 1	512	512	512	256
6 Exposures, N = 1	512	512	400	256
1 Exposure, N = 2	100	100	100	100
2 Exposures, N = 2	100	84	84	84
3 Exposures, N = 2	50	50	50	50
4 Exposures, N = 2	25	25	25	25
5 Exposures, N = 2	25	25	25	25
6 Exposures, N = 2	25	25	25	25

SMP_AVE

To reduce the amount of data throughput, adjacent samples (in each individual channel) can be averaged and decimated on the chip by setting this register.

These bits set the number of samples that are averaged on chip before being written to the FIFO.

SMP_AVE[2:0]	SAMPLE AVERAGE
000	1 (no averaging)
001	2
010	4
011	8
100	16
101	32
110	64
111	128

When BURST_EN is 1, SMP_AVE defines the number of conversions per burst. Depending on the BURST_RATE programmed and the PPG_SR used, it may not be possible to accommodate some of SMP_AVE values. In that case, SMP_AVE will take the highest value that can be accommodated. If SMP_AVE = 0 cannot be accommodated, burst mode is disabled.

Note: PPG_SR itself depends on Number of conversions per sample (LEDC1 to LEDC6) and the LED Integration time (PPG_TINT).

The following table shows the maximum SMP_AVE allowed for various configurations of BURST_RATE and PPG_SR:

PPG_SR USED	BURST_RATE = 0 (8HZ)	BURST_RATE = 1 (32HZ)	BURST_RATE = 2 (84HZ)	BURST_RATE = 3 (256HZ)
0 (25Hz, N = 1)	1	DIS	DIS	DIS
1 (50Hz, N = 1)	2	0	DIS	DIS
2 (84Hz, N = 1)	3	1	DIS	DIS
3 (100Hz, N = 1)	3	1	DIS	DIS
4 (200Hz, N = 1)	4	2	0	DIS
5 (400Hz, N = 1)	5	3	1	DIS
6 (25Hz, N = 2)	1	DIS	DIS	DIS
7 (50Hz, N = 2)	2	0	DIS	DIS
8 (84Hz, N = 2)	3	1	DIS	DIS
9 (100Hz, N = 2)	3	1	DIS	DIS
A (8Hz, N = 1)	DIS	DIS	DIS	DIS
B (16Hz, N = 1)	0	DIS	DIS	DIS
C (32Hz, N = 1)	1	DIS	DIS	DIS
D (64Hz, N = 1)	2	0	DIS	DIS
E (128Hz, N = 1)	3	1	0	DIS
F (256Hz, N = 1)	4	2	1	DIS
10 (512Hz, N = 1)	5	3	2	DIS
11 (1024Hz, N = 1)	6	4	3	0
12 (2048Hz, N = 1)	7	5	4	1
13 (4096Hz, N = 1)	7	6	5	2

PPG Configuration 3 (0x13)

BIT	7	6	5	4	3	2	1	0
Field	LED_SE1	ΓLNG[1:0]	DIG_FILT_ SEL	-	-	BURST_F	RATE[1:0]	BURST_EN
Reset	0)	x1	0x0	_	_	0:	(0	0x0
Access Type	Write,	Read	Write, Read	_	_	Write,	Read	Write, Read

LED_SETLNG

Delay from rising-edge of LED to start of ADC integration. This allows for the LED current to settle before the start of ADC integration.

TLED_SETLNG, LED_SETLNG<1:0>	DELAY (μS)
00	4.0
01	6.0 (default)
10	8.0
11	12.0

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

DIG_FILT_SEL

Select digital filter type.

VALUE	ENUMERATION	DECODE
0x0		Use CDM
0x1		Use FDM

BURST_RATE

VALUE	ENUMERATION	DECODE
0x0		8Hz
0x1		32Hz
0x2		84Hz
0x3		256Hz

BURST_EN

When Burst Mode is disabled, PPG data conversions are continuous at the sample rate defined by PPG SR register,

When Burst mode is enabled, a burst of PPG data conversions occur at the sample rate defined by PPG_SR register. Number of conversion in the burst is defined by the SMP_AVE register. Average data from the burst of data conversions is pushed to the FIFO. The burst repeats at the rate defined in BURST_RATE[2:0] register. If the number of conversions cannot be accommodated, the device will use the next highest number of conversions.

If the effective PPG_SR is too slow to accommodate the burst rate programmed, BURST_EN is automatically set to 0, and the device runs in continuous mode.

Note: Each data conversion cycle is a sequence of conversions defined in the LEDC1 to LEDC6 registers.

VALUE	ENUMERATION	DECODE			
0x0		Disable Burst Conversion mode			
0x1		Enable Burst Conversion Mode			

Prox Interrupt Threshold (0x14)

BIT	7	6	5	4	3	2	1	0
Field	PROX_INT_THRESH[7:0]							
Reset	0x00							
Access Type	Write, Read							

PROX_INT_THRESH

This register sets the LED1 ADC count that will trigger the transition between proximity mode and normal mode. The threshold is defined as the 8 MSB bits of the ADC count. For example, if PROX_INT_THRESH[7:0] = 0x01, then an ADC value of 2048 (decimal) or higher triggers the PROX interrupt. If PROX_INT_THRESH[7:0] = 0xFF, then only a saturated ADC triggers the interrupt.

See the *Proximity Mode Function* section in the detailed description for more details on the operation of proximity mode.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Photo Diode Bias (0x15)

BIT	7	6	5	4	3	2	1	0
Field	_	PDBIAS2[2:0]			_	PDBIAS1[2:0]		
Reset	-	0x0			-		0x0	
Access Type	_	Write, Read			_		Write, Read	

PDBIAS2

See *Photo Diode Biasing* for more information.

PDBIAS2<2:0>	PHOTO DIODE CAPACITANCE
0x001	0pF to 65pF
0x101	65pF to 130pF
0x110	130pF to 260pF
0x111	260pF to 520pF
All other values	Not recommended

PDBIAS1

See *Photo Diode Biasing* for more information.

PDBIAS1<2:0>	PHOTO DIODE CAPACITANCE
0x001	0pF to 65pF
0x101	65pF to 130pF
0x110	130pF to 260pF
0x111	260pF to 520pF
All other values	Not recommended

Picket Fence (0x16)

BIT	7	6	5	4	3	2	1	0
Field	PF_EN- ABLE	PF_ORDER	IIR_TC[1:0]		IIR_INIT_VALUE[1:0]		THRESHOLD_SIGMA_ MULT[1:0]	
Reset	0x0	0x1	0x00		0x	00	0x	00
Access Type	Write, Read	Write, Read	Write, Read		Write, Read		Write, Read	

PF_ENABLE

Refer to Picket Fence Detect-and-Replace Function for details.

PF_ENABLE set to 1 enabled the picket-fence detect and replace method.

VALUE	ENUMERATION	DECODE				
0	OFF	Disable (default)				
1	ON	Enable Detect and Replace				

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

PF_ORDER

PF_ORDER determines which prediction method is used: the last sample or a linear fit to the previous four samples.

Refer to Picket Fence Detect-and-Replace Function for details.

VALUE	ENUMERATION	DECODE				
0	OFF	ast Sample (1 point)				
1	ON	Fit 4 points to a line for prediction (default)				

IIR_TC

IIR_TC<1:0> determines the IIR filter bandwidth where the lowest setting has the narrowest bandwidth of a first-order filter.

Refer to Picket Fence Detect-and-Replace Function for details.

IIR_TC<1:0>	COEFFICIENT	SAMPLES TO 90%
00	1/64	146
01	1/32	72
10	1/16	35
11	1/8	17

IIR_INIT_VALUE

This IIR filter estimates the true standard deviation between the actual and predicted sample and tracks the ADC Range setting.

Refer to Picket Fence Detect-and-Replace Function for details.

IIR_INIT_VALUE<1:0>	CODE
00	64
01	48
10	32
11	24

THRESHOLD_SIGMA_MULT

GAIN resulting from the SIGMA_MULT<1:0> setting determines the number of standard deviations of the delta between the actual and predicted sample beyond which a picket-fence event is triggered.

Refer to Picket Fence Detect-and-Replace Function for details.

THRESHOLD_SIGMA_MULT<1:0>	GAIN
00	4
01	8
10	16
11	32

LED Sequence Register 1 (0x20)

BIT	7	6	5	4	3	2	1	0	
Field		LEDC	2[3:0]		LEDC1[3:0]				
Reset		0)	(0		0x0				
Access Type		Write,	Read			Write,	Read		

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

LEDC2

These bits set the data type for LED Sequence 2 of the FIFO.

See FIFO Configuration for more information.

LEDC1

These bits set the data type for LED Sequence 1 of the FIFO.

See *FIFO Configuration* for more information.

LED Sequence Register 2 (0x21)

BIT	7	6	5	4	3	2	1	0	
Field		LEDC	4[3:0]		LEDC3[3:0]				
Reset		0>	(0		0x0				
Access Type		Write,	Read			Write,	Read		

LEDC4

These bits set the data type for LED Sequence 4 of the FIFO.

See FIFO Configuration for more information.

LEDC3

These bits set the data type for LED Sequence 3 of the FIFO.

See FIFO Configuration for more information.

LED Sequence Register 3 (0x22)

BIT	7	6	5	4	3	2	1	0	
Field		LEDC	6[3:0]		LEDC5[3:0]				
Reset		0)	(0		0x0				
Access Type		Write,	Read			Write,	Read		

LEDC6

These bits set the data type for LED Sequence 6 of the FIFO.

See FIFO Configuration for more information.

LEDC5

These bits set the data type for LED Sequence 5 of the FIFO.

See FIFO Configuration for more information.

LED1 PA (0x23)

BIT	7	6	5	4	3	2	1	0			
Field		LED1_DRV[7:0]									
Reset		0x00									
Access Type				Write,	Read						

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

LED1_DRV

These bits set the nominal drive current of LED 1, as shown in the table below.

LEDX_RGE<1:0>	00	01	10	11
LEDx_PA<7:0>	LED Current [mA]	LED Current [mA]	LED Current [mA]	LED Current [mA]
00000000	0.00	0.00	0.00	0.00
0000001	0.12	0.24	0.36	0.48
0000010	0.24	0.48	0.73	0.97
00000011	0.36	0.73	1.09	1.45
11111100	30.6	61.3	91.9	122.5
11111101	30.8	61.5	92.3	123.0
11111110	30.9	61.8	92.6	123.5
11111111	31.0	62.0	93.0	124.0
LSB	0.12	0.24	0.36	0.48

LED2 PA (0x24)

BIT	7	6	5	4	3	2	1	0			
Field		LED2_DRV[7:0]									
Reset		0x00									
Access Type				Write,	Read						

LED2_DRV

These bits set the nominal drive current of LED 2. See LED1_DRV for description.

LED3_PA (0x25)

BIT	7	6	5	4	3	2	1	0			
Field		LED3_DRV[7:0]									
Reset		0x00									
Access Type				Write,	Read						

LED3_DRV

These bits set the nominal drive current of LED 2. See LED1_DRV for description.

LED4 PA (0x26)

BIT	7	6	5	4	3	2	1	0			
Field		LED4_DRV[7:0]									
Reset		0x00									
Access Type				Write,	Read						

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

LED4_DRV

These bits set the nominal drive current of LED 4. See LED1_DRV for description.

LED5 PA (0x27)

BIT	7	6	5	4	3	2	1	0			
Field		LED5_DRV[7:0]									
Reset		0x00									
Access Type		Write, Read									

LED5 DRV

These bits set the nominal drive current of LED 5. See LED1_DRV for description.

LED6 PA (0x28)

BIT	7	6	5	4	3	2	1	0			
Field		LED6_DRV[7:0]									
Reset		0x00									
Access Type		Write, Read									

LED6_DRV

These bits set the nominal drive current of LED 6. See LED1_DRV for description.

LED PILOT PA (0x29)

BIT	7	6	5	4	3	2	1	0		
Field	PILOT_PA[7:0]									
Reset		0x00								
Access Type		Write, Read								

PILOT_PA

The purpose of PILOT_PA<7:0> is to set the LED power during the PROX mode, as well as in Multi-LED mode. These bits set the nominal drive current for the pilot mode as shown in the table below.

When LED x is used, the respective LEDx_RGE<1:0> is used to control the range of the LED driver in conjunction with PILOT_PA<7:0>. For instance, if LED1 is used in the PILOT mode, then, LED1_RGE<1:0> together with PILOT_PA<7:0> will be used to set the LED1 current.

LEDX_RGE<1:0>	00	01	10	11
PILOT_PA<7:0>	LED Current [mA]	LED Current [mA]	LED Current [mA]	LED Current [mA]
00000000	0.00	0.00	0.00	0.00
0000001	0.12	0.24	0.36	0.48
0000010	0.24	0.48	0.73	0.97
00000011	0.36	0.73	1.09	1.45
11111100	30.6	61.3	91.9	122.5
11111101	30.8	61.5	92.3	123.0
11111110	30.9	61.8	92.6	123.5
11111111	31.0	62.0	93.0	124.0
LSB	0.12	0.24	0.36	0.48

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

LED Range 1 (0x2A)

BIT	7	6	5	4	3	2	1	0
Field	-	_	LED3_RGE[1:0]		LED2_RGE[1:0]		LED1_RGE[1:0]	
Reset	-	_	0x00		0x00		0x00	
Access Type	_	_	Write, Read		Write, Read		Write, Read	

LED3_RGE

Range selection of the LED current. Refer to LED1_PA[7:0] for more details.

LEDX_RGE<1:0> (X = 1 TO 6)	LED CURRENT[mA]
00	31
01	62
10	93
11	124

LED2_RGE

Range selection of the LED current. Refer to LED3_RGE[1:0] for more details.

LED1_RGE

Range selection of the LED current. Refer to LED3_RGE[1:0] for more details.

LED Range 2 (0x2B)

BIT	7	6	5	4	3	2	1	0
Field	_	_	LED6_RGE[1:0]		LED5_RGE[1:0]		LED4_RGE[1:0]	
Reset	_	_	0x00		0x00		0x00	
Access Type	_	-	Write, Read		Write, Read		Write, Read	

LED6_RGE

Range selection of the LED current. Refer to LED3_RGE[1:0] for more details.

LED5_RGE

Range selection of the LED current. Refer to LED3_RGE[1:0] for more details.

LED4_RGE

Range selection of the LED current. Refer to LED3_RGE[1:0] for more details.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

S1 HI RES DAC1 (0x2C)

BIT	7	6	5	4	3	2	1	0	
Field	S1_HRES_ DAC1_OVR	ı	S1_HRES_DAC1[5:0]						
Reset	0x0	_			0x	:00			
Access Type	Write, Read	_	Write, Read						

S1_HRES_DAC1_OVR

VALUE	ENUMERATION	DECODE
0	OFF	The high resolution DAC for PPG1 is controlled by the chip.
1	ON	This allows the high-resolution DAC for PPG1 used in exposure 1 to be controlled by the software.

S1_HRES_DAC1

If S1_ HI_RES_DAC1_OVR = 1, then bits S1_HRES_DAC1<5:0> set the high-resolution DAC code used in PPG1 ADC. This allows the algorithm to control ADC subranging.

If S1_ HI_RES_DAC1_OVR = 0, then bits S1_HRES_DAC1<5:0> have no effect on the PPG1 ADC.

S2 HI RES DAC1 (0x2D)

<u></u>											
BIT	7	6	5	4	3	2	1	0			
Field	S2_HRES_ DAC1_OVR	ı	S2_HRES_DAC1[5:0]								
Reset	0x0	_	0x00								
Access Type	Write, Read	_	Write, Read								

S2_HRES_DAC1_OVR

VALUE	ENUMERATION	DECODE
0	OFF	The high resolution DAC for PPG1 is controlled by the chip.
1	ON	This allows the high-resolution DAC for PPG1 used in exposure 2 to be controlled by the software.

S2_HRES_DAC1

If S2_ HI_RES_DAC1_OVR = 1, then bits S2_HRES_DAC1<5:0> set the high-resolution DAC code used in PPG1 ADC. This allows the algorithm to control ADC subranging.

If S2_ HI_RES_DAC1_OVR = 0, then bits S2_HRES_DAC1<5:0> have no effect on the PPG1 ADC.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

S3 HI RES DAC1 (0x2E)

BIT	7	6	5	4	3	2	1	0	
Field	S3_HRES_ DAC1_OVR	-	S3_HRES_DAC1[5:0]						
Reset	0x0	_		0x0					
Access Type	Write, Read	_	Write, Read						

S3_HRES_DAC1_OVR

VALUE	ENUMERATION	DECODE
0x0	OFF	The high resolution DAC for PPG1 is controlled by the chip
0x1	ON	This allows the high-resolution DACfor PPG1 used in exposure 3 to be controlled by the software.

S3_HRES_DAC1

If S3_ HI_RES_DAC1_OVR = 1 then bits S3_HRES_DAC1<5:0> set the high-resolution DAC code used in PPG1 ADC. This allows the algorithm to control ADC subranging.

If S3_HI_RES_DAC1_OVR = 0 then bits S3_HRES_DAC1<5:0> have no effect on the PPG1 ADC.

S4 HI RES DAC1 (0x2F)

BIT	7	6	5	4	3	2	1	0		
Field	S4_HRES_ DAC1_OVR	-	S4_HRES_DAC1[5:0]							
Reset	0b0	_		0x0						
Access Type	Write, Read	_			Write,	Read				

S4_HRES_DAC1_OVR

VALUE	ENUMERATION	DECODE				
0x0	OFF	The high resolution DAC for PPG1 is controlled by the chip.				
0x1	ON	This allows the high-resolution DAC for PPG1 used in exposure 4 to be controlled by the software.				

S4_HRES_DAC1

If S4_ HI_RES_DAC1_OVR = 1 then bits S4_HRES_DAC1<5:0> set the high-resolution DAC code used in PPG1 ADC. This allows the algorithm to control ADC subranging.

If S4_ HI_RES_DAC1_OVR = 0 then bits S4_HRES_DAC1<5:0> have no effect on the PPG1 ADC.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

S5 HI RES DAC1 (0x30)

BIT	7	6	5	4	3	2	1	0		
Field	S5_HRES_ DAC1_OVR	-	S5_HRES_DAC1[5:0]							
Reset	0b0	_		0x0						
Access Type	Write, Read	_		-	Write,	Read				

S5_HRES_DAC1_OVR

VALUE	ENUMERATION	DECODE
0x0	OFF	The high-resolution DAC for PPG1 is controlled by the chip.
0x1	ON	This allows the high-resolution DAC for PPG1 used in exposure 5 to be controlled by the software.

S5_HRES_DAC1

If S5_ HI_RES_DAC1_OVR = 1, then bits S5_HRES_DAC1<5:0> set the high-resolution DAC code used in PPG1 ADC. This allows the algorithm to control ADC subranging.

If S5_ HI_RES_DAC1_OVR = 0, then bits S5_HRES_DAC1<5:0> have no effect on the PPG1 ADC.

S6 HI RES DAC1 (0x31)

BIT	7	6	5	4	3	2	1	0		
Field	S6_HRES_ DAC1_OVR	-	S6_HRES_DAC1[5:0]							
Reset	0b0	-		0x0						
Access Type	Write, Read	-			Write,	Read				

S6_HRES_DAC1_OVR

VALUE	ENUMERATION	DECODE
0x0	OFF	The high-resolution DAC for PPG1 is controlled by the chip.
0x1	ON	This allows the high-resolution DAC for PPG1 used in exposure 6 to be controlled by the software.

S6_HRES_DAC1

If S6_ HI_RES_DAC1_OVR = 1, then bits S6_HRES_DAC1<5:0> set the high-resolution DAC code used in PPG1 ADC. This allows the algorithm to control ADC subranging.

If S6_ HI_RES_DAC1_OVR = 0, then bits S6_HRES_DAC1<5:0> have no effect on the PPG1 ADC.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

S1_HI RES DAC2 (0x32)

BIT	7	6	5	4	3	2	1	0		
Field	S1_HRES_ DAC2_OVR	-	S1_HRES_DAC2[5:0]							
Reset	0x0	_		0x00						
Access Type	Write, Read	-			Write,	Read				

S1_HRES_DAC2_OVR

VALUE	ENUMERATION	DECODE
0	OFF	The high-resolution DAC for PPG2 is controlled by the chip.
1	ON	This allows the high-resolution DAC for PPG2 used in exposure 1 to be controlled by the software.

S1_HRES_DAC2

If S1_ HI_RES_DAC2_OVR = 1, then bits S1_HRES_DAC2<5:0> set the high-resolution DAC code used in PPG2 ADC. This allows the algorithm to control ADC subranging.

If S1_ HI_RES_DAC2_OVR = 0, then bits S1_HRES_DAC2<5:0> have no effect on the PPG2 ADC.

S2 HI RES DAC2 (0x33)

BIT	7	6	5	4	3	2	1	0		
Field	S2_HRES_ DAC2_OVR	ı	S2_HRES_DAC2[5:0]							
Reset	0x0	_		0x0						
Access Type	Write, Read	-			Write,	Read				

S2_HRES_DAC2_OVR

VALUE	ENUMERATION	DECODE
0	OFF	The high-resolution DAC for PPG2 is controlled by the chip.
1	ON	This allows the high-resolution DAC for PPG2 used in exposure 2 to be controlled by the software.

S2_HRES_DAC2

If S2_ HI_RES_DAC2_OVR = 1, then bits S2_HRES_DAC2<5:0> set the high-resolution DAC code used in PPG2 ADC. This allows the algorithm to control ADC subranging.

If S2_HI_RES_DAC2_OVR = 0, then bits S2_HRES_DAC2<5:0> have no effect on the PPG2 ADC.

S3 HI RES DAC2 (0x34)

BIT	7	6	5	4	3	2	1	0		
Field	S3_HRES_ DAC2_OVR	-	S3_HRES_DAC2[5:0]							
Reset	0b0	_		0x0						
Access Type	Write, Read	-			Write,	Read				

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

S3_HRES_DAC2_OVR

VALUE	ENUMERATION	DECODE
0	OFF	The high-resolution DAC for PPG2 is controlled by the chip.
1	ON	This allows the high-resolution DAC for PPG2 used in exposure 3 to be controlled by the software.

S3 HRES DAC2

If S3_ HI_RES_DAC2_OVR = 1, then bits S3_HRES_DAC2<5:0> set the high-resolution DAC code used in PPG2 ADC. This allows the algorithm to control ADC subranging.

If S3_ HI_RES_DAC2_OVR = 0 then bits S3_HRES_DAC2<5:0> have no effect on the PPG2 ADC.

S4 HI RES DAC2 (0x35)

BIT	7	6	5	4	3	2	1	0	
Field	S4_HRES_ DAC2_OVR	_		S4_HRES_DAC2[5:0]					
Reset	0b0	_		0x0					
Access Type	Write, Read	-			Write,	Read			

S4_HRES_DAC2_OVR

VALUE	ENUMERATION	DECODE				
0x0	OFF	The high-resolution DAC for PPG2 is controlled by the chip.				
0x1	ON	This allows the high-resolution DAC for PPG2 used in exposure 4 to be controlled by the software.				

S4 HRES DAC2

If S4_ HI_RES_DAC2_OVR = 1, then bits S4_HRES_DAC2<5:0> set the high resolution DAC code used in PPG2 ADC. This allows the algorithm to control ADC subranging.

If S4_ HI_RES_DAC2_OVR = 0, then bits S4_HRES_DAC2<5:0> have no effect on the PPG2 ADC.

S5 HI RES DAC2 (0x36)

BIT	7	6	5	4	3	2	1	0	
Field	S5_HRES_ DAC2_OVR	-		S5_HRES_DAC2[5:0]					
Reset	0b0	-		0x0					
Access Type	Write, Read	-			Write,	Read			

S5_HRES_DAC2_OVR

VALUE	ENUMERATION	DECODE
0x0	OFF	The high-resolution DAC for PPG2 is controlled by the chip.
0x1	ON	This allows the high-resolution DAC for PPG2 used in exposure 5 to be controlled by the software.

S5 HRES DAC2

If S5_ HI_RES_DAC2_OVR = 1, then bits S5_HRES_DAC2<5:0> set the high-resolution DAC code used in PPG2 ADC. This allows the algorithm to control ADC subranging.

If S5_ HI_RES_DAC2_OVR = 0, then bits S5_HRES_DAC2<5:0> have no effect on the PPG2 ADC.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

S6 HI RES DAC2 (0x37)

BIT	7	6	5	4	3	2	1	0	
Field	S6_HRES_ DAC2_OVR	_	S6_HRES_DAC2[5:0]						
Reset	0b0	_		0x0					
Access Type	Write, Read	_			Write,	Read			

S6_HRES_DAC2_OVR

VALUE	ENUMERATION	DECODE
0x0	OFF	The high-resolution DAC for PPG2 is controlled by the chip.
0x1	ON	This allows the high-resolution DAC for PPG2 used in exposure 6 to be controlled by the software.

S6_HRES_DAC2

If S6_ HI_RES_DAC_2OVR = 1, then bits S6_HRES_DAC2<5:0> set the high-resolution DAC code used in PPG2 ADC. This allows the algorithm to control ADC subranging.

If S6_ HI_RES_DAC2_OVR = 0, then bits S6_HRES_DAC2<5:0> have no effect on the PPG2 ADC.

Die Temperature Configuration (0x40)

BIT	7	6	5	4	3	2	1	0
Field	_	_	_	-	_	-	-	TEMP_EN
Reset	_	_	_	_	_	_	_	0x0
Access Type	_	_	_	_	_	_	_	Write, Read

TEMP_EN

The bit gets cleared after temperature measurement completes.

VALUE	ENUMERATION	DECODE
0x0		Idle
0x1		Start one temperature measurement

Die Temperature Integer (0x41)

BIT	7	6	5	4	3	2	1	0		
Field		TEMP_INT[7:0]								
Reset		0x0								
Access Type				Read	Only					

TEMP_INT

This register stores the integer temperature data in 2s complimnet form. $0x00 = 0^{\circ}C$, $0x7F = 127^{\circ}C$ and $0x80 = -128^{\circ}C$ **Note:** TINT and TFRAC registers should be read through the Serial Interface in burst mode, to ensure that they belong to the same sample.

Die Temperature Fraction (0x42)

BIT	7	6	5	4	3	2	1	0	
Field	_	_	_	_	TEMP_FRAC[3:0]				
Reset	_	_	_	_	0x0				
Access Type	-	-	-	-		Read	Only		

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

TEMP FRAC

This register store the fractional temperature data in increments of 0.0625° C. $0x1 = 0.0625^{\circ}$ C and $0xF = 0.9375^{\circ}$ C.

Note: TINT and TFRAC registers should be read through the Serial Interface in burst mode, to ensure that they belong to the same sample.

SHA Command (0xF0)

BIT	7	6	5	4	3	2	1	0		
Field		SHA_CMD[7:0]								
Reset		0x0								
Access Type				Write,	Read					

SHA_CMD

VALUE	ENUMERATION	DECODE
0X35		MAC WITH ROM ID
0X36		MAC WITHOUT ROM ID
OTHERS		RESERVED

SHA Configuration (0xF1)

BIT	7	6	5	4	3	2	1	0
Field	-	_	-	_	_	_	SHA_EN	SHA_ START
Reset	_	_	-	_	-	_	0x0	0x0
Access Type	_	_	_	_	_	_	Write, Read	Write, Read

SHA_EN

Authentication is performed using a FIPS 180-3 compliant SHA-256 one-way hash algorithm on a 512-bit message block. The message block consists of a 160-bit secret, a 160-bit challenge and 192 bits of constant data. Optionally, the 64-bit ROM ID replaces 64 of the 192 bits of constant data used in the hash operation. 16 bits out of the 160-bit secret and 16 bits of ROM ID are programmable—8 bits each in metal and 8 bits each in OTP bits.

The host and the MAX86140 both calculate the result based on a mutually known secret. The result of the hash operation is known as the message authentication code (MAC) or message digest. The MAC is returned by the MAX86140 for comparison with the host's MAC. Note that the secret is never transmitted on the bus and thus cannot be captured by observing bus traffic. Each authentication attempt is initiated by the host system by writing a 160-bit random challenge into the SHA memory address space 0x00h to 0x09h. The host then issues the compute MAC or compute MAC with ROM ID command. The MAC is computed per FIPS 180-3, and stored in address space 0x00h to 0x0Fh overwriting the challenge value.

Note that the results of the authentication attempt are determined by host verification. Operation of the MAX86140 is not affected by authentication success or failure.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Sequence of operation is as follows:

- Enable SHA_DONE Interrupt.
- Enable SHA_EN bit.
- Write 160-bit random challenge value to RAM using registers MEM_IDX and MEM_DATA.
- Write command, with ROM ID (0x35) or without ROM ID (0x36), to SHA_CMD register.
- Write 1 to SHA_START and 1 to SHA_EN bit.
- Wait for SHA_DONE interrupt.
- Read 256 MAC value from RAM using registers MEM_IDX and MEM_DATA.
- Compare MAC from MAX86140 wth Host's precalculated MAC.
- · Check PASS or FAIL.
- Disable SHA_EN bit (Write 0 to SHA_EN bit).

VALUE	ENUMERATION	DECODE				
0x0		Authentication is disabled				
0x1		Authentication is enabled				

SHA_START

The bit gets cleared after authentication completes. The valid command (0x35 or 0x36) should be written to the SHA_CMD register and challenge value should be written to the RAM by Host before writing 1 to this bit.

Memory Control (0xF2)

BIT	7	6	5	4	3	2	1	0
Field	-	-	-	-	-	-	MEM_WR_ EN	BANK_SEL
Reset	-	_	_	-	-	-	0x0	0x0
Access Type	_	_	_	_	_	_	Write, Read	Write, Read

MEM_WR_EN

Enable write access to Memory through SPI.

VALUE	ENUMERATION	DECODE
0x0		Writing to memory through SPI is disabled.
0x1		Writing to memory through SPI is enabled

BANK_SEL

Selects the memory bank for reading and writing.

Burst reading or writing the memory past 0xFF automatically increments BANK_SEL to 1.

VALUE	ENUMERATION	DECODE				
0x0		Select Bank 0, address 0x00 to 0xFF				
0x1		Select Bank 1, address 0x100 to 0x17f				

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Memory Index (0xF3)

BIT	7	6	5	4	3	2	1	0	
Field		MEM_IDX[7:0]							
Reset		0x0							
Access Type		Write, Read							

MEM IDX

Index to Memory for reading and writing. The memory is 384 bytes, and is divided into two banks - Bank 0 from 0x00 to 0xFF and Bank 1 is from 0x100 to 0x17F. The bank is selected by the BANK_SEL register bit. MEM_IDX is the starting address for burst writing to or reading from memory. Burst accessing the memory past 0xFF accesses Bank 1. The memory address saturates at 0x17F.

Memory Data (0xF4)

BIT	7	6	5	4	3	2	1	0	
Field		MEM_DATA[7:0]							
Reset		0x0							
Access Type		Write, Read, Dual							

MEM_DATA

Data to be written or data read from Memory

Reading this register does not automatically increment the register address. So burst reading this register read the same register over and over, but the address to the Memory autoincrements until BANK_SEL becomes 1 and MEM_IDX becomes 0x7F.

Part ID (0xFF)


BIT	7	6	5	4	3	2	1	0	
Field		PART_ID[7:0]							
Reset		0xXX							
Access Type		Read Only							

PART_ID

This register stores the part identifier for the chip.

PART_ID	MAX #	# OF PPG CHANNELS	
0x24	MAX86140	1	
0x25	MAX86141	2	

Typical Application Circuit

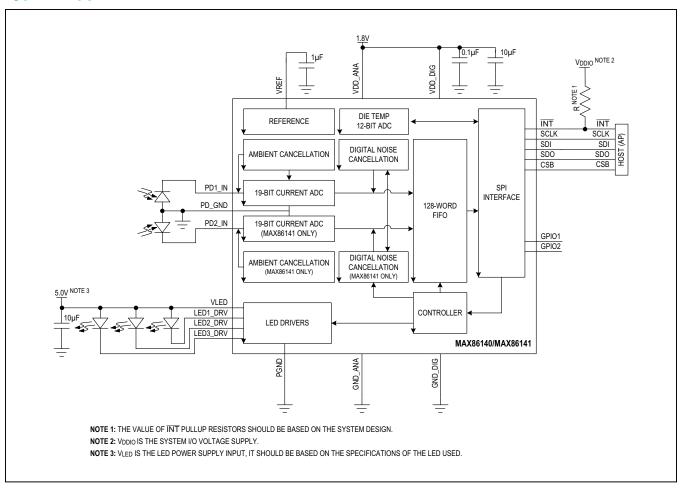

Ordering Information

PART NUMBER	TEMP RANGE	PIN-PACKAGE	CONFIGURATION
MAX86140ENP+	-40°C to +85°C	20-pin WLP, 2.048mm x 1.848mm, 5 x 4, 0.4mm ball pitch	Single-Channel Optical AFE
MAX86141ENP+	-40°C to +85°C	20-pin WLP, 2.048mm x 1.848mm, 5 x 4, 0.4mm ball pitch	Dual-Channel Optical AFE

⁺Denotes a lead(Pb)-free/RoHS-compliant package.

T = Tape and reel.

Best-in-Class Optical Pulse Oximeter and Heart-Rate Sensor for Wearable Health

Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	5/17	Initial release	_
1	8/17	Added MAX86141 part number to data sheet	1–88

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time. The parametric values (min and max limits) shown in the Electrical Characteristics table are guaranteed. Other parametric values quoted in this data sheet are provided for guidance.